

INSTALLATION GUIDE.

mountune

CLUBSPORT GEARSHIFT PADDLES MK4 FOCUS ST | FIESTA/KUGA/PUMA

- Flat-blade screwdriver
- T27 torx
- Trim tool

tools required:



Time
60 minutes Approx.

Step 1



Disconnect negative terminal from battery
(critical that this is performed first!)

Step 2



Remove the three, 7mm fixings.

Step 3



Use a trim tool to remove upper steering
column trim.

Step 4



Using a flat head screwdriver, push clips on
both sides to release airbag.

Step 5



Disconnect cable from airbag and remove - pull orange tab upwards to remove airbag assembly.

Step 6



Disconnect cables from buttons and remove trim from steering wheel (gentle force may be required).

Step 7



Disconnect paddle cable and remove T27 Torx fixing from both sides.

Step 8




Remove paddle assemblies from the steering wheel.

Step 9a / 9b / 9c




Push the pin out of the original paddle assembly.

Step 10

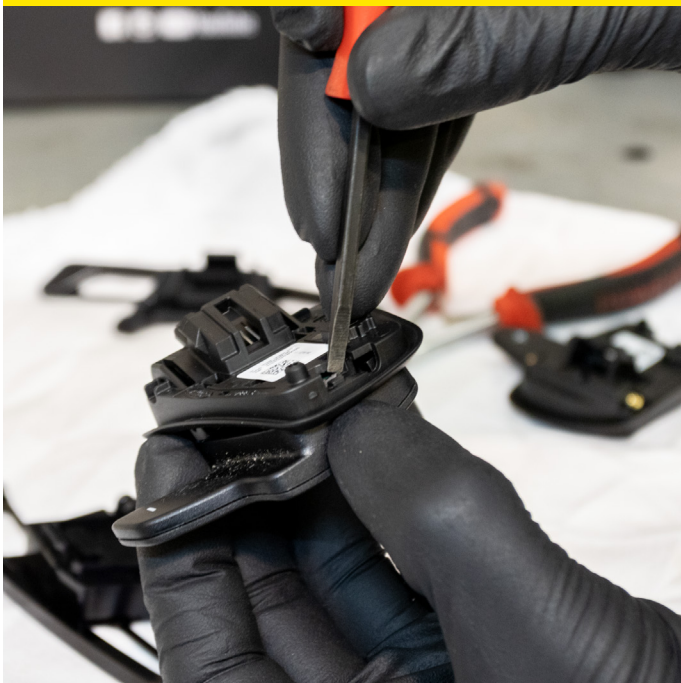

Using flat head screwdriver, push tab in to remove circuit assemblies from OE paddles.

Step 11

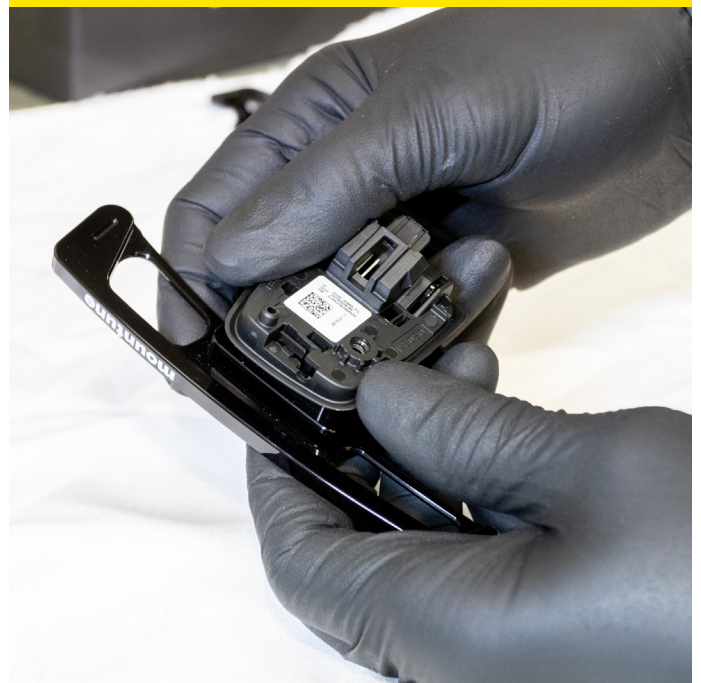

Install circuit assemblies to new paddles, ensuring paddle locks in to tab.

Step 12



Reinstall pin to each paddle.

Step 13a / 13b / 13c




Reattach paddles, fixings and cable connectors

Step 14



Reattach steering wheel trim (gentle force required).

Step 15

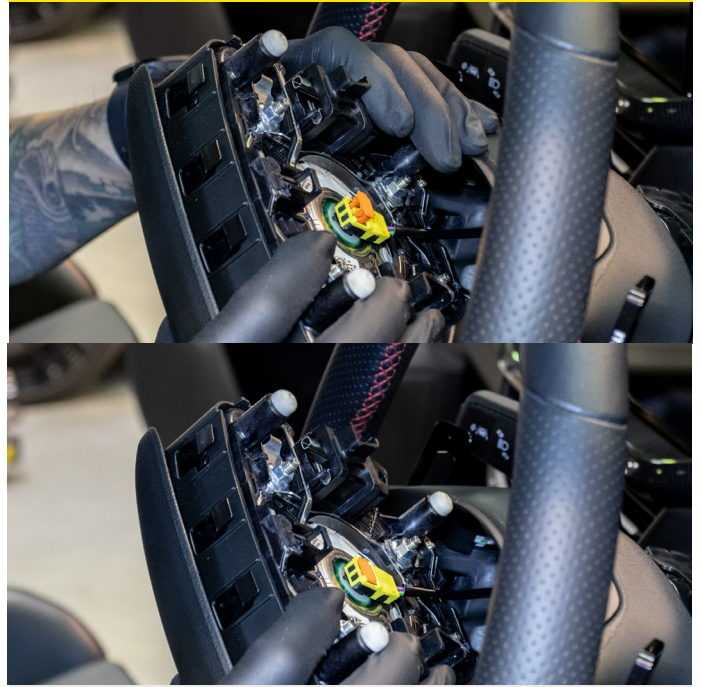

Reconnect air bag, orange connector needs to be pushed in otherwise it won't seat correctly.

Step 16



Reconnect battery and installation is complete (an error code is likely to appear but will clear after driving).