


Orion Window Assembly

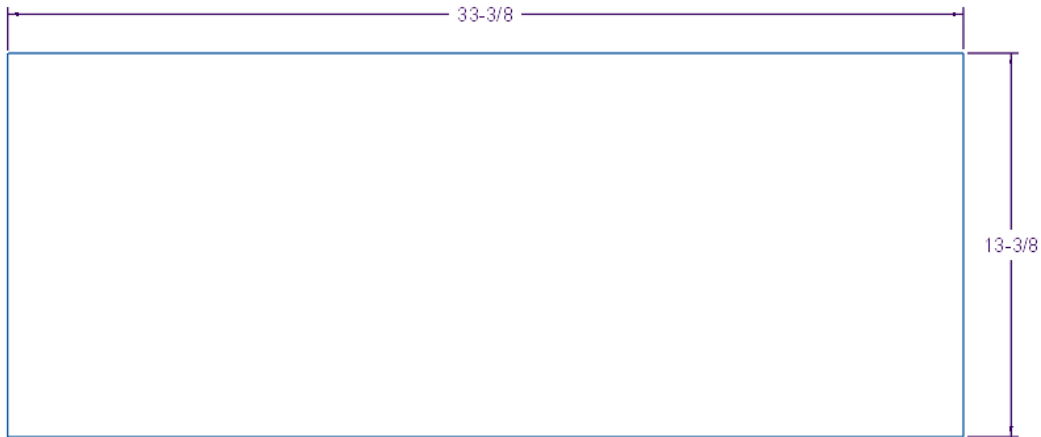

Ensure the wall opening is $33\text{-}3/8$ " x $13\text{-}3/8$ " for proper window fit. Install the window frame into the opening and attached using the 14 screws included.

