## COMPONENTS

x 2 panels

1200 x 1200 2 x Quietspace Panel

8 x Ceiling mounts

8 x panel mounts

8 x 1m cables with hook on end

1200 x 2400

x 1 panel

1 x Quietspace Panel

6 x ceiling mounts

6 x panel mounts


6 x 1m cables with hook on end

## Quietspace Suspended Installation Instructions


## TRANSPORTATION, STORAGE & HANDLING

Quietspace® Panel must be transported, stored and handled with care. Avoid delamination or distortion and protect edges from being crushed. Leave protective spun-bond on front until installation is complete.

Do not accept damaged product. If product arrives damaged; note the condition on the freight documents and contact Supplier immediately. Goods signed as receipted in 'good condition' will not be the responsibility of us. Always transport and store Quietspace® Panel on a flat, clean, dry surface.

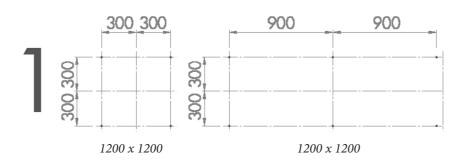

Determine where you want the Quietspace® Panel to be hung. On the ceiling substrate, mark out the corresponding ceiling mount points measuring from the centre.

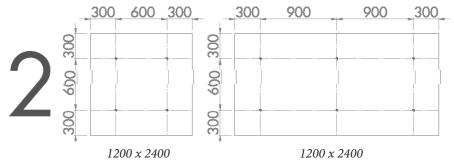

Mark out centres on the back of the Quietspace® Panel as per the above diagram. These will determine the fixing points of your Horizon panel mounts.

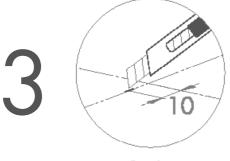


Fig. 1

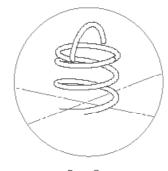


Fig. 2



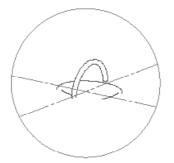


Fig. 3

With the Quietspace® Panel (HARD SIDE) face-down on a flat surface, use a craft knife or similar sharp object to carefully make a small slice through the Back (SOFT SIDE) top-most (5mm) layers only of the panel approximately 10mm from marked centres. This will allow for the panel mounts to be easily inserted and screwed into the back (SOFT SIDE) of panel.

Using the pre-sliced section, screw in the Horizon panel mounts. Apply a firm downward pressure so the fixing picks up as much fibre as possible (Fig. 2). Screw until one full turn of wire is left visible (Fig. 3), ensuring the panel mounts remain centred at the marked points (Step 2).

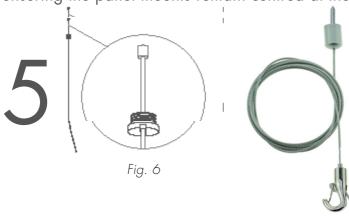

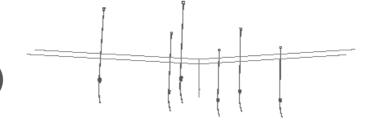


Screw assembled cables into the fixed ceiling mounts.

Fig. 4

Separate the ceiling mounts into their individual parts ceiling mounts (Fig. 4) and ceiling mount caps (Fig. 5).

Screw ceiling mounts (Fig. 4) to the ceiling substrate at the marked centres (Step 1) with a fixing appropriate for the substrate.

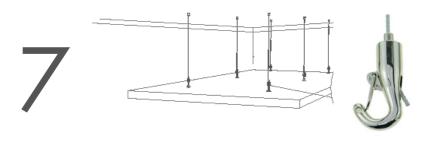

Lift the panel up to meet the cables and connect the hook onto the spiral panel mounts.

Level the panel, adjusting each hook fixing to hold equal tension so the panel hangs level.

Thread the ceiling mount caps (Fig. 5) onto the cables (Fig. 6).