


INSTRUCTIONS FOR INSTALLING STIHL >500 ADAPTER BRACKET

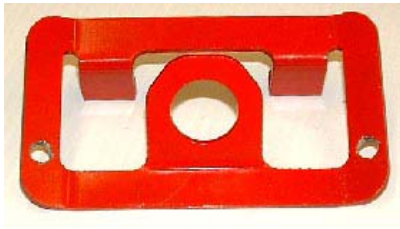

Parts supplied:

- Qty. 1 STIHL > 500
- Qty. 2 1/4"-20 x 3/4" Carriage Bolt
- Qty. 2. 1/4" Flat Washer
- Qty. 2 1/4"-20 Lock Nut



Tools required: Drill, 1/4" drill bit, & 7/16" wrench



1. Position the bracket so that the fingers hook underneath the handle on top of the blower.

2. Using the bracket as a guide, mark the blower where you will be drilling the holes.



3. Remove the bracket and drill two 1/4" holes in the blower back plate where the marks were made in Step 2.

4. Position the bracket back on the handle and insert the 1/4"-20 x 3/4" carriage bolts through the bracket and the blower back plate. Secure the bolts with the 1/4" flat washers and 1/4"-20 nuts provided.

