



"Dewdrop" wardrobe

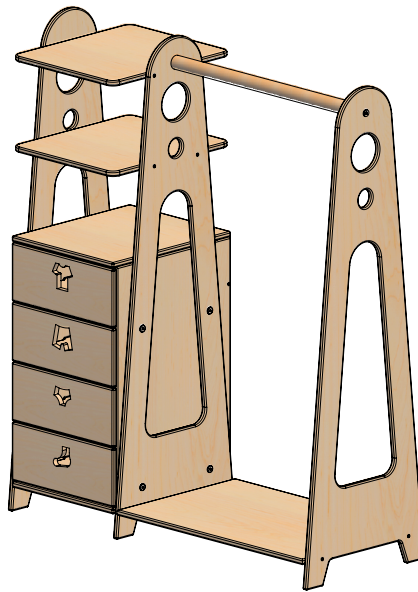


ASSEMBLY DETAILS

1 - Left sidewall 1 pc.	2 - Right sidewall 1 pc.	3 - Middle wall 1 pc.	4 - Lower base 1 pc.	5 - Shelf 2 pcs
6 - Lower base of drawer 1 pc.	7 - Upper cover of drawer 1 pc.	8 - Left drawer sidewall 1 pc.	9 - Right drawer sidewall 1 pc.	10 - Back wall of drawer 1 pc.
11 - Lower base of box 4 pcs.	12 - Back plank of box 4 pcs.	13 - Left side plank of drawer 4 pcs.	14 - Right side plank of drawer 4 pcs.	15 - Facade of drawer #1 1 pc.
16 - Facade of drawer #2 1 pc.	17 - Facade of drawer #3 1 pc.	18 - Facade of drawer #4 1 pc.	19 - Nog 1 pc.	a - Screw M6x20 8 pcs.
b - Set of minifixes 12 pcs.	c - Erikson nut 8 pcs.	d - Confirmat screw 5x40 40 pcs.	e - Self-tapping screws 6,3 x40 2 pcs.	f - Shelf-holder 8 pcs.
g - 3 mm hex key, 1 pc.	h - 4 mm hex key 1 pc.	i - 5 mm hex key 1 pc.	j - Screwdriver 1 pc.	

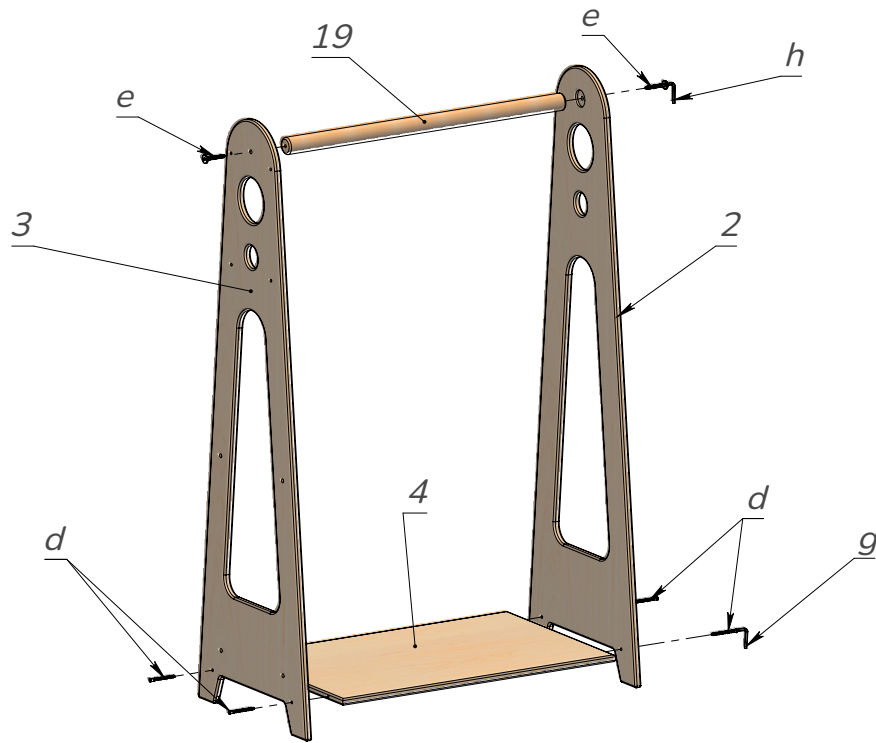


Pic. 1

Connect the lower base (4) to the right sidewall (2) with the help of confirmat screws (d) and hex key (g). Take the middle wall (3) and connect it with confirmats (d). Take the nog (19) and screw it between the right sidewall (2) and the middle wall (3) with the help of self-tapping screws (e) and hex key (h). See Pic. 1

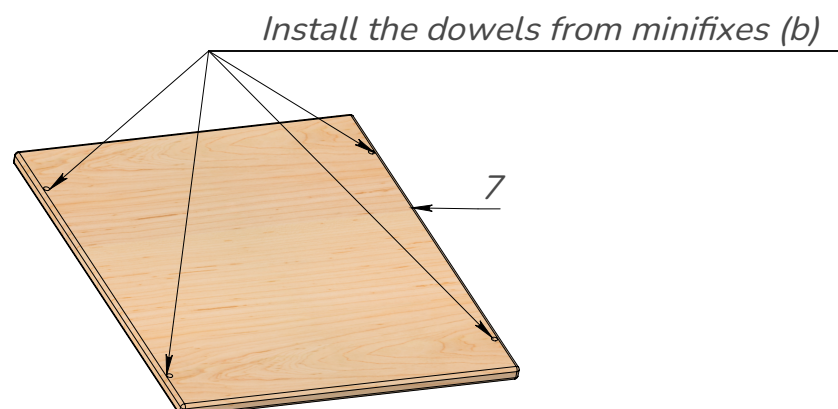


Pic. 2

Take the upper cover of drawer (7), and using the screwdriver (28), screw the dowels from minifixes (21) in. See Fig. 2

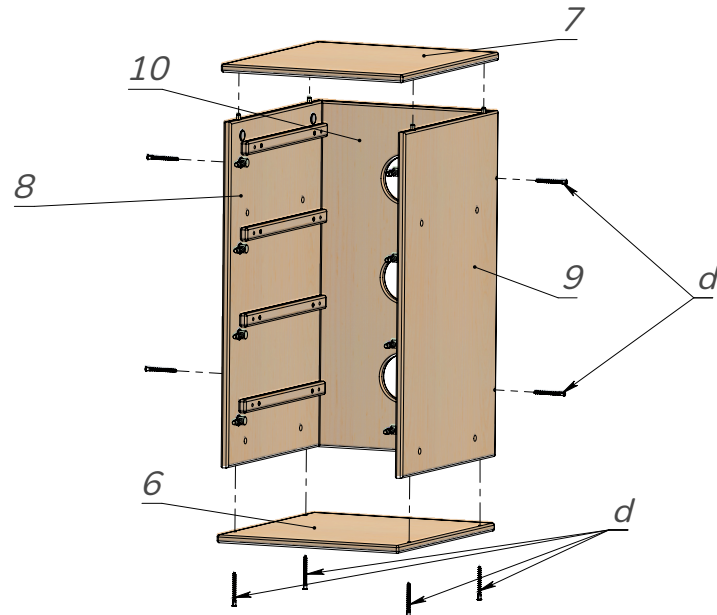


Pic. 3

Take the lower base of drawer (6) and using the confirmat screws (d) and hex key (g), connect the left and right drawer sidewalls (8, 9). Insert the back wall of drawer (10) between them and fix it with confirmats (d). Put the upper cover of drawer (7) and close the eccentrics (b) on the details (8) and (9) clockwise. See Pic. 3.

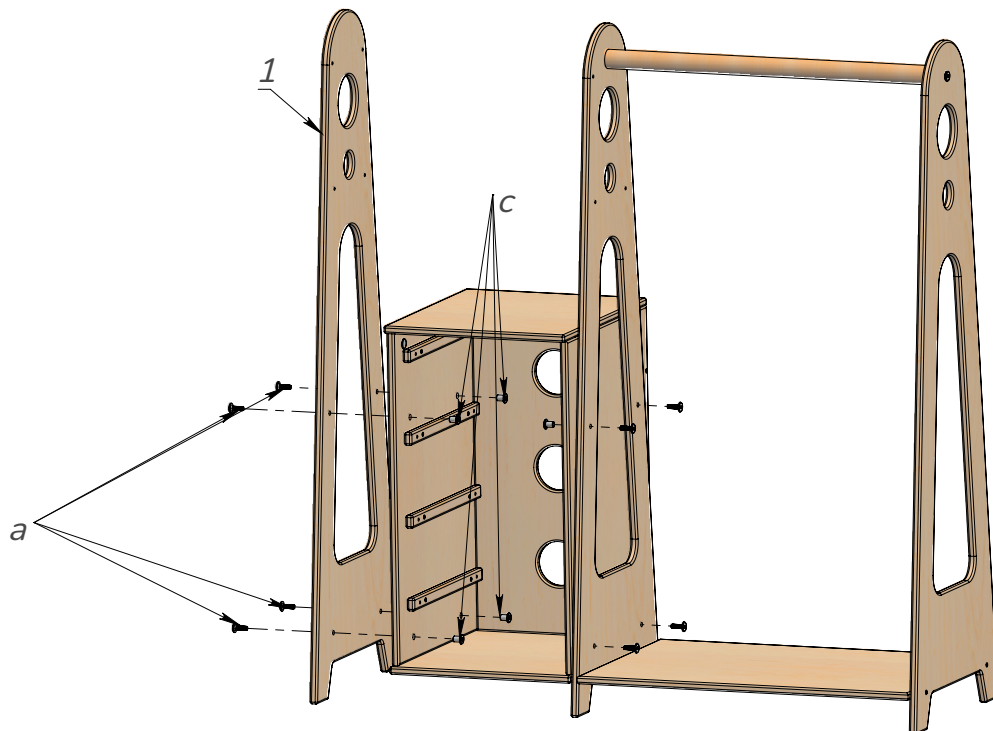


Pic. 4

Connect the previously assembled construction using the screws (a), by holding them with the key (h). Fix the screw with Erikson nuts (c) from another side with the help of hex key (i). See Pic. 4.

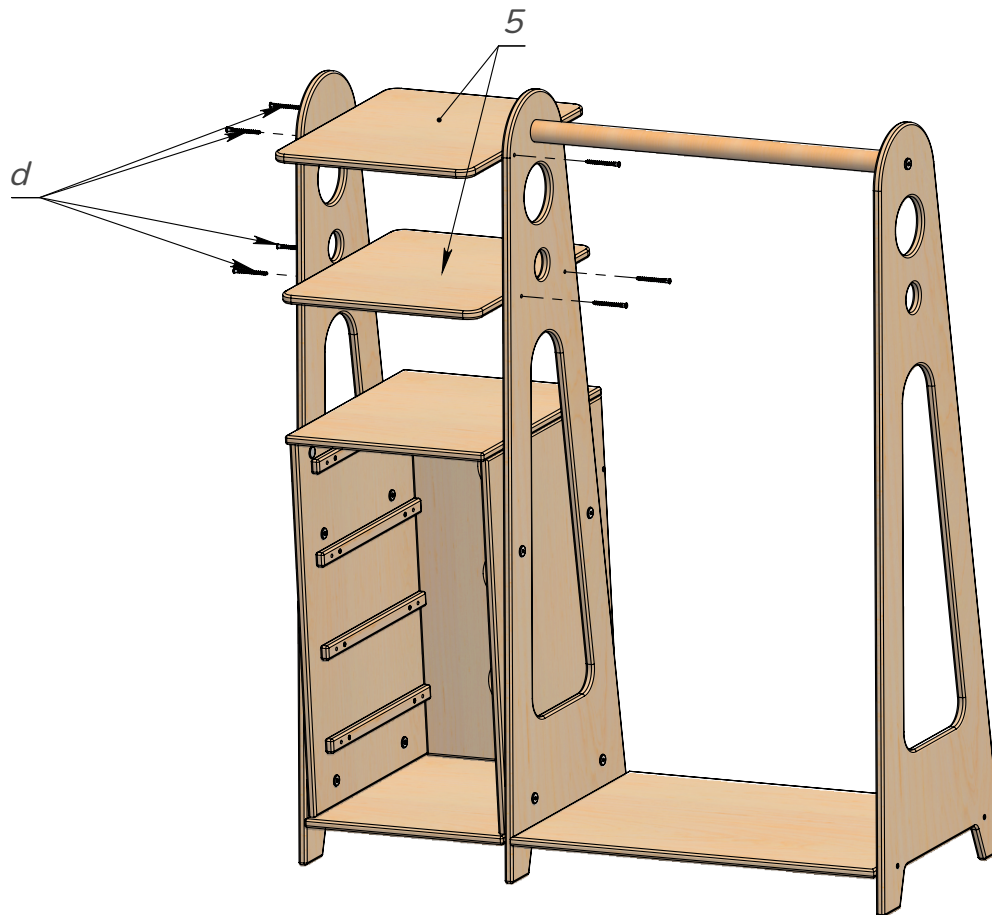


Pic. 5

Insert the shelves (5) into the previously assembled construction and fix them with the confirmat screws (d). See Pic. 5

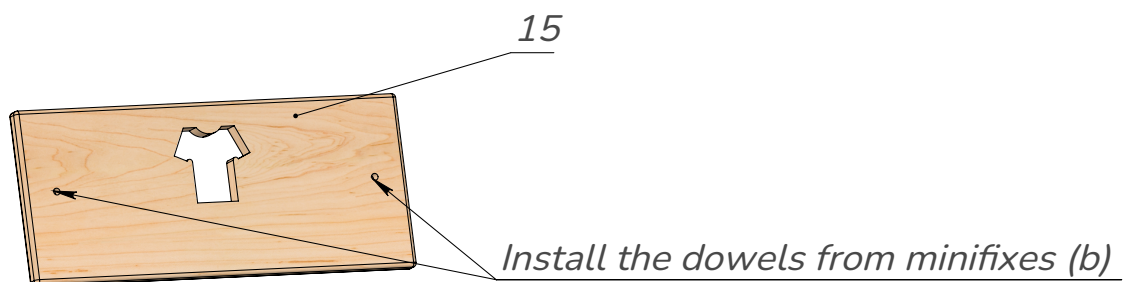

Pic. 6


Take the drawer facades (15,16, 17, 18) and using the screwdriver, screw the dowels from minifixes (21) in. See Fig.6

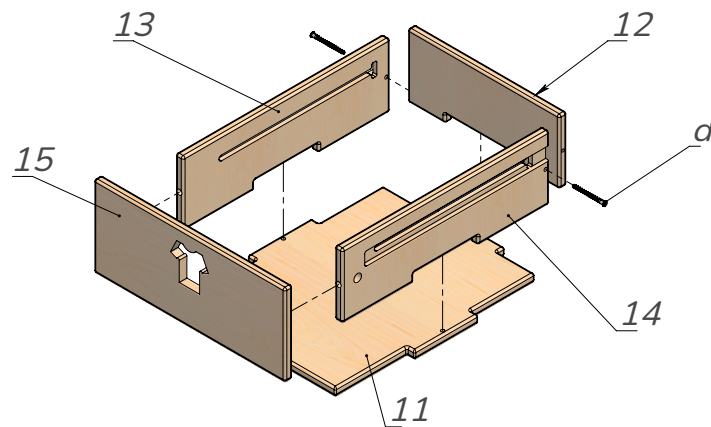

Pic. 7

Take the lower base of box (11) and using the confirmat screws (d), connect the back, left and right drawer planks (12, 13, 14). Then install the facade #1 (15) and close the eccentrics (b) located on the side planks (13, 14) clockwise with the screwdriver (j). See Pic. 7

Assemble other drawers with other facades (16, 17, 18) in a similar way.

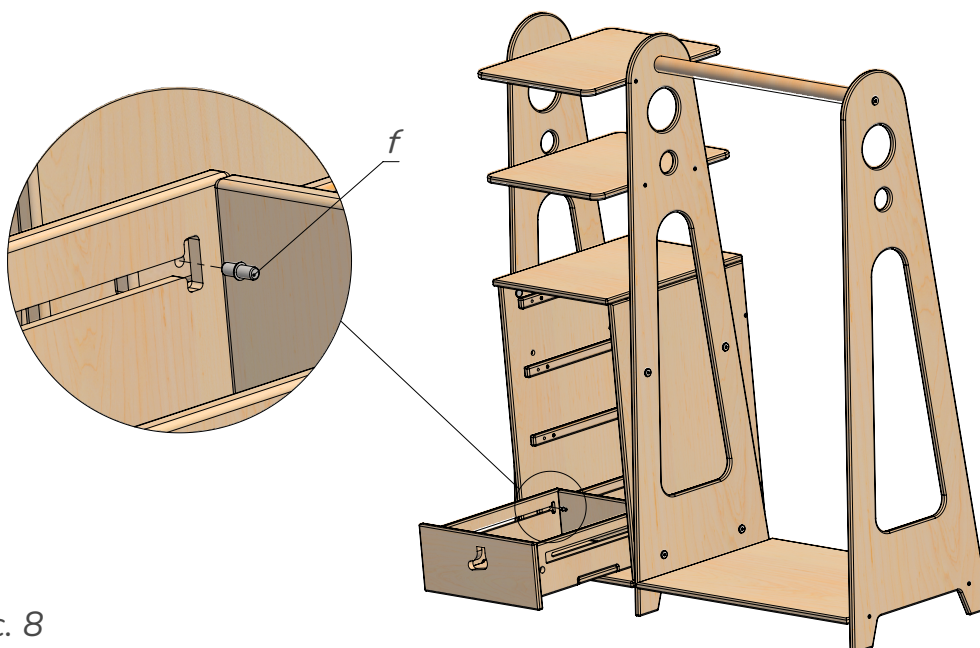

Pic. 8

Install the assembled drawers into the cabinet, starting from below, fixing them one by one with the shelf-holders (f). See Pic. 8



The products are meant for indoor use only.
To be used for its intended purpose only and under the direct supervision of an adult!
All the responsibility for children's injuries received during games on the furniture lies on adults watching after them.

Always be vigilant during children's games!