


Indoor playground with bridge + ramp





ASSEMBLY DETAILS

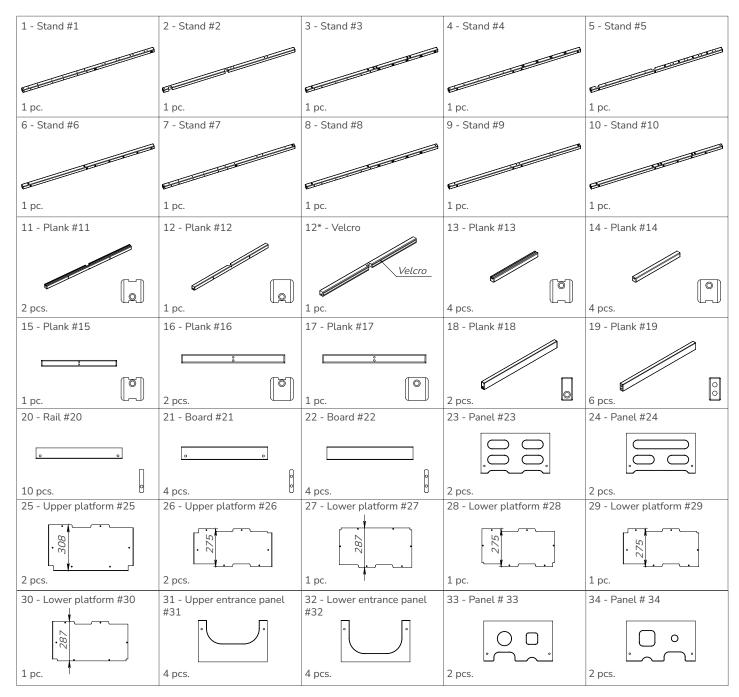



ASSEMBLY DETAILS

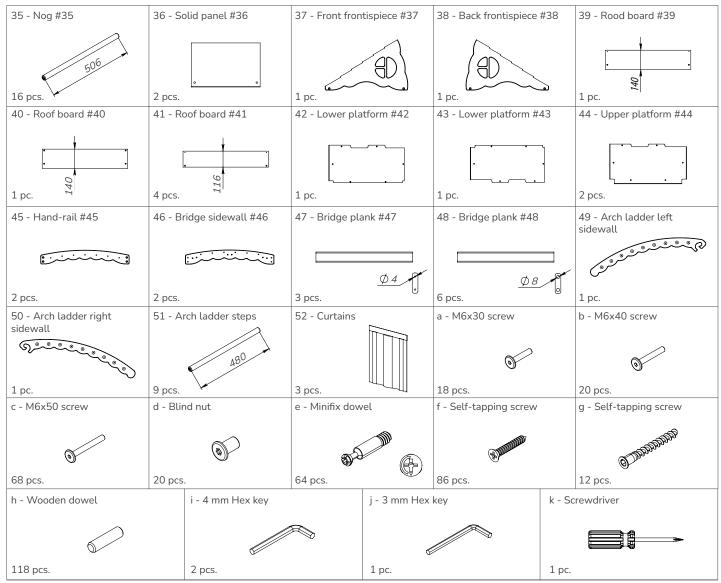

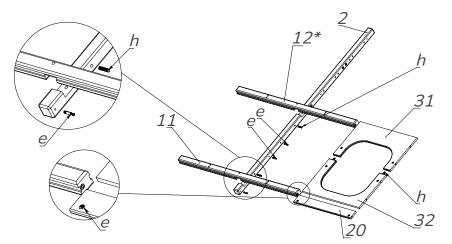


Pic. 1

Take the stand (2) and screw the minifix dowels (e) in using the screwdriver (k). Plug the wooden dowels (h) into the stand (2).

Locate the details (2, 11 and 12* with velcro) into the grooves, as shown in Pic. 1. Connect the details (31 and 32) with the wooden dowels (h).


Insert the details (20) and previously connected (31 and 32) all the way to the stand (2). Lock the eccentric fasteners (e) clockwise to 180°.

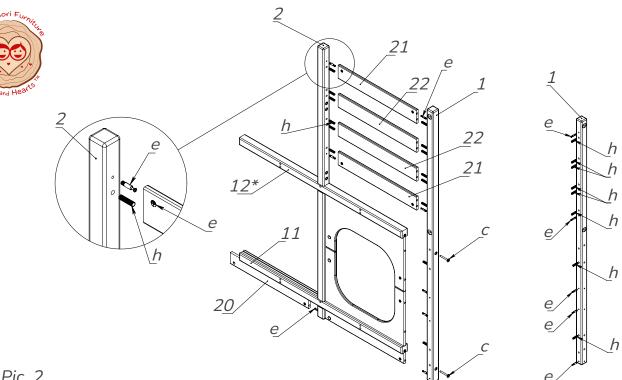

Screw the minifix dowels (e) into the stands (1, 2) using the screwdriver (k). Plug the wooden dowels (h) into the stands (1, 2).

Take the stands (1, 2), install the planks (20, 21, 22) and lock the eccentric fasteners (e) clockwise to 180°.

Screw the detail (1) to the details (11, 12*) with the velcro using the screws (c) and a hex key (i).

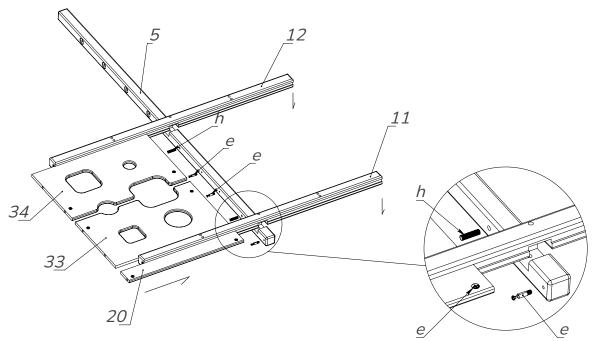


Pic. 3

Screw the minifix dowels (e) into the stand 5 using the screwdriver (k). Plug the wooden dowels (h) into the stand (5).


Connect the details (5), (11) and (12) in the grooves as shown on the Pic. 3. Insert the details (20), (33), (34) into the grooves all the way to the stand (5). Lock the eccentric fasteners (e) clockwise to 180°.



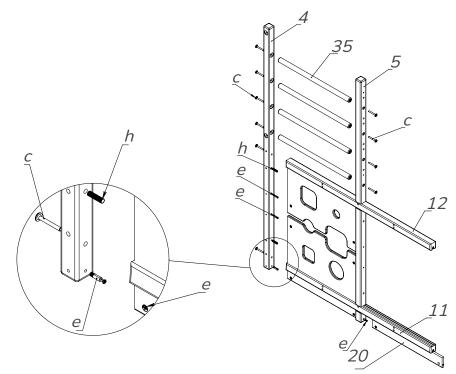

Screw the minifix dowels (e) into the stands (4, 5) using the screwdriver (k). Plug the wooden dowels (h) into the stand (4).

Screw the detail (35) to the stand (5) using the screws (c) and a hex key (i). Install the stand (4) and the detail (20) and lock the eccentric fasteners (e) clockwise to 180°. Screw the stand (4) to the detail (11), (12) and (35) using the screws (c) and a hex key (i).

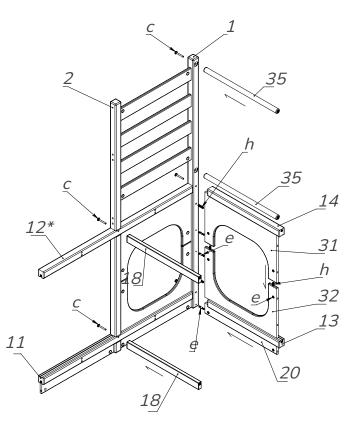

Pic. 5


Take the stand (1) and insert the minifix dowels (e) using the screwdriver (k).

Plug the wooden dowels (h) into the stand (1).Connect the details (13), (14) and (35) to the stand (1) using the screws (c) and a hex key (i).

Connect the details (31) and (32) using the dowels (h). Install the details (20) , (31 and 32) and lock the eccentric fasteners (e) clockwise to 180°.

Screw the details (18) to the details (11) and (12) using the screws (c) and a hex key (I).




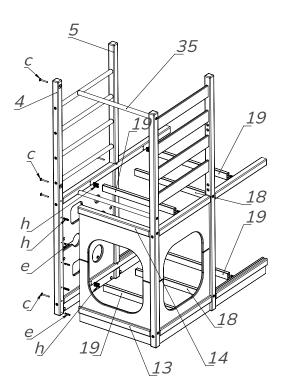

Take the stand (4) and insert the minifix dowels (e) using the screwdriver (k).

Plug the wooden dowels (h) into the stand (4). Plug the wooden dowels (h) from the both sides into the detail (19).

Install the details (19) and (4) and lock the eccentric fasteners (e) clockwise to 180°. Screw the details (13), (14), (18), (35) to the stand (4) and (5) using the screws (c) and a hex key (i).

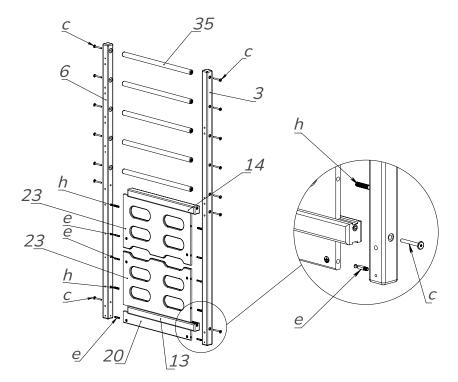


Pic. 7

Take the stand (3) and (6) and screw the minifix dowels (e) in, using the screwdriver (k). Plug the wooden dowels (h) into the stand (3) and (6).

Screw the details (13), (14), (18), (35) to the stand (3) using the screws (c) and a hex key (i). Install the details (20) and (23) all the way to the stand (3) and lock the eccentric fasteners (e) clockwise to 180°.

Install the detail (6) and lock the eccentric fasteners (e) clockwise to 180°. Screw the details (13), (14), (35) to the stand (6) using the screws (c) and a hex key (i).




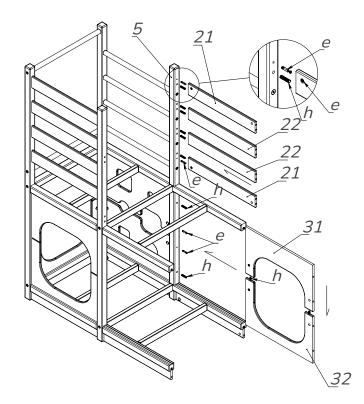

Take the stand (5) and screw the minifix dowels (e) in, using the screwdriver (k). Plug the wooden dowels (h) into the stand (5).

Connect the details (31) and (32) using the dowels (h).


Install the details (20), (21) and (31 together with 32) and lock the eccentric fasteners (e) clockwise to 180°.

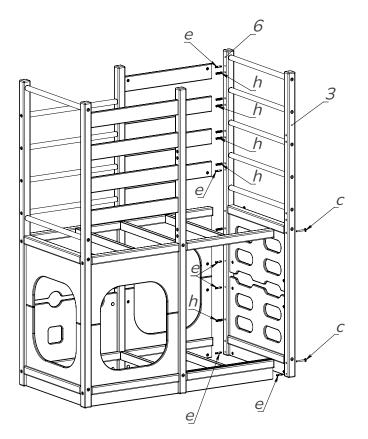


Pic. 9

Take the stand (3) and (6) and screw the minifix dowels (e) in, using the screwdriver (k). Plug the wooden dowels (h) into the stand (6).

Connect two constructions and lock the eccentric fasteners (e) clockwise to 180°. Connect the stand (3) and (6) to the construction using the screws (c) and a hex key (i).

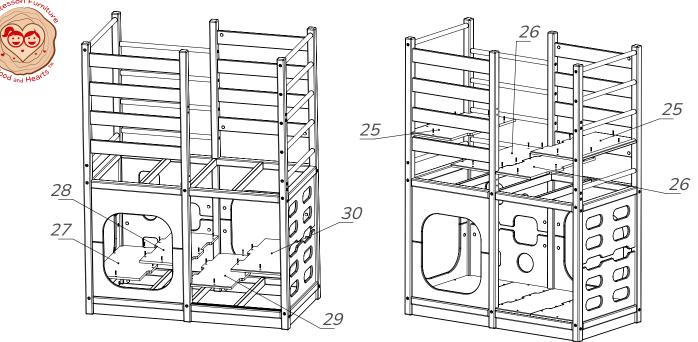

Connect the details (27), (28), (29) on the first floor, and the details (25) and (26) on the second floor using the screws (f) and a screwdriver (k) as shown on the Pic. 10.

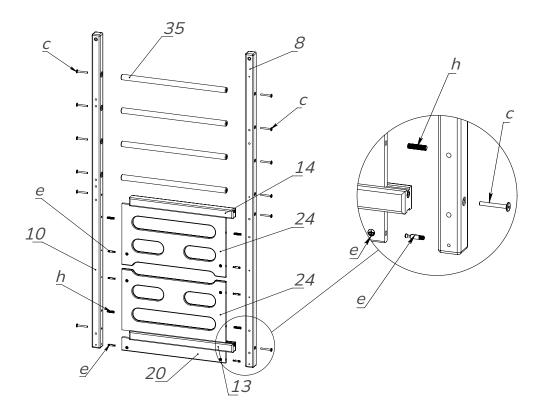

Pic. 11


Take the stand (8) and (10) and screw the minifix dowels (e) using the screwdriver (k). Plug the wooden dowels (h) into the stand (8) and (10).

Connect the details (13), (14) and (35) to the detail (8) using the screws (c) and a hex key (i).

Install the details (20) and (24) all the way to the detail (8) and lock the eccentric fasteners (e) clockwise to 180°.

Install the details (10) and lock the eccentric fasteners (e) clockwise to 180°. Connect the details (13), (14) and (35) to the detail (10) using the screws (c) and a hex key (i).



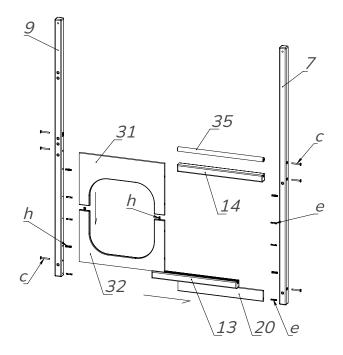


Take the stand (7) and (9) and screw the minifix dowels (e) using the screwdriver (k). Plug the wooden dowels (h) into the stand (7) and (9).

Connect the details (13), (14) and (35) to the detail (7) using the screws (c) and a hex key (i).

Connect the details (31) and (32) using the dowels (h).

Install the details (20) and (31 + 32) all the way to the detail (7) and lock the eccentric fasteners (e) clockwise to 180° .

Install the details (9) and lock the eccentric fasteners (e) clockwise to 180°. Connect the details (13), (14) and (35) to the detail (9) using the screws (c) and a hex key (i).

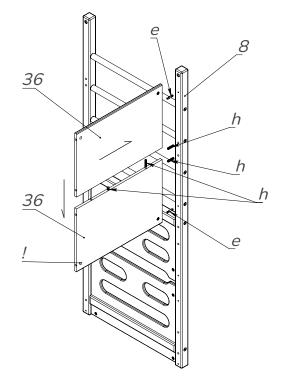

Pic. 13


Take the stand (8) and screw the minifix dowels (e) using the screwdriver (k).

Plug the wooden dowels (h) into the stand (8).

Connect the details (36) using the dowels (h).

Install the details (36) and lock the eccentric fasteners (e) clockwise to 180°. ! Pay attention to the position of eccentric fastener (e) when installing the detail (36).



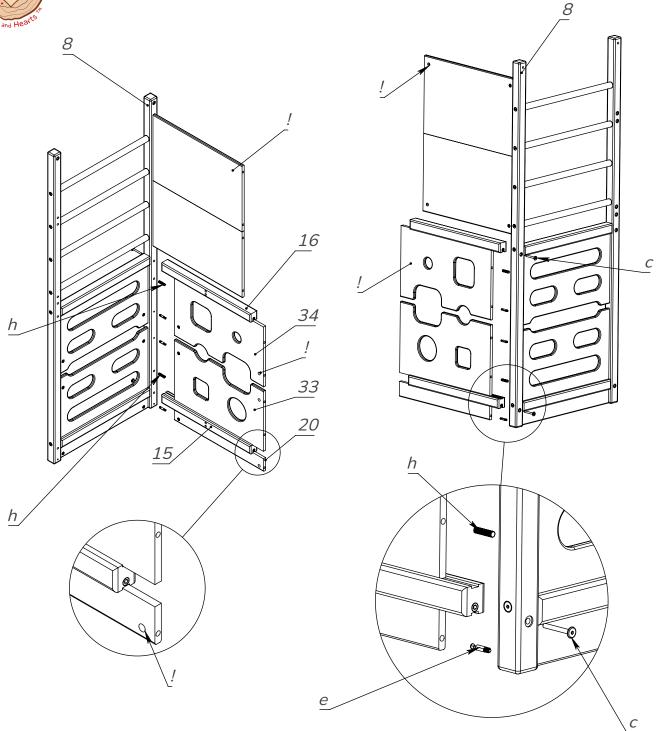


Take the stand (8) and screw the minifix dowels (e) using the screwdriver (k). Plug the wooden dowels (h) into the stand (8).

Connect the details (15), (16) to the detail (8) using the screws (c) and a hex key (i). Install the details (33) and (34) all the way to the detail (8) and lock the eccentric fasteners (e) clockwise to 180°.


! Pay attention to the position of eccentric fastener (e) when installing the detail (20), (33) and (34).



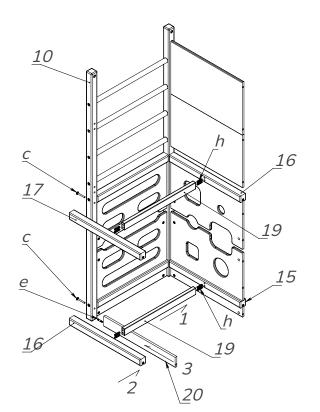

Take the stand (10) and screw the minifix dowels (e) using the screwdriver (k). Take the detail (19) and Plug the wooden dowels (h) from the both sides and install the details (15) and (16). [1]

Connect the details (16), (17) to the detail (10) using the screws (c) and a hex key (i). [2] Install the details (20) all the way to the detail (10) and lock the eccentric fasteners (e) clockwise to 180°.[3]

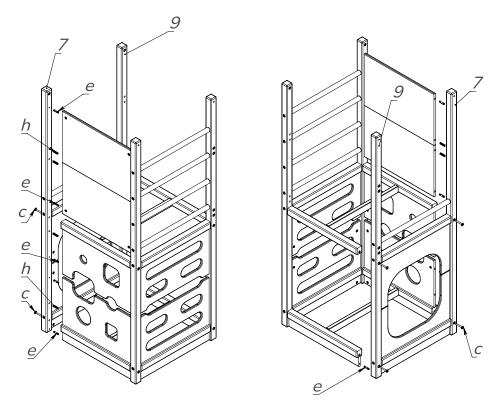




Take the stand (7) and (9) and screw the minifix dowels (e) using the screwdriver (k). Plug the wooden dowels (h) into the stand (7).

Screw the assembled detail A (page 16) to the detail B (page 19) using the screws (c) and a hex key (i).

Lock the eccentric fasteners (e) clockwise to 180°. [3]




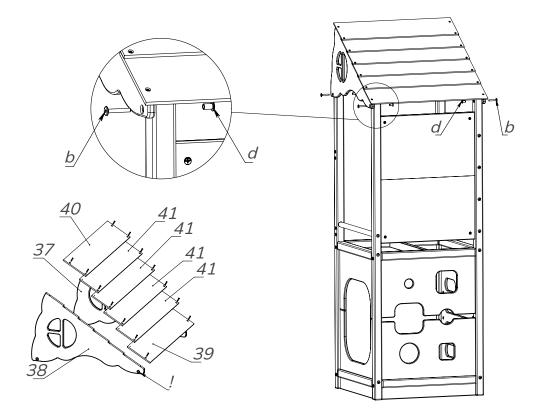

Connect the details (39), (40), and (41) to the details (37) and (38) using the screws (f) and a screwdriver (k).


! Pay attention - the grooves should be outwards

Screw the assembled construction using the screws (b), nuts (d) and two screws (i).

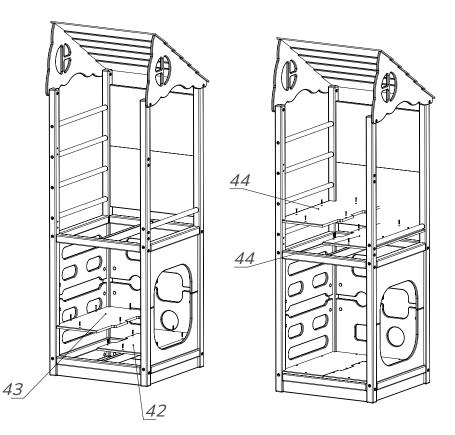




Using the screwdriver (k) and the screws (f) connect the details (42) and (43) on the first floor, and the detail (44) on the second floor.

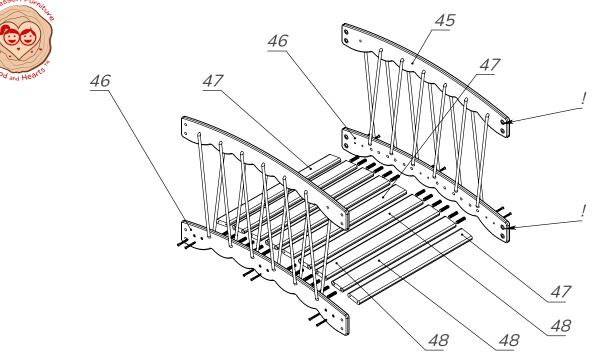


Take the detail (48) and Plug the wooden dowels (h) from the both sides. Assemble the construction as shown on the picture, the detail (46) is to be connected to the detail (47) using the screws (g) and a hex key (j). ! - Grooves should be inside

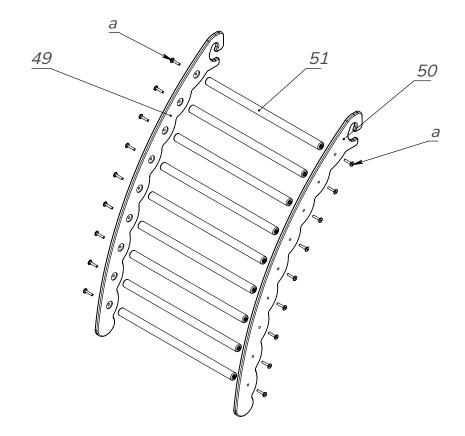




Assemble the construction as shown on the picture, the details (49) and (50) are to be connected to the detail (51) using the screws (a) and a hex key (i).

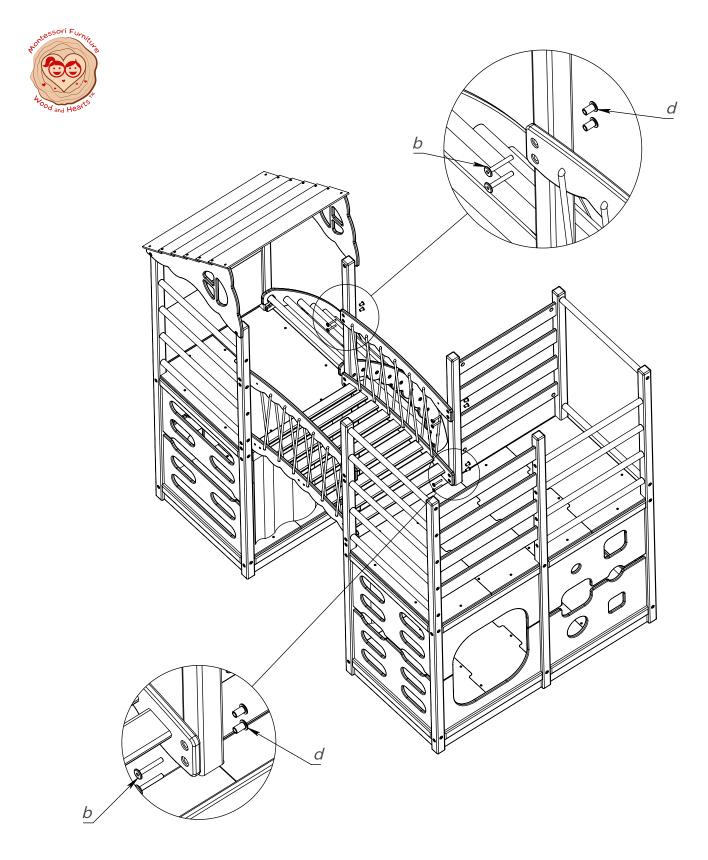



Connect the bridge as shown on the picture using the screws (b), nuts (d) and both hex keys (i).

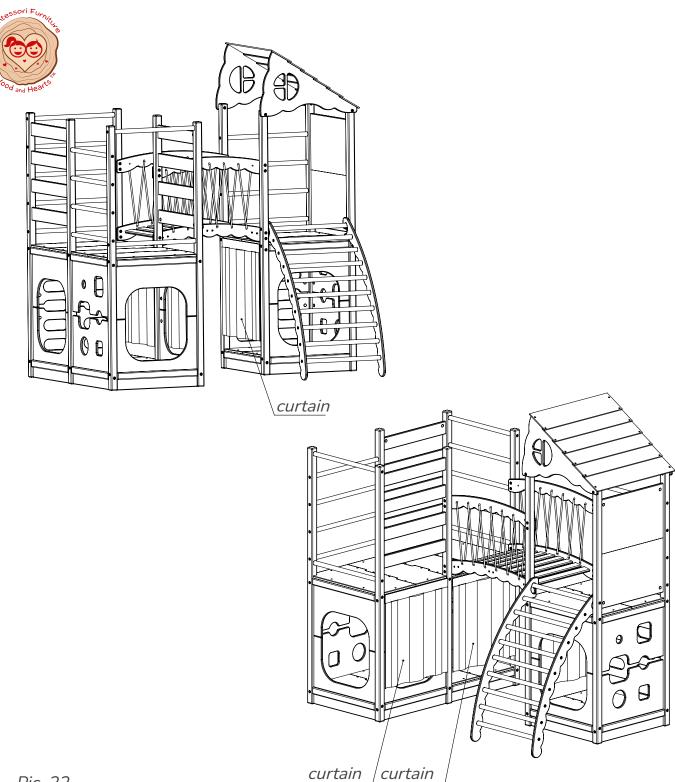

Hang the curtains to the sticky tapes. Applicable to the variant with 3 curtains.



Use only for its intended purpose, indoors, under the direct supervision of adults. Responsibility for any damage incurred by children during play on the furniture rests with the supervising adults.

Always be vigilant during children's play.