


## Shelf "Trees ans Houses" narrow 1

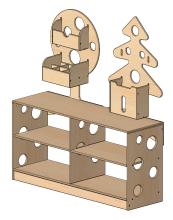


## **ASSEMBLY DETAILS**

1 Upper sever	2 - Left sidewall	3 - Right sidewall	4 - Lower base	5 - Middle wall
1 - Upper cover		3 - Right Sidewall	4 - Lower base	5 - Middle Wall
1000 1 pc.	1 pc.	1 pc.	976 	1 pc.
6 - Shelf	7 - Decor 1	8 - Decor 2	9 - Facade of	10 - Left sidewall of
976 1 1 pc.	1 pc.	1 pc.	the drawer 1	the drawer 1 1 pc.
11 - Right sidewall	12 - Base plank of	13 - Left sidewall of	14 - Right sidewall	15 - Facade of
of the drawer 1	the drawer 1	the drawer 2	of the drawer 2	the drawer 2
1 pc.	228 6 6 2 pcs.	1 pc.	1 pc.	1 pc.
16 - Base plank of	17 - Long lintel	18 - Short lintel	19 - Lower plank of	20 - Left sidewall of
the drawer 2			the drawer 3, 1 pc.	the drawer 3
228			041	
1 pc.	1 pc.	2 pcs.	1 pc.	1 pc.
21 - Right sidewall of the drawer 3	22 - Lower rail	23 - Upper rail	24 - Confirmat screws 5x40	25 - 3 mm Hex key
1 pc.	976 1 pc.	976 09	<b>Caaaaaa</b> 40 pcs.	1 pc.
26 - Set of Minifixes*	27 - Screwdriver			
6 pcs.	1 pc.			


<sup>\*</sup>Eccentric ties are already installed into the details



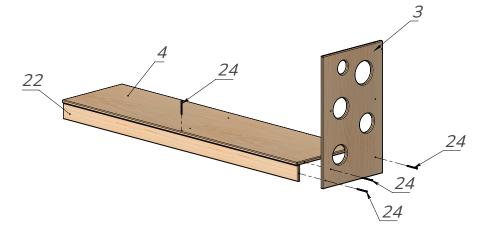


Pic. 1

Take the right sidewall (3) and using the confirmat screws (24) and hex key (25) attach the lower base (4) and lower rail (22). Fix the details 4 and 22 wih he confirmat screw (24). See Pic.1.

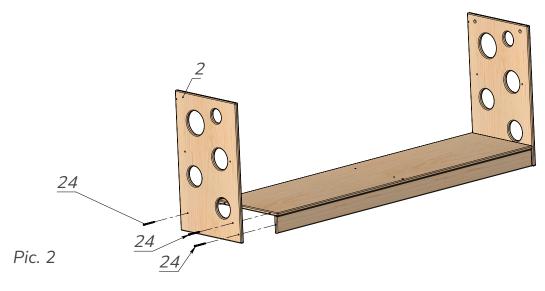


Attach the left sidewall (2) to the previously assembled construction. See Pic.2.

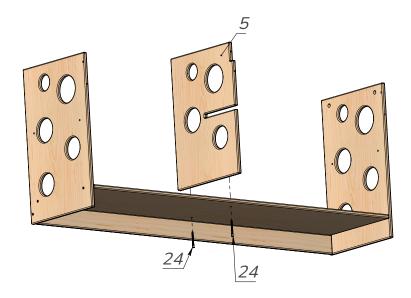


Pic. 3

Attach the middle wall (5) to the lower base (4) using the confirmat screws (24) and hex key (25). See Pic.3.



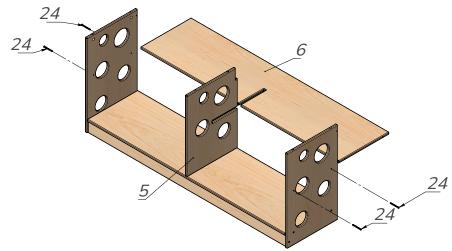


Install the shelf (6) into the groove of the middle wall (5) and fix it with the confirmat screws (24). See Pic.4.

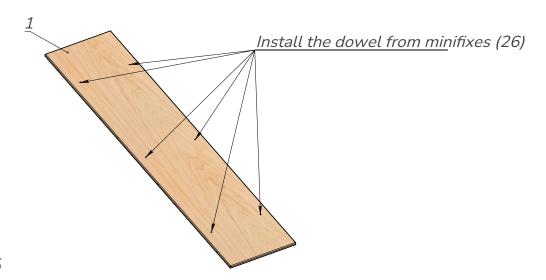

Pic. 5

Pic. 4


Install the dowels from minifixes (26) into the upper cover (1) using the screwdriver (27). See Pic.5.

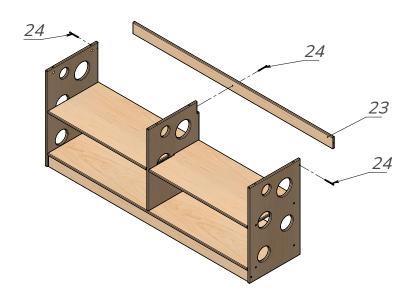

Pic. 6


Attach the upper rail (23) using the confirmat screws (24) and hex key (25). See Pic.6.



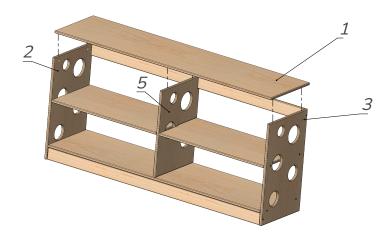

Pic. 7


Install the upper cover (1) onto the previously assebmled construction and using the screwdriver (27) close the eccentriv ties located on the sidewalls (2,3) and middle wall (5) by turning them 180 degrees clockwise. See Pic.7.

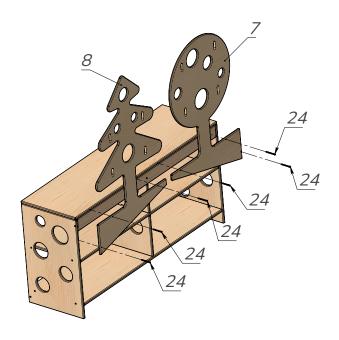

Pic. 8

Attach the decor details (7,8) to the previously assembled construction using the confirmat screws (24). See Pic.8.


Then assemble the drawers:

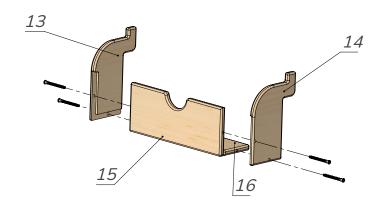


Pic. 9

Take one of the sidewalls of the drawer 2 (13 or 14) and using the confirmat screws connect the facade (15) and lower drawer plank (16) to it. Then screw another sidewall to the assembled construction. See Pic. 9.



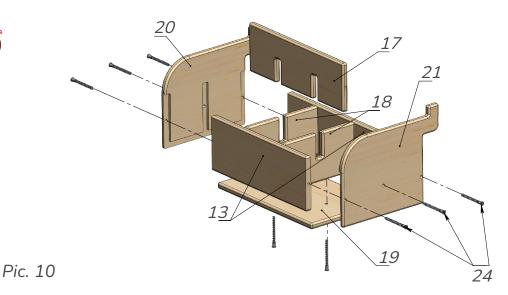

Take one of the sidewalls (20 or 21) ans using the confirmat screws (24) attach the lower planks (12) to it. Then locate the short lintels (18) on the lower plank (19) and install the longer lintel (17). Fix the construction with the confirmat screws (24) and attach it to one of the sidewalls (21 or 20). Another sidewall is to be attached to the previously assembled construction. See Pic. 10.

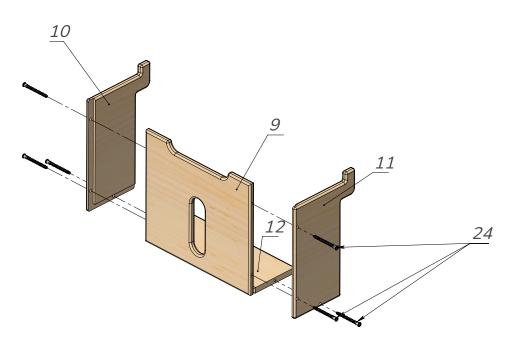

Pic. 11

Take one of the sidewalls of the drawer (10 or 11) and using the confirmat screws, attach the facade (9) and lower plank of the drawer (12). Then attach another sidewall in a similar way. See Pic.11.



To be used for its intended purpose only and under the direct supervision of an adult! All the responsibility for children's injuries received during games on the furniture lies on adults watching after them.

Always be vigilant during children's games!