
## COCH Weaks


## Kitchen "Mini"



## Assembly details

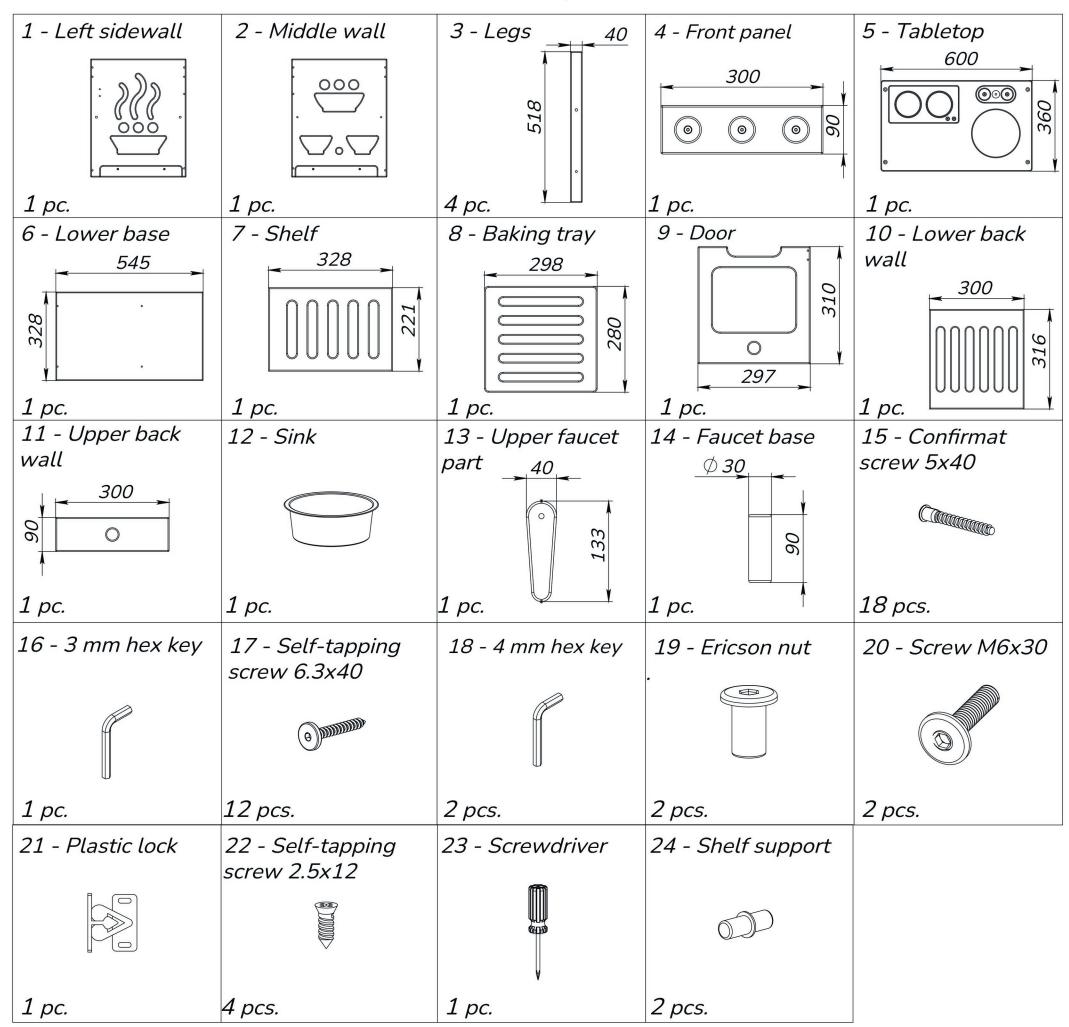




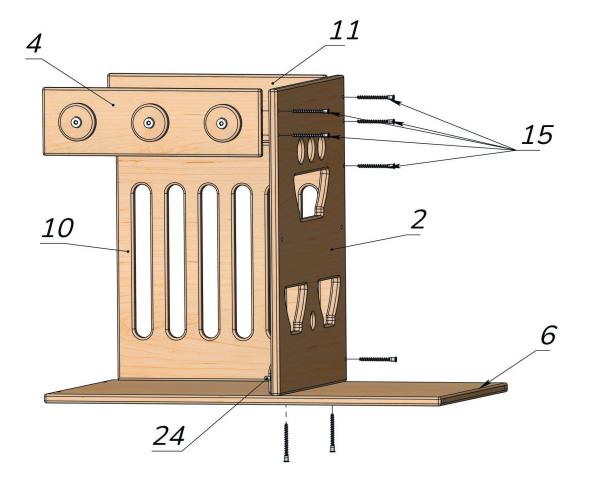


Pic. 1

Take the lower base (6) and using the confirmat screws (15), screw the middle wall (2) to it. Then take the front panel (4), lower back wall (10) and upper back wall (11), and using the confirmat screws (15), connect it to the middle wall (2). See Pic. 1.

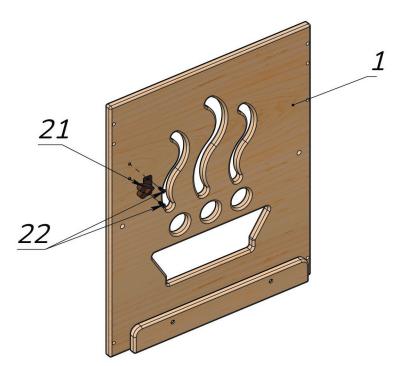


Pic. 2

Take the left sidewall (1) and using the self-tapping screws (22) and a screwdriver (23), connect the plastic lock (21) to it. See Pic. 2

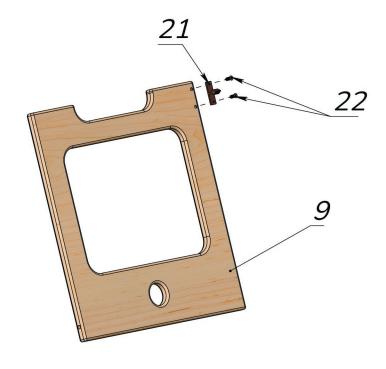


Pic. 3


Take the door (9) and using the self-tapping screws (22) and a screwdriver (23), connect the plastic lock to it (21). See Pic. 3

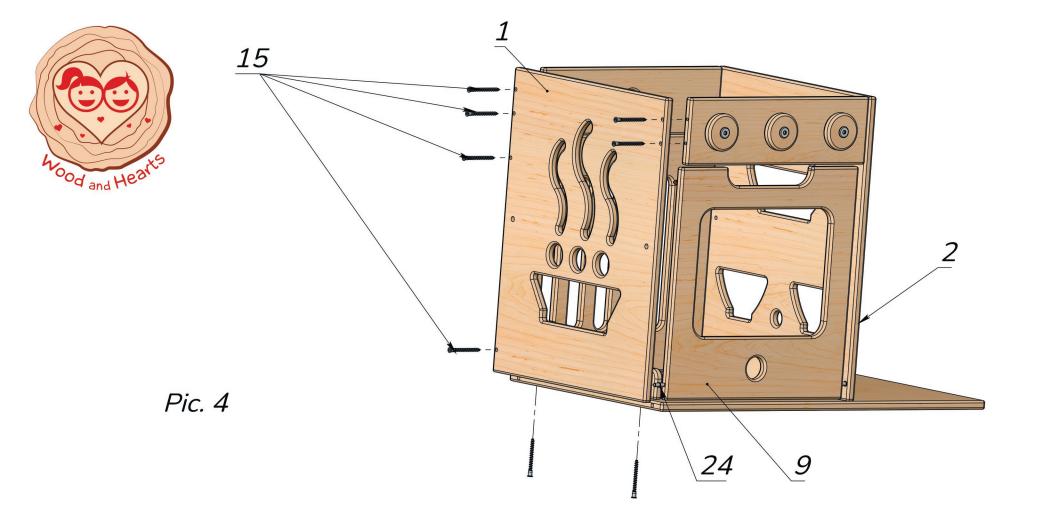


Install the door (9) onto the shelf support (24) located at the middle wall (2). Install another shelf support (24) into the door (9) from another side. Screw the left sidewall (1) to the previously assembled construction using confirmat screws (15) and hex key (16). See Pic. 4.

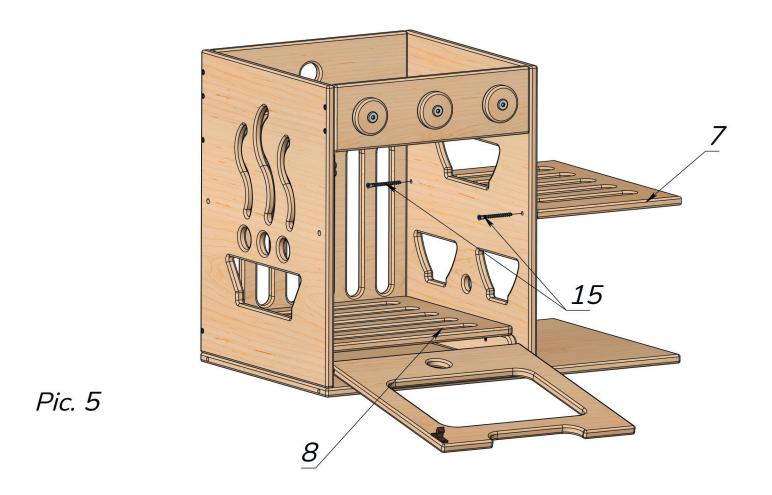


Screw the shelf (7) to the middle wall (2) using the confirmat screws (15) and hex key (16). Install the baking tray (8). See Pic. 5.

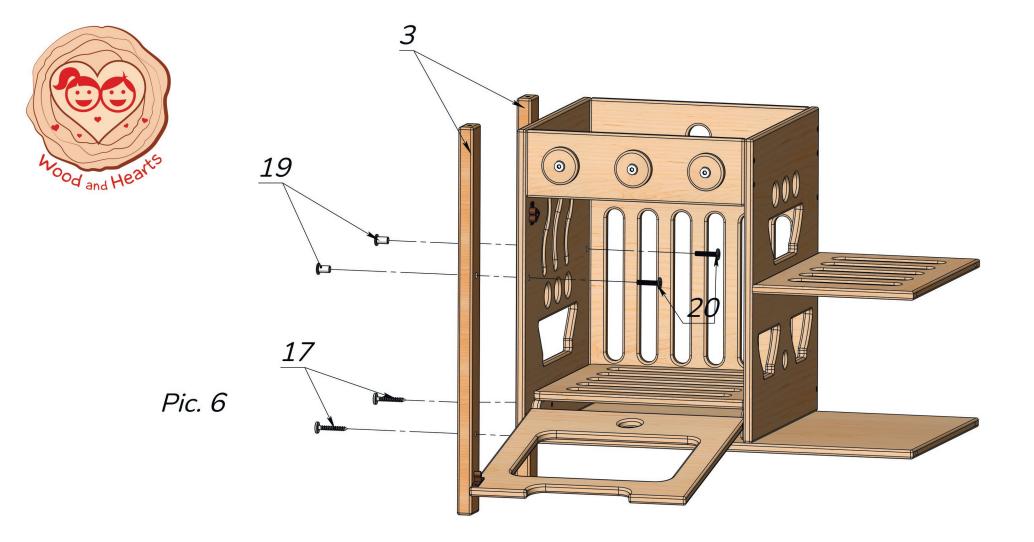


Take 2 legs (3) and screw them to the previously assembled construction using the self-tapping screws (17) at the bottom and Ericson nuts (19), screws (20) and both hex keys (18) from above. See Pic. 6.

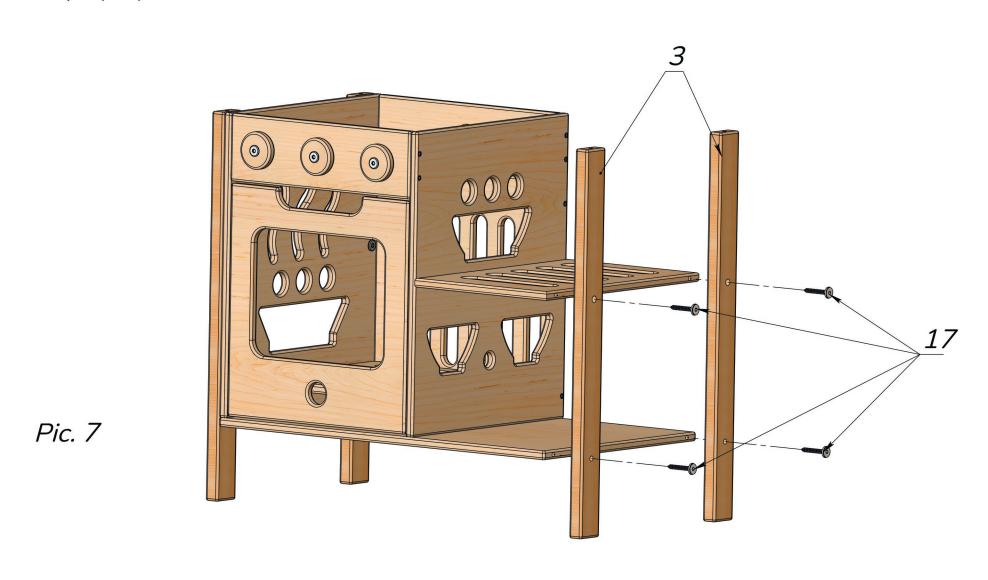

Take 2 other legs (3) and using the self-tapping screws (17) and hex key (18), connect them to the construction from another side. See Pic. 7

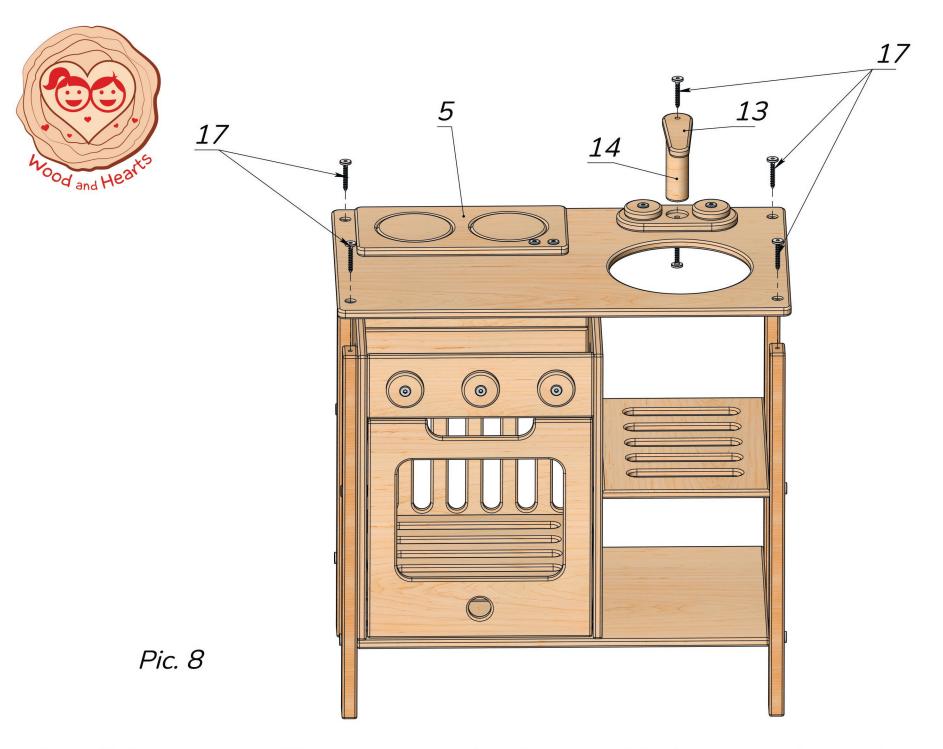

Install the tabletop (5) onto the previously assembled construction and screw it with the screws (17). Connect the upper faucet part (13) with the faucet base (14) using the screws (17) and connect it to the tabletop (5). See Pic. 8.

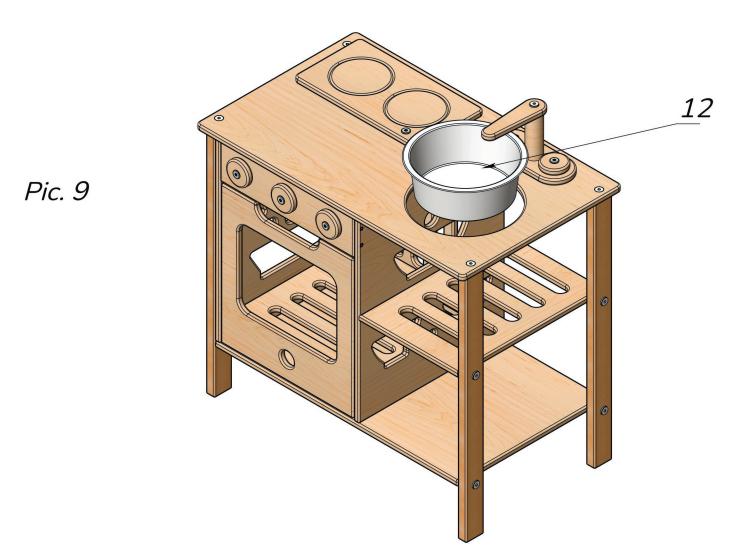

Install the sink (12) into the assembled construction. See Pic. 9.