




SAFETY PRECAUTIONS

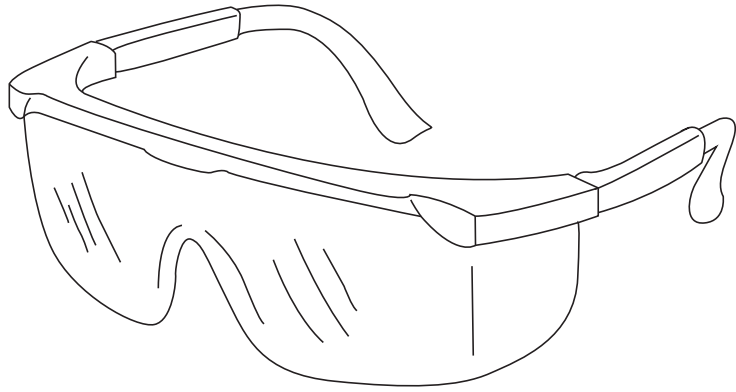


Wear protective glasses at all times.

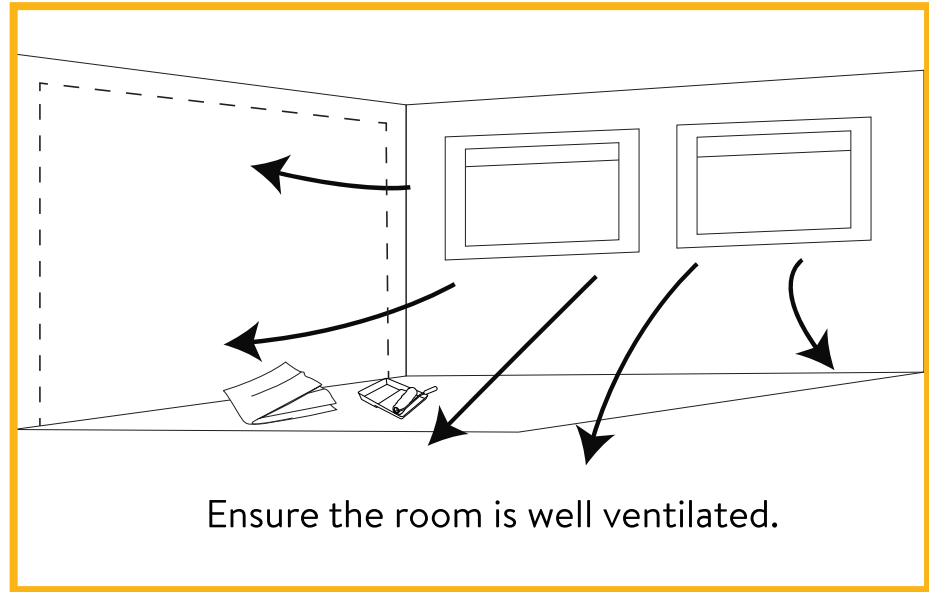

Ensure the room is well ventilated.

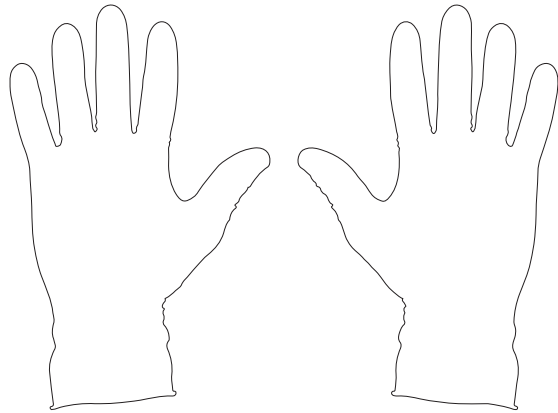


Wear protective gloves at all times.

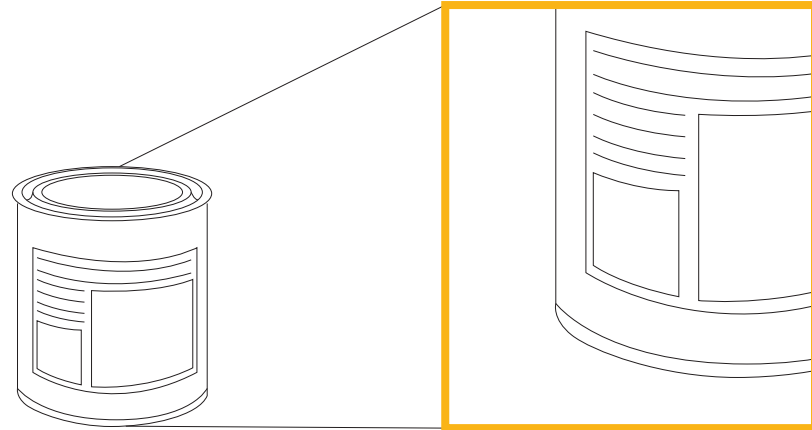


Refer to safety information on tin label.

STEP 1: SITE PREPARATION

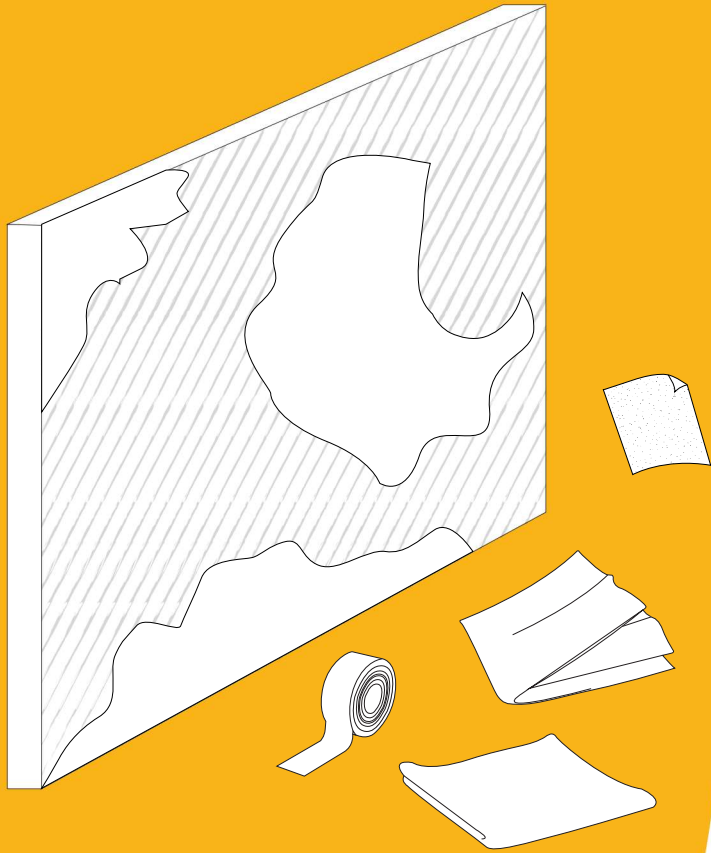

Process Comments

Prepare wall for paint and repair wall defects

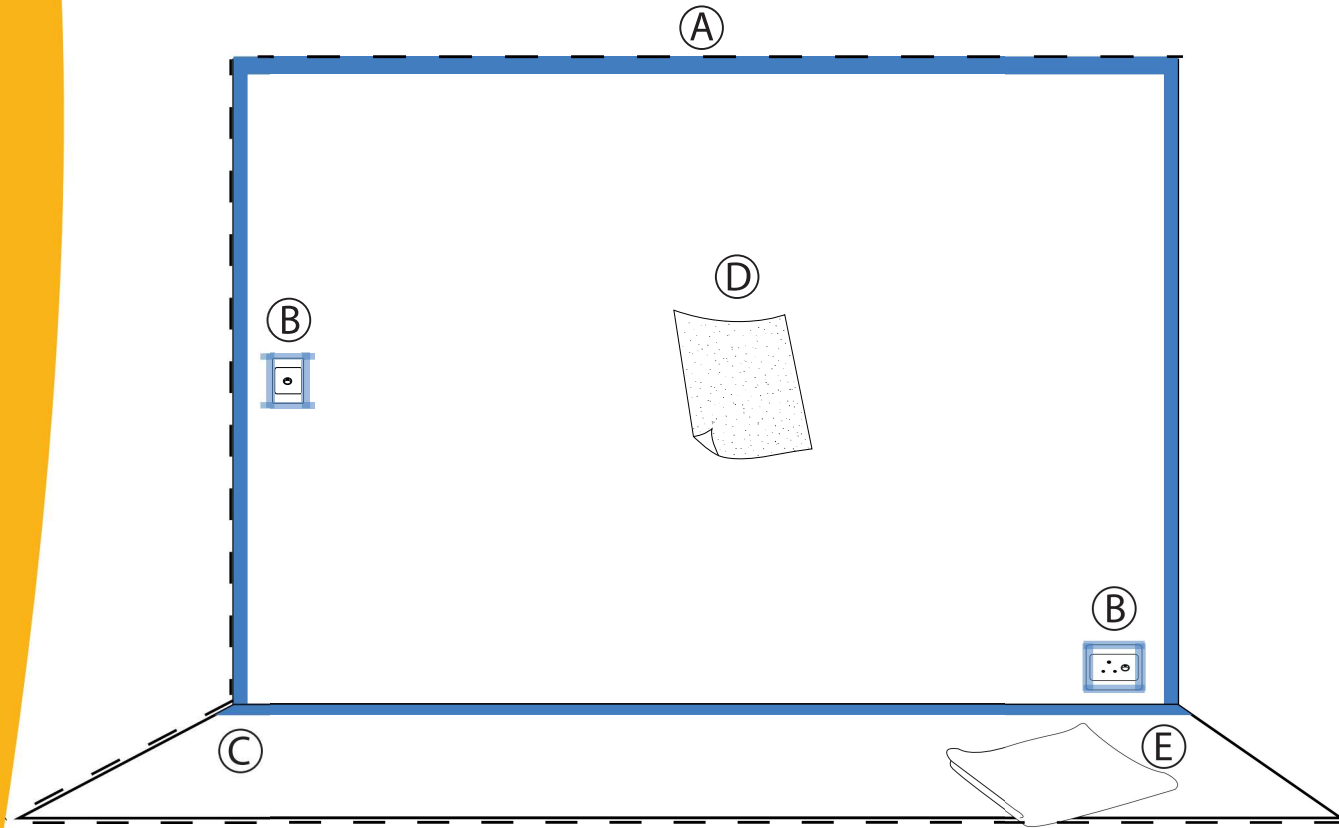


- (A) Tape off area that is to be prepared for whiteboard paint.
- (B) Tape off edges, plug points and light switches.
- (C) Lay down drop sheet.
- (D) Sand and repair problem areas of wall.
- (E) Wipe down wall with damp cloth to remove dust and give time to dry before application.

STEP 2: APPLY PREPARATION PAINT



Process Comments

Apply universal undercoat until wall is white. Dark colours may require multiple coats.

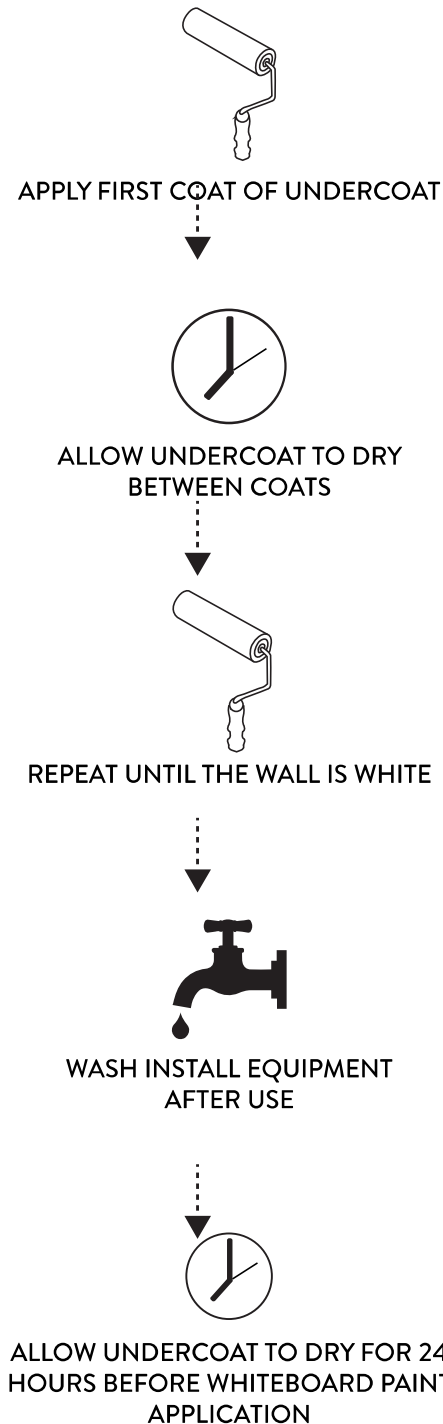

TIP

Un-primed Wall


Apply single coat of Universal Undercoat to prime the wall, and repeat until white.

TIP

Other Surfaces such as Glass, Steel, Wood etc...


Apply specialised surface primer designed for the substrate before applying the Vicinity Universal Undercoat. It is advised to test a small sample before installing your project.

STEP 3: MARK OUT SURFACE AREA

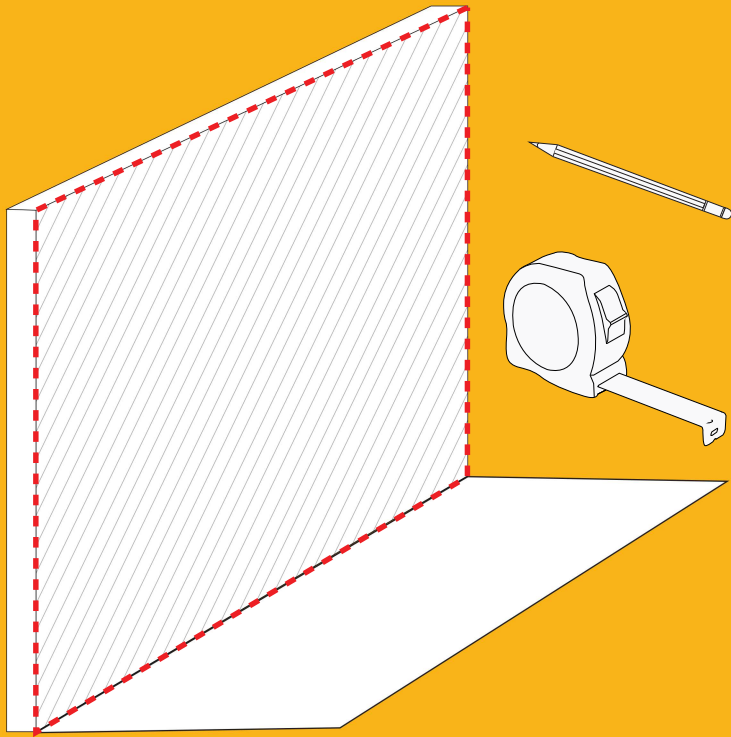

Process Comments

Measure and mark out the whiteboard paint area that corresponds with tin size you are opening

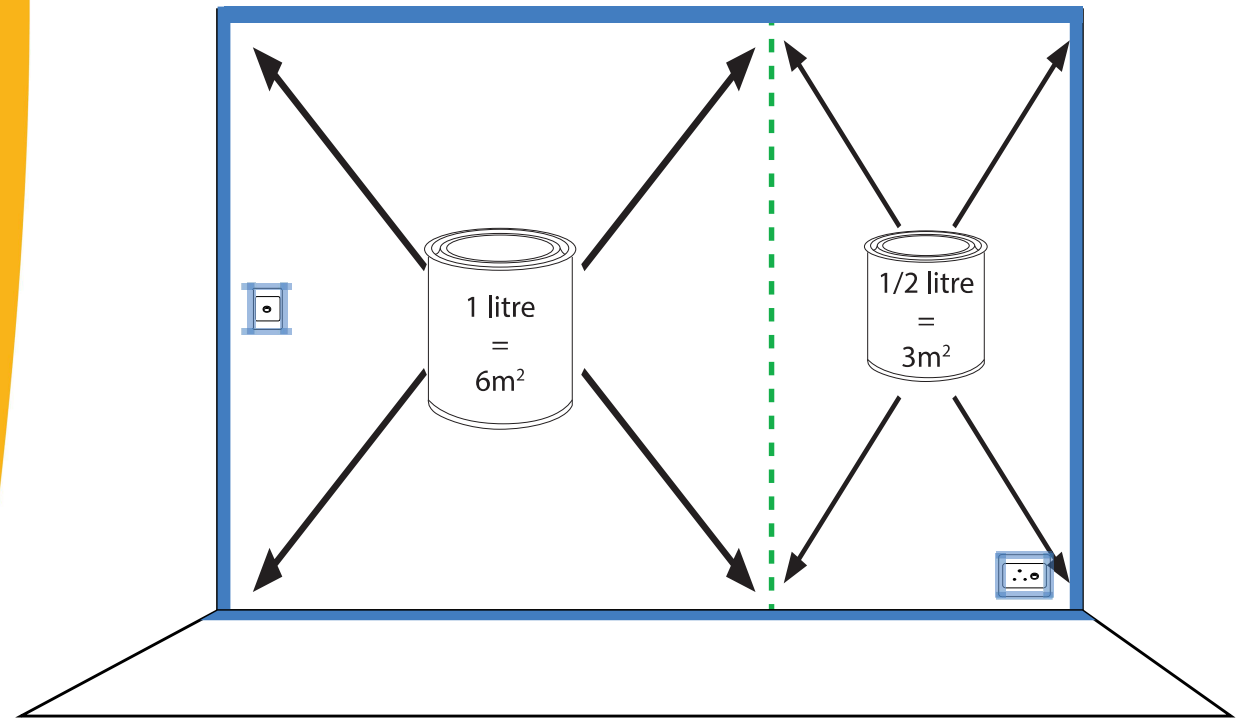


**DO NOT STRETCH THE PAINT
BEYOND THE SQUARE METER
COVERAGE SPECIFIED**


STEP 4: MIXING WHITEBOARD PAINT




① Open tins

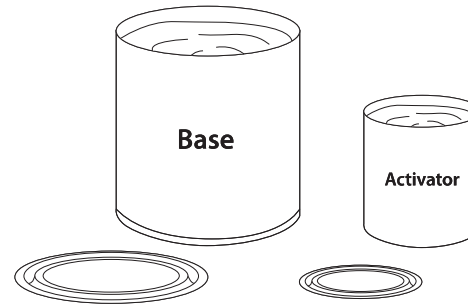


② Pour activator into base

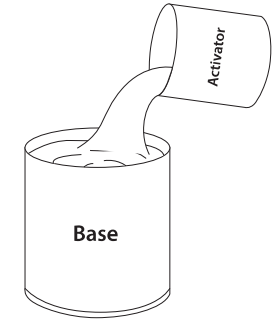

③

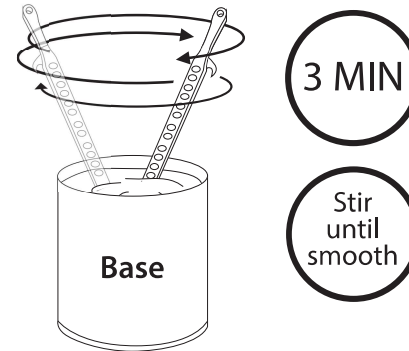


④

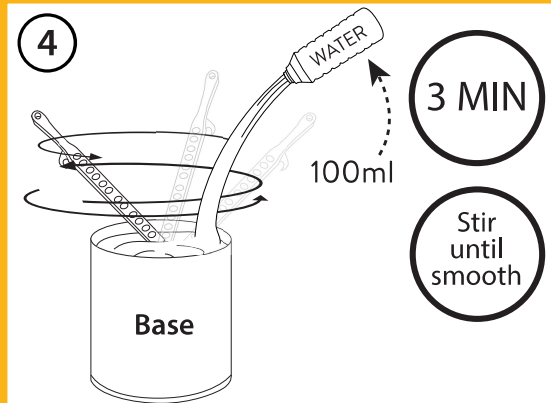

Process Comments


Mixing the tins activates the paint. Adding water thins the paint for a smoother application.

⑤

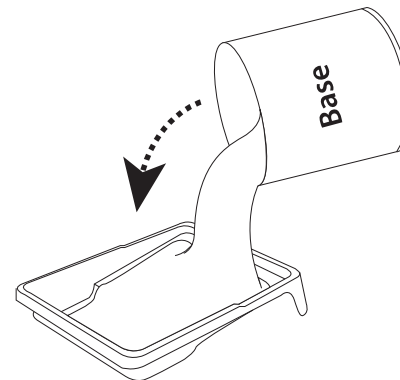



USE WITHIN
1 HOUR
OF OPENING

STEP 5: APPLY WHITEBOARD PAINT

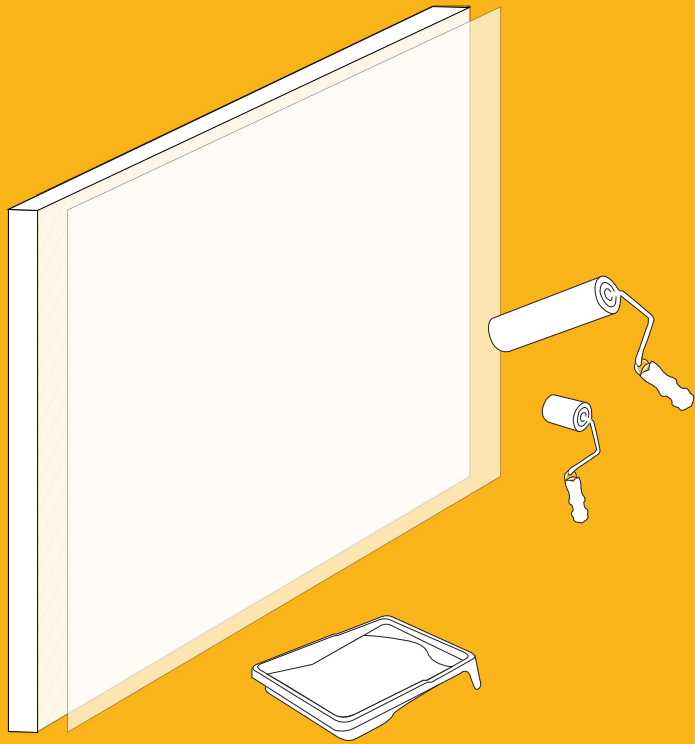


Process Comments

Cut-in 1 meter segments to prevent cut-in areas from drying before being filled in

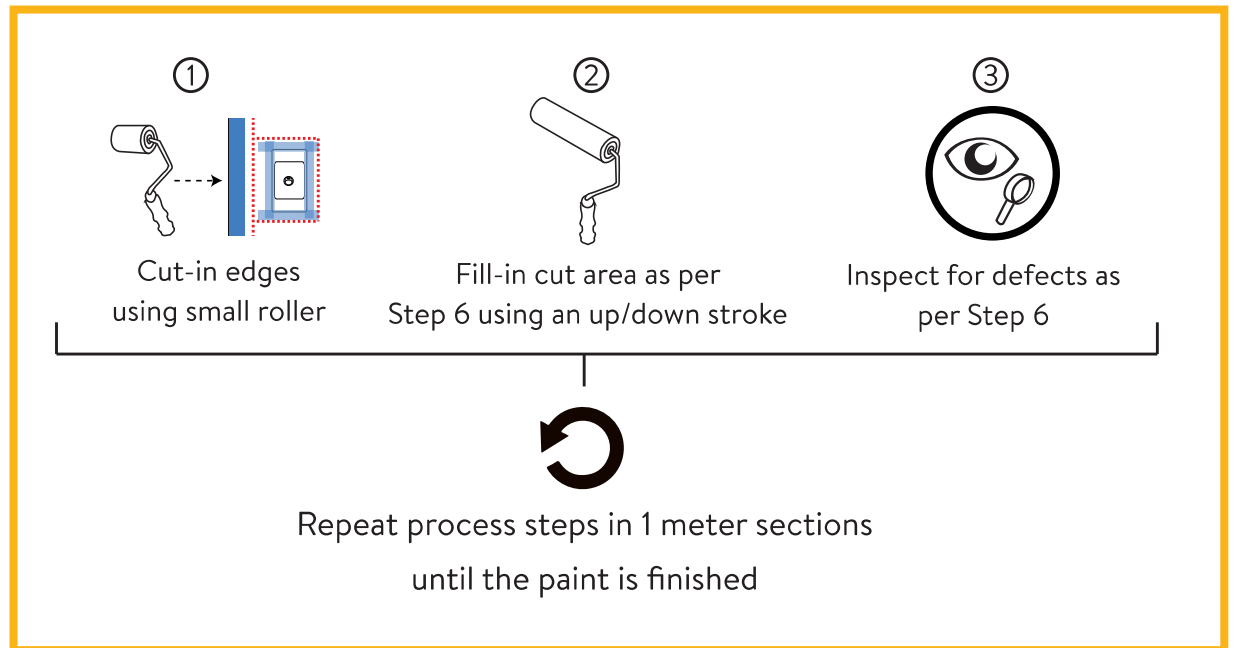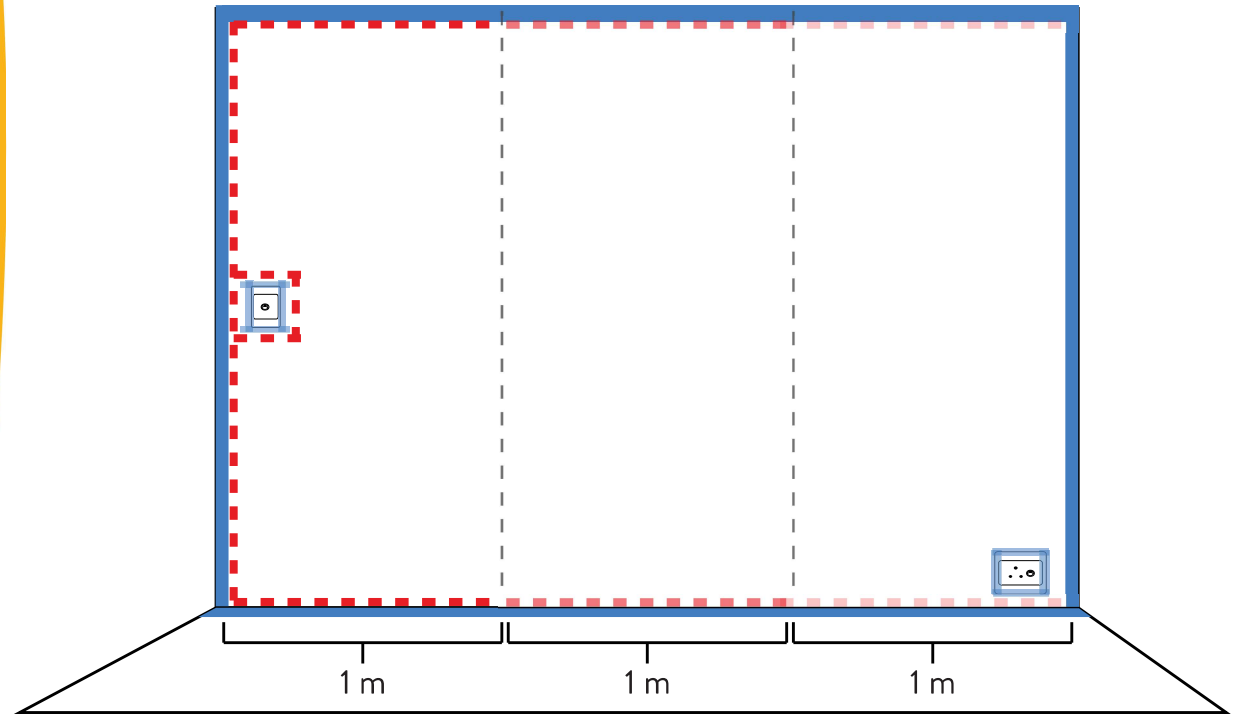

STEP 6: APPLICATION PROCESS TIPS


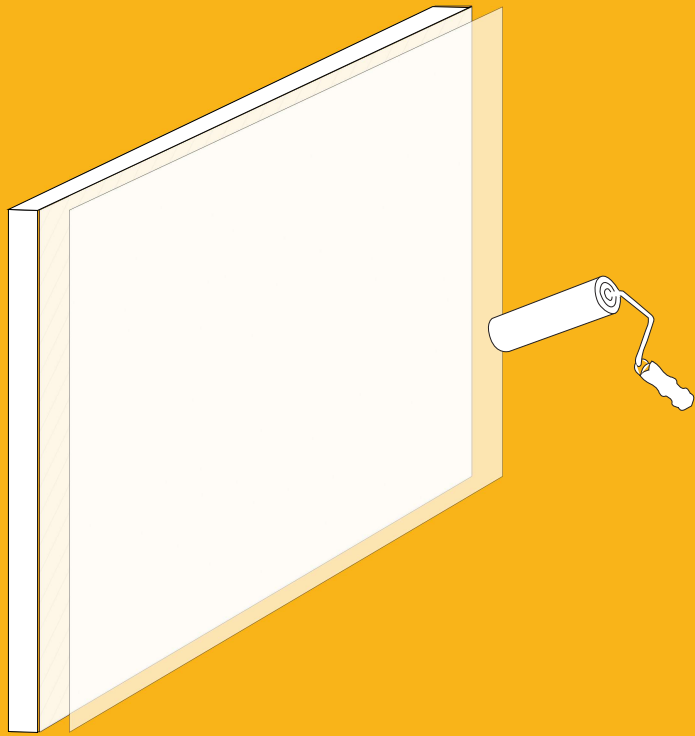


Process Comments


Apply the paint consistently and meticulously, and take your time to ensure a high quality finish.

TIP



Apply paint in a up/down direction
blending each
section as you go.

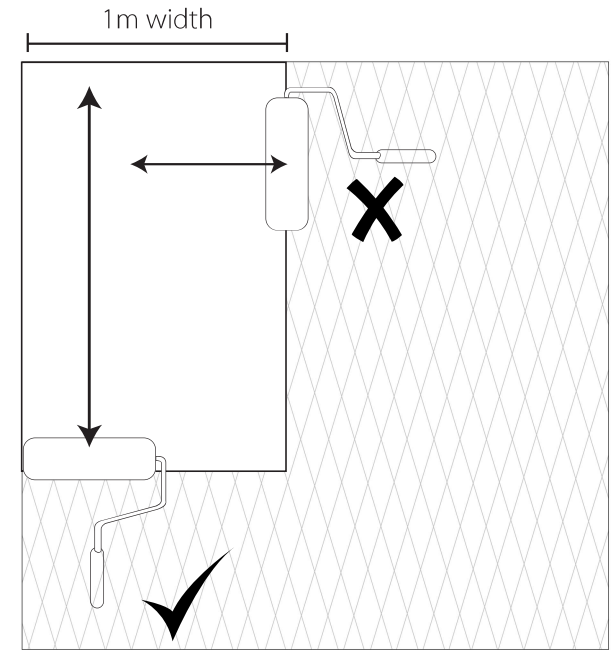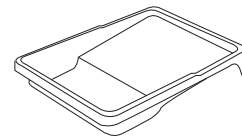

- Hairs
- Fibres
- Missed Spots

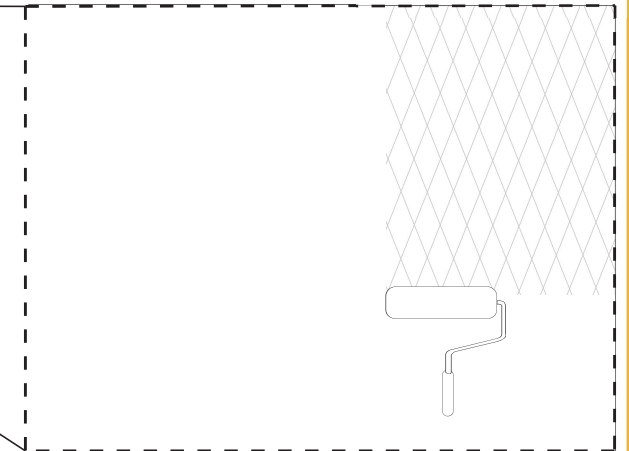

STEP 7: CLEAN UP

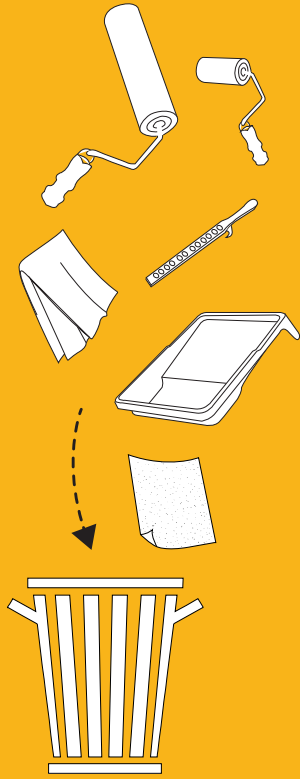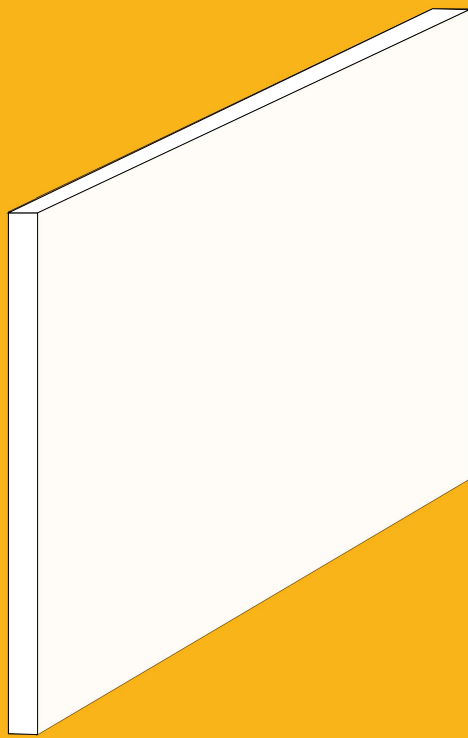

Process Comments

Remove tape before WBP dries completely. Allow paint to dry for 6 hours. Allow entire surface to cure for 5 days before use.

