

Changing XS light to be compatible for an SV Mini

1. Cut the Mini Din plug from the light cable and strip the black outer rubber back from the cable approx 20mm (Fig 1)
2. Rearrange the wires as per (Fig.2) and then trim cables to the same length.

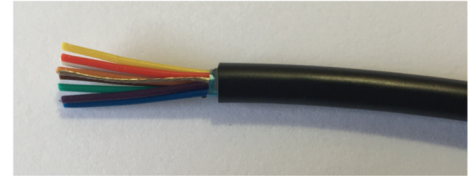


Fig 1

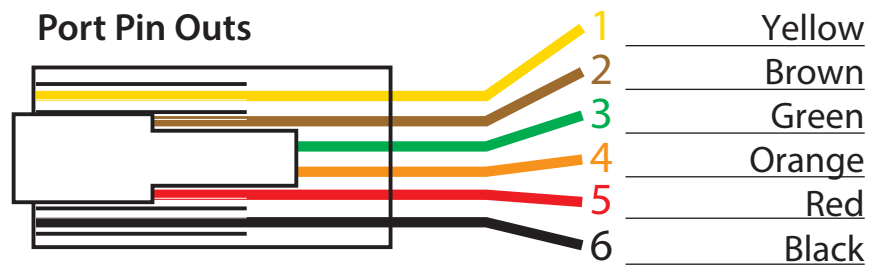


Fig 2

3. Slide the wires into the RJ12 connector. Before crimping ensure all wires are inserted all the way to the end of the plug and are in the correct order. (Fig. 3)
- Once confirmed, use a crimping tool, crimp the plug firmly.

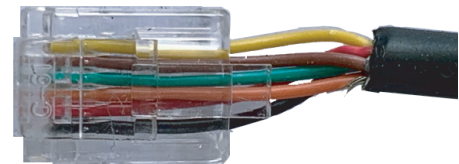


Fig 3

Crimp tool: Jaycar catalogue number TH1935

6way RJ12 plug crimps: Jaycar catalogue number PP1432

