



Speed DemonTM LIGHTS

Installation Guide for 2006-2008 F-150 20" Dual Row Bumper Mount (10-30142)

Parts Included

2 Light Brackets

Tools Required

Miscellaneous Hand Tools

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.

- Application models vary, we recommend to verify fitment before beginning installation process.
- Images featured in the instruction documents may not always exactly match your model or part.

STEP 1

Using 8mm socket remove the two lower air dam bolts.

See Figure 1.

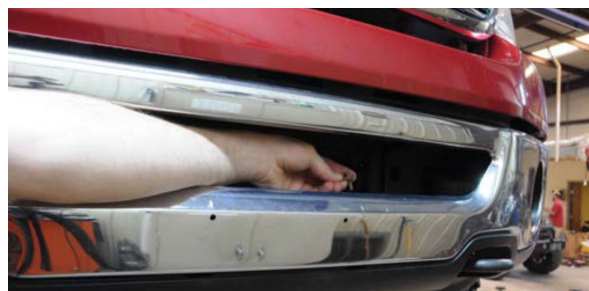


Figure 1

STEP 2

Using a 10mm socket remove the upper bumper bolts on each side.

See Figure 2.



Figure 2

STEP 3

Using a flat screwdriver, remove the factory clip nuts from the upper bumper brackets.

See Figure 3.

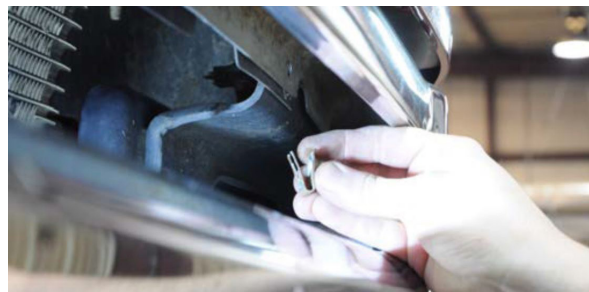


Figure 3



Speed DemonTM LIGHTS

Installation Guide for 2006-2008 F-150 20" Dual Row Bumper Mount (10-30142)

STEP 4

Place driver's side bracket in bumper.

See Figure 4.



Figure 4

STEP 5

Using factory 8mm hardware bolt mount to lower air dam.

See Figure 5.



Figure 5

STEP 6

Using supplied 5/16" bolts, nuts, and washers, bolt mount to upper bumper bracket.

See Figure 6.

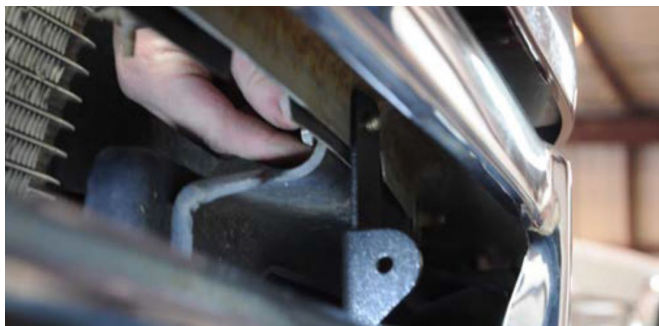


Figure 6

STEP 7

Tighten upper bolt using socket and wrench.

See Figure 7.



Figure 7



Speed Demon LIGHTS™

Installation Guide for 2006-2008 F-150 20” Dual Row Bumper Mount (10-30142)

STEP 8

Tighten lower air dam bolt with 8mm socket.

STEP 9

Slide light into bumper from bottom and bolt to driver's side bracket with supplied light hardware.
Do Not Tighten.

STEP 10

Bolt passenger side mounting bracket to light with supplied light hardware.
Do Not Tighten.

STEP 11

Repeat steps 5, 6, and 7 for passenger side bracket.

STEP 12

Adjust light position. Using supplied Allen wrench tighten light bolts on driver and passenger side.

See Figure 8.



Figure 8

STEP 13

Wire light bar using Speed Demon wiring harness (10-30030).