

Speed Demon[™] LIGHTS

Installation Guide for Dodge Ram 1500 2019-2022 20" Dual Row Bumper Mounts (10-30268)

Parts Included

2 Bumper Mounts

Tools Required

Miscellaneous Hand Tools

PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS BEFORE INSTALLATION.

- Application models vary, we recommend to verify fitment before beginning installation process.
- Images featured in the instruction documents may not always exactly match your model or part.

STEP 1

Using a clip removal tool or a flat screwdriver, unclip the filler panel from inside the front bumper.

See Figure 1.



Figure 1

STEP 2

Using a 10mm socket, remove the bolt from the top of the air dam support bracket. Retain hardware for reuse.

See Figure 2.

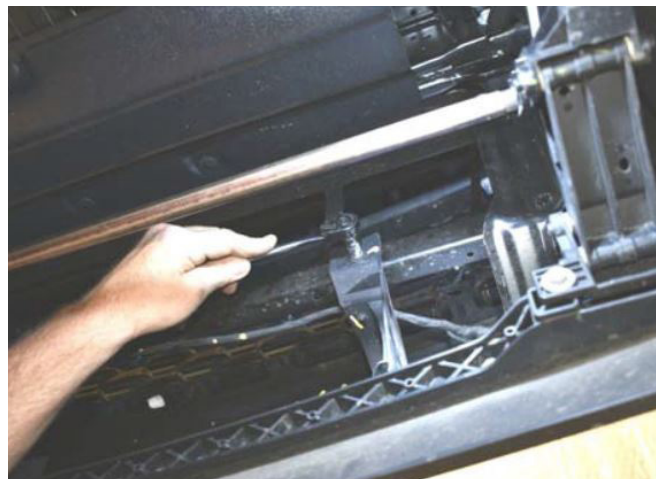


Figure 2

Speed Demon[™] LIGHTS

Installation Guide for Dodge Ram 1500 2019-2022 20" Dual Row Bumper Mounts (10-30268)

STEP 3

Remove the push pin from the front of the air dam. Retain for reuse.

See Figure 3.

Figure 3



STEP 4

Remove the push pin from inside the front bumper. Retain for reuse.

See Figure 4.

Figure 4



STEP 5

Remove the air dam bracket.

STEP 6

Remove the filler panel from the bumper.

See Figure 5.

Figure 5



Speed Demon[™] LIGHTS

Installation Guide for Dodge Ram 1500 2019-2022 20" Dual Row Bumper Mounts (10-30268)

STEP 7

Using a 13mm socket, remove the bolts from the bumper brackets on each side of the truck. Retain for reuse.

See Figure 6.



Figure 6

STEP 8

Install the supplied light brackets into the front bumper. Using the factory hardware. Do not tighten at this time.

See Figure 7.



Figure 7

STEP 9

Install the light bar, between the brackets, using the hardware supplied with the light and tighten the light mounting bolts using the Allen wrench supplied with the light. (You will not use the brackets supplied with the lights, only use these brackets).

Speed Demon[™] LIGHTS

Installation Guide for Dodge Ram 1500 2019-2022 20" Dual Row Bumper Mounts (10-30268)

STEP 10

Center the light and tighten the bumper mounting bolts using a 13mm socket.

See Figure 8.



Figure 8

STEP 11

Wire the light using SD part #10-30030 with harness.

STEP 12

Install the air dam support bracket using the factory bolt and push pins. Tighten using a 10mm socket.