ASSEMBLY INSTRUCTIONS FOR FRAMED CANVAS ART




STEP 1

ASSEMBLING FRAME



Frame package arrives with:

- 4X Frame Segments
- 2X Allen Head Keys
- 4X Corner Assembly Joints (with Allen Head screws)
- 4X Corner Assembly Joints (flat)
- 2X Wall Mount Brackets
- 4X Wall Screws
- 4X Plastic Drywall Anchors (optional use)

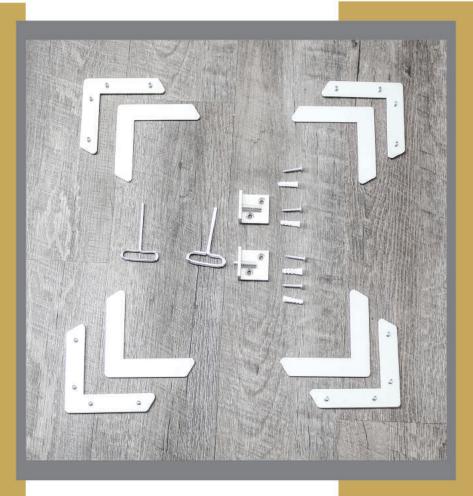




Lay out the 4 frame pieces
on the floor or a soft, smooth
surface to avoid frame
scratches.



Stack the Corner Assembly


Joints together. Position the


Joint with the screws on top.

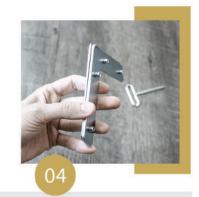

Position the Joint with the screws on top.







Ensure the corners are flush with no gaps between the union of frame segments.

Tighten all 4 Allen Head screws with supplied Allen Head Key for each frame segment. Once frame is fully assembled, proceed to instructions for INSTALLING CANVAS FABRIC.

support@artbyanaluca.com

support@artbyanaluca.com

ASSEMBLY INSTRUCTIONS FOR FRAMED CANVAS ART



STEP 2
INSTALLING CANVAS
FABRIC

Notice silicone strip around edge of canvas fabric. This silicone strip inserts into assembled frame.







Position silicone strip pointing down into groove of frame. Use fingers to press silicone edge of canvas fabric into groove of metal frame to secure canvas in frame.

















support@artbyanaluca.com

ASSEMBLY INSTRUCTIONS FOR FRAMED CANVAS ART




STEP 3 MOUNTING FRAME ON WALL

01

Two Wall Mount Brackets are needed to hold one frame.


Frame arrives with 2 metal Wall Mount
Brackets, 4 Wall Screws, and 4 optional
Drywall Anchors. These additional tools
are helpful: level, tape measure,
hammer, pencil, screwdriver.

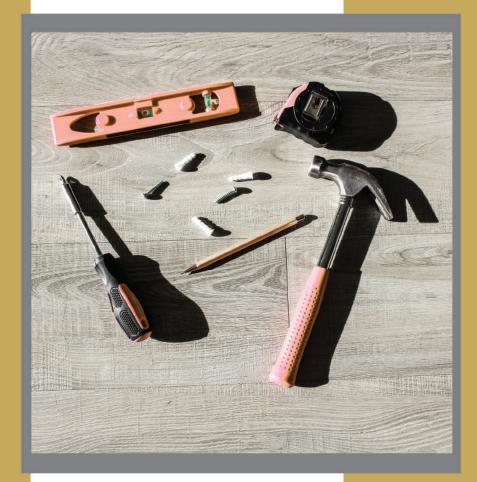




Position the Wall Mount Bracket on the wall.

Use Allen Key to twist the screw up to protrude about 1 cm high from the top of the Bracket.

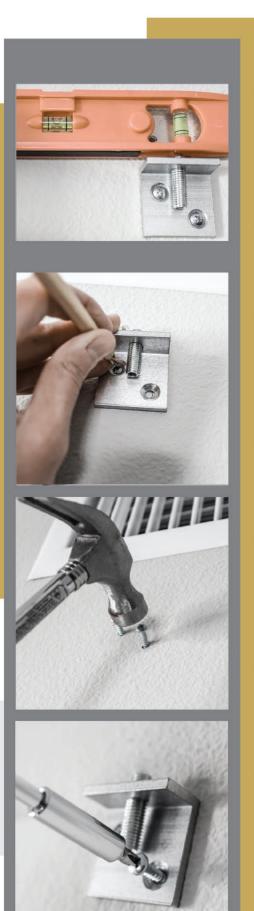







OPTIONAL:


If you desire to use the supplied Drywall Anchors with the screws, use your screwdriver to create a hole in your wall. Hammer the Drywall Anchor into the hole. Then use a screwdriver to twist the screw into the Anchor. Anchors create added weight support by expanding inside the wall as the screw is inserted.

Insert second screw into your second marked position to secure other side of Bracket on wall.

support@artbyanaluca.com support@artbyanaluca.com









Repeat steps 2-5 for second Wall Mount Bracket, placed about 2 inches to the side of your first Bracket.



Hang the framed art by inserting the screws projecting up from the Wall Mounted Brackets under the rim of the frame. The frame has a groove designed to balance on the Bracket screws. Twist the screw of one or both Wall Mount Brackets up or down to adjust alignment of your hung frame as desired.

CARE INSTRUCTIONS FOR CANVAS ART

- **DO NOT** machine wash fabric measuring over 8 ft (96") in each direction. Instead, wipe with a damp lint free cloth.
- **DO NOT** store canvas tightly sealed or creased. Softly fold over original packaging material or roll.



Canvas fabric may be machine washed in cold water on a delicate cycle or dry-cleaned if preferred. Wash separate from other items.



Woolite detergent is recommended for washing canvas fabric.



Once wash is complete, tumble dry on low heat/ delicate setting.



Any wrinkles should subside after one day in the frame. A fabric steamer may be used if needed. DO NOT IRON.