


## Metal Foot Install

A. Insert one end into the hole (with chain slot ) above rubber foot



B. Insert another end into the opposite hole

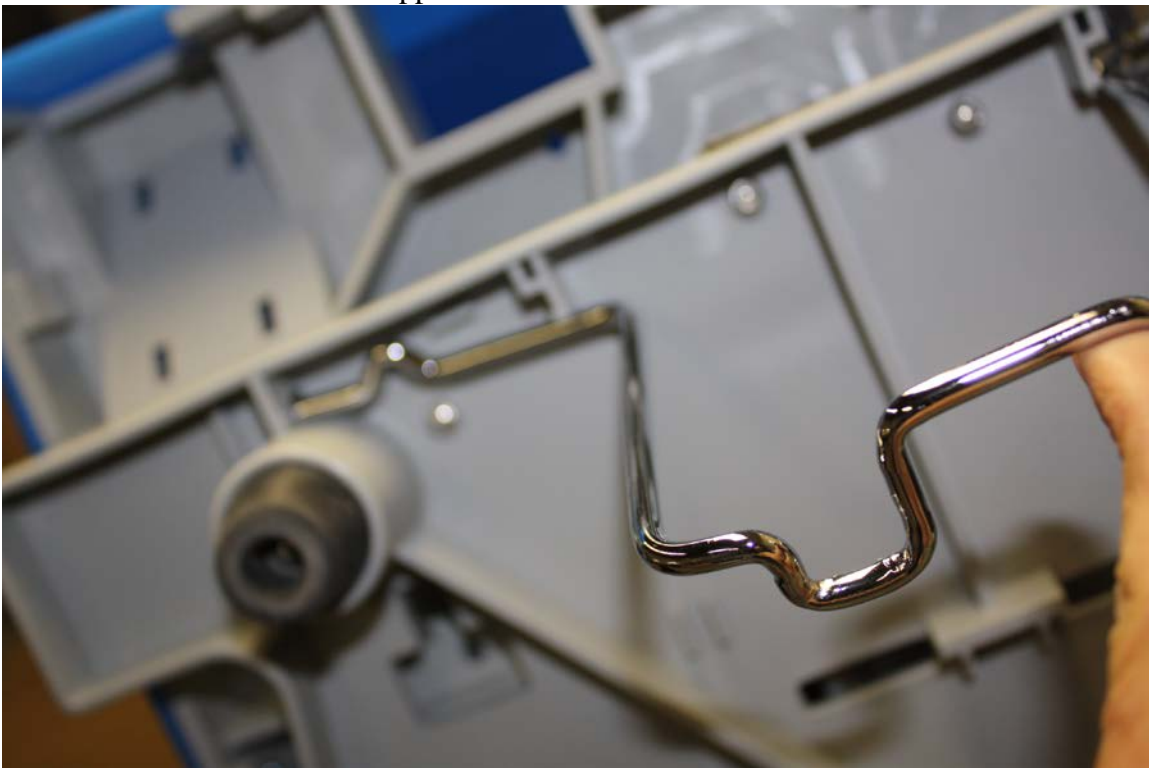

C. Make sure the metal foot in place



D. Fold the metal foot below the oscillation plate

