




***BoonDocker***  
***PERFORMANCE***  
***Polaris Axys Fuel System Upgrade  
Installation Instructions***


# **BoonDocker Axys Turbo**




1. Bend throttle body lock rings slightly until the ends overlap.

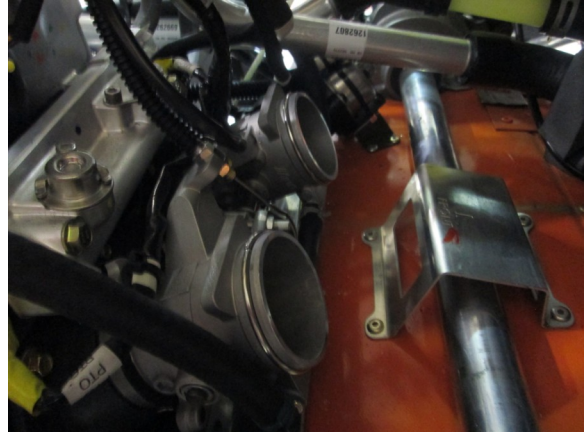

2. Snap lock rings onto throttle bodies.

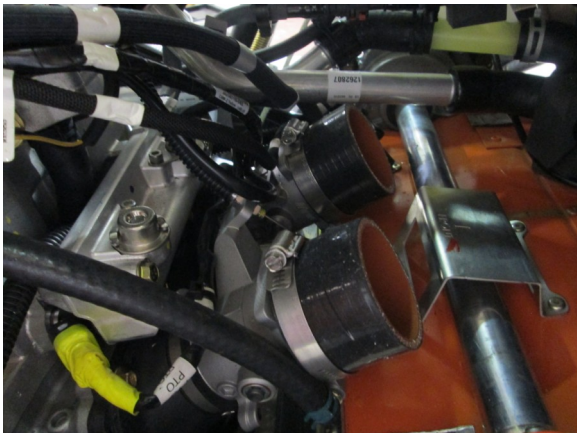


3. Install silicone onto throttle bodies and tighten hose clamps. Make sure the lock rings stay in place and that the silicone and clamps are positioned all the way forward.

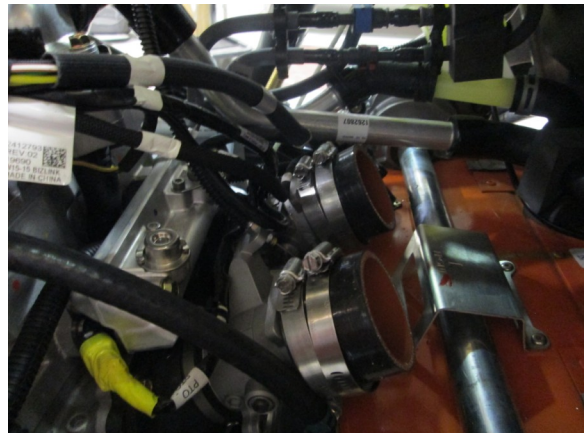

4. Set the air box hose clamps loosely onto the silicone.




5. Start the air box into place. Make sure the throttle cable is on the left hand side of the inlet tube.

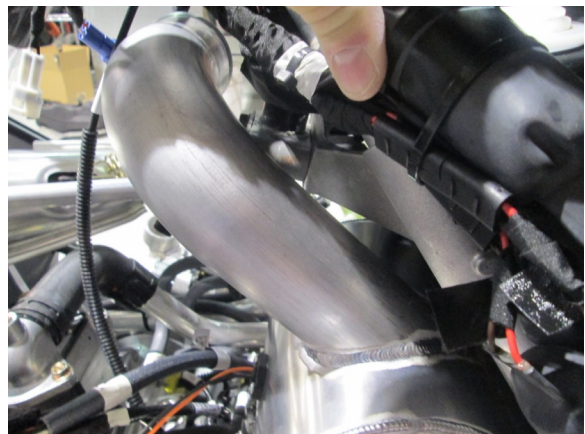


6. Position the air box in the silicone to maintain clearance from the steering bulkhead.


# **BoonDocker Axys Turbo**

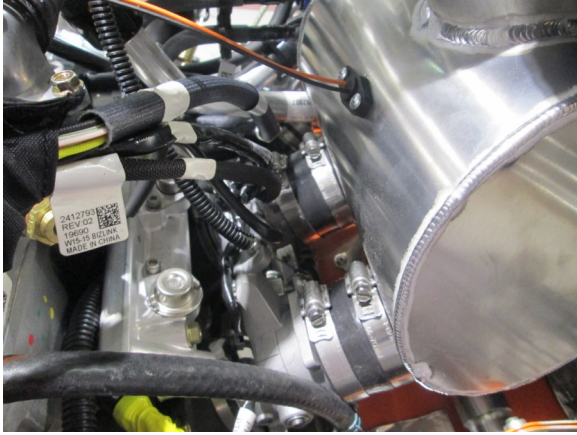


7. Tighten hose clamps.

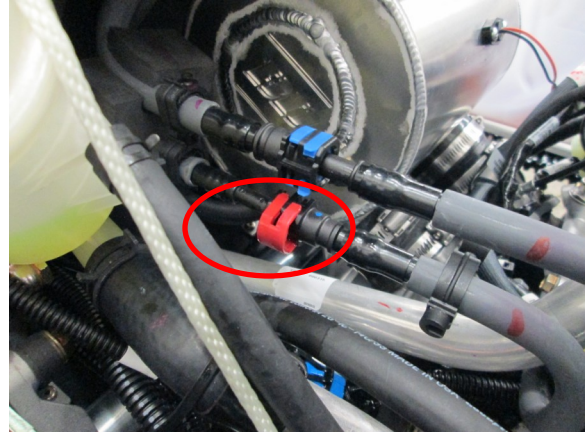


8. Unhook the red fuel line.

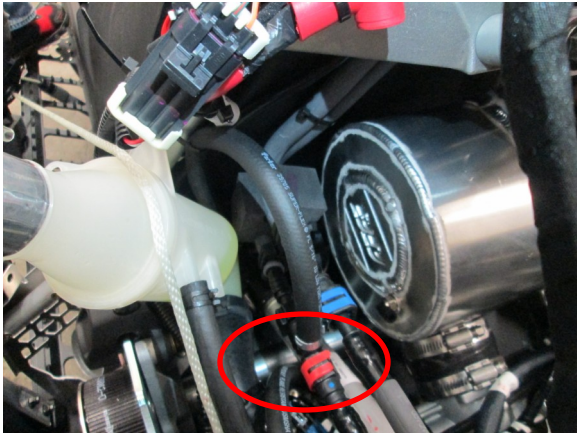


9. Install the fuel line from the auxiliary injectors on the left side of the red clip.

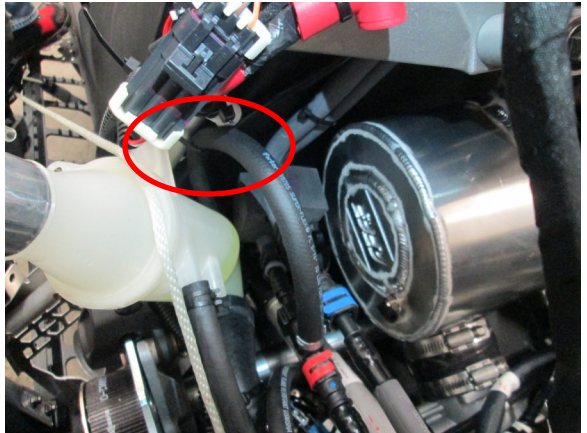

10. Zip tie the fuel line to the upper subframe. Be sure to not overtighten the zip tie and kink the fuel line.

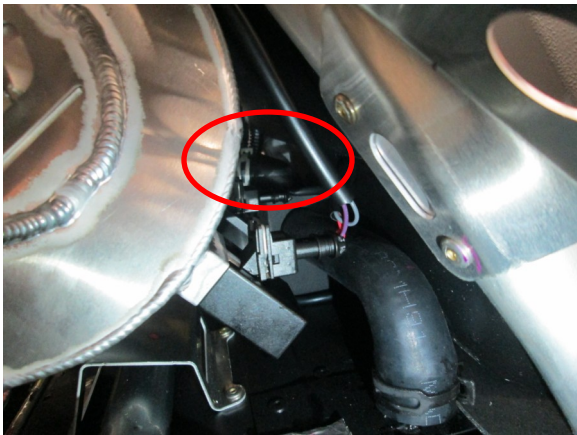

11. Attach the auxiliary injector harness to the farthest back injector first.

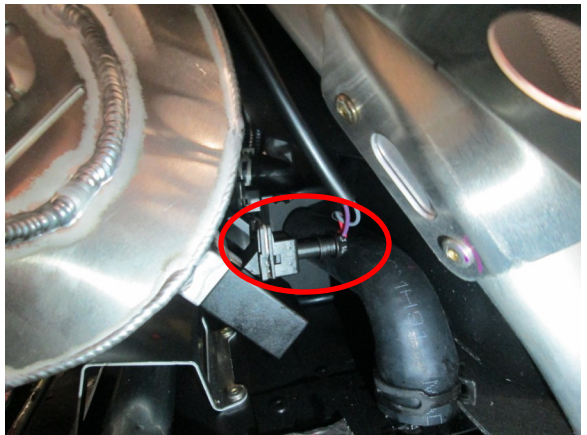

12. Attach the auxiliary injector harness to the closer injector. Your fuel system upgrade is now installed.