





1. Remove hood, plastic center piece & T40 bolts from top of console Shroud.

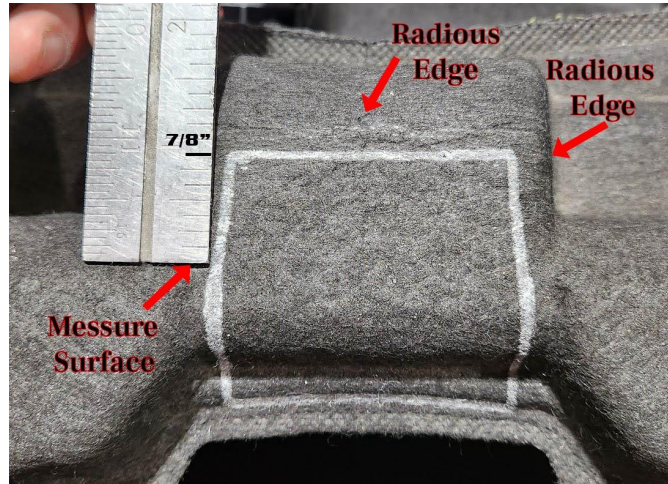

2. View is from sitting on the snowmobile. Mark Felt air intake as shown in image leaving radius Edges to ensure box strength. Cut using a sharp Utility or pocket knife.



3. Fold foam over edge of intake box to ensure foam is in place for installation. foam is pre-cut to relieve stress on the fold.

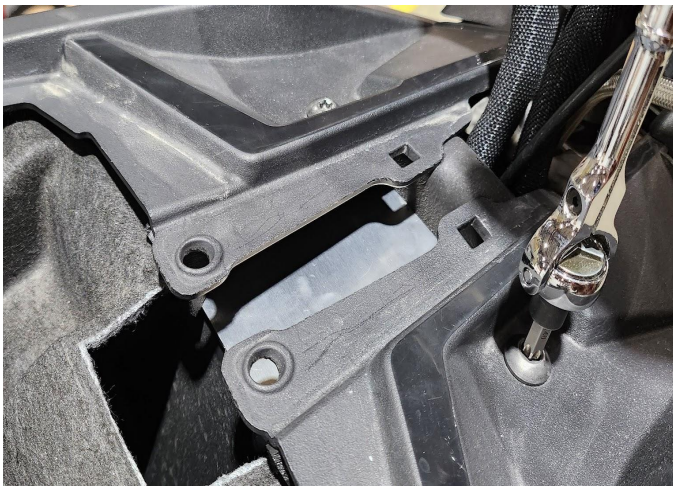

4. Install intake box with factory T40 Bolts.



5. Place Breathe right Intake vent in place ensuring back locking tabs are slid under switch/key plastic. Install factory push darts.



6. Pressing vent frame firmly down until it is fully seating to plastic and install the 4 T25 Bolts provided with your vent.

