

INSTRUCTIONS

Pull Rope Heat Shield



*Fits:
2019+ Polaris Patriot 850*



Thank You
for Buying



Made in the USA

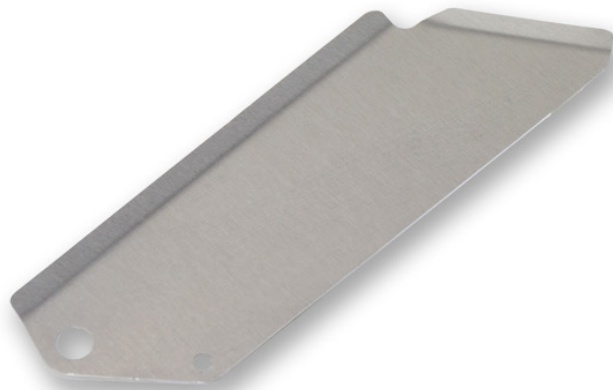


Table of Contents

Contents

INSTRUCTIONS	1
Contents List.....	3
Disassembly	4
Installation	6

Contents List



Pull Rope Heat Shield

Possible KIT variations:

NA

Possible KIT variations:

Initial Tear Down



Using 13 mm socket and T40 torques bit, remove nut from assembly.

Initial Tear Down



Remove guard pin from assembly.

Install Heat Shield



Place heat shield on bolt as shown.

Install Heat Shield



Re-Install setpin as shown.

Re-Assembly



Tighten nut and bolt back into place.