


Tools




Includes:  
1x NOR710

All dimensions in mm

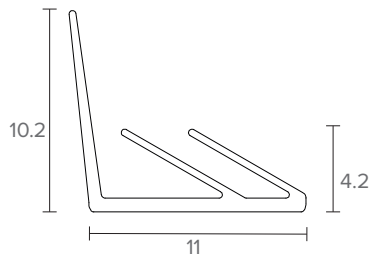

Colour	Code/Length
White	NOR710/W-2100 NOR710/W-3000
Black	NOR710/BK-2100 NOR710/BK-3000
Brown	NOR710/B-2100 NOR710/B-3000
Grey	NOR710/G-2100


**1**

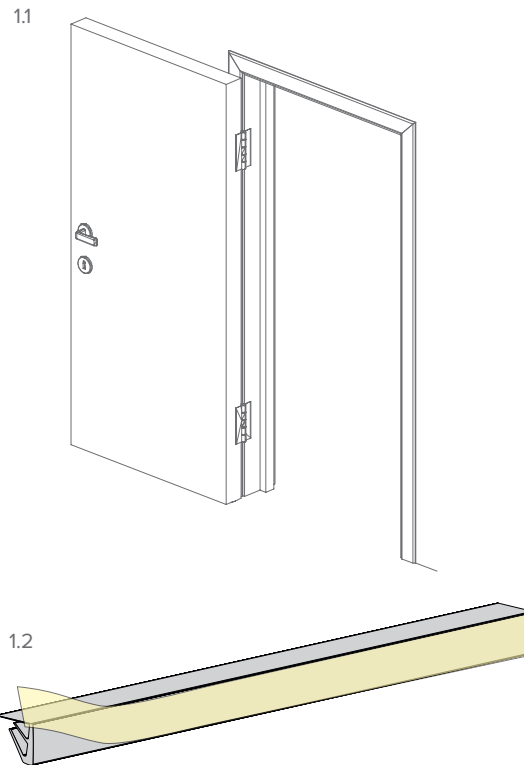

**1.1** The NOR710 must be fitted with the door fully opened with the frame completely free from dirt and dust.

**1.2** Peel off the backing to reveal adhesive edge.

**2**

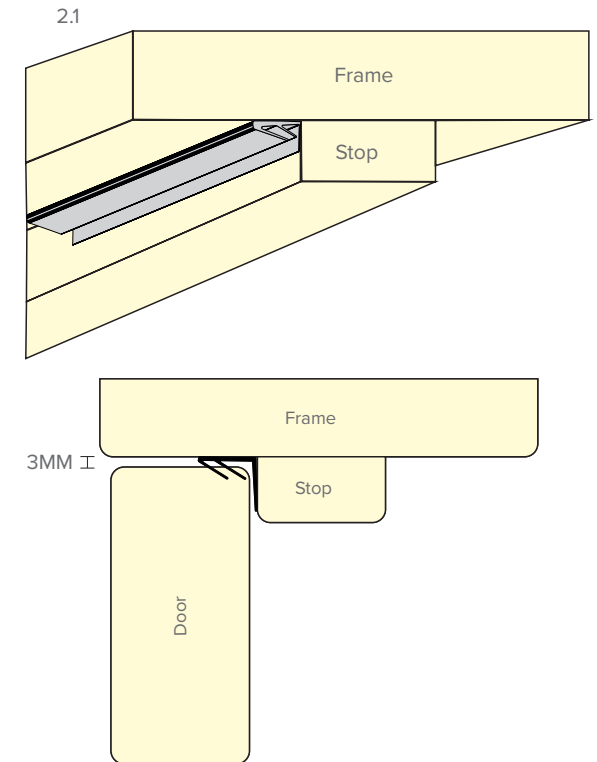

**2.1** Place adhesive edge on the frame with the rear blade against the door stop. Fit the NOR710 from the top to the bottom of both sides then fit to the top ensuring the rear blade is against the door stop. Trim to size with a sharp knife. Ensure the gap between the door and frame is 3mm

NOTE: The NOR710 may also be fitted with the adhesive edge on the door stop.