


INSTRUCTION MANUAL

Montessori Floor Bed



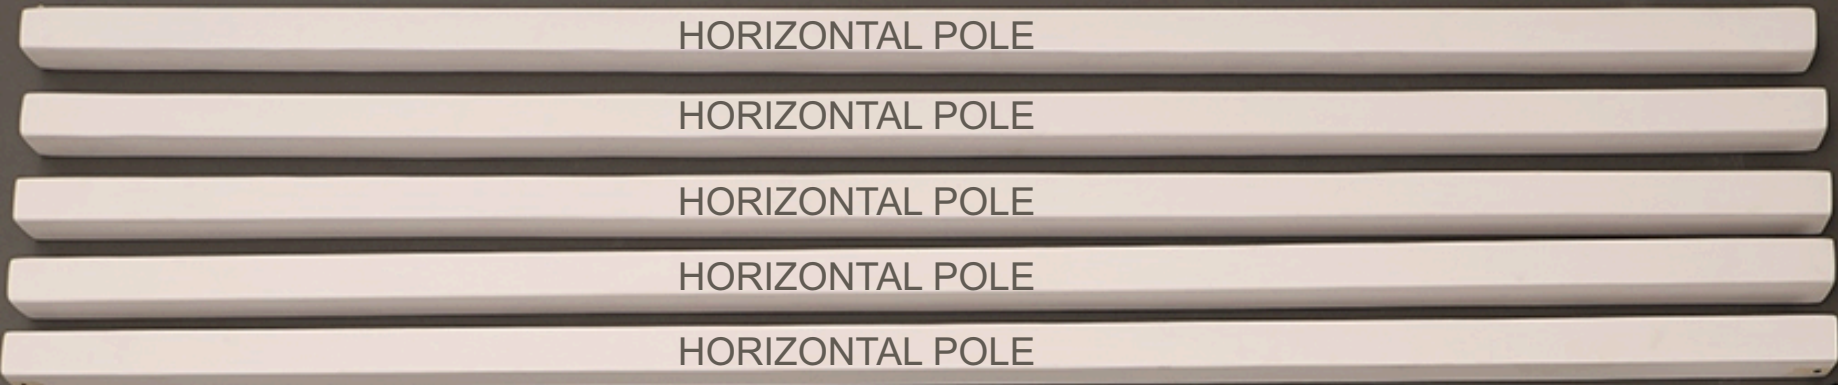


HORIZONTAL POLE

HORIZONTAL POLE

HORIZONTAL POLE

HORIZONTAL POLE

HORIZONTAL POLE

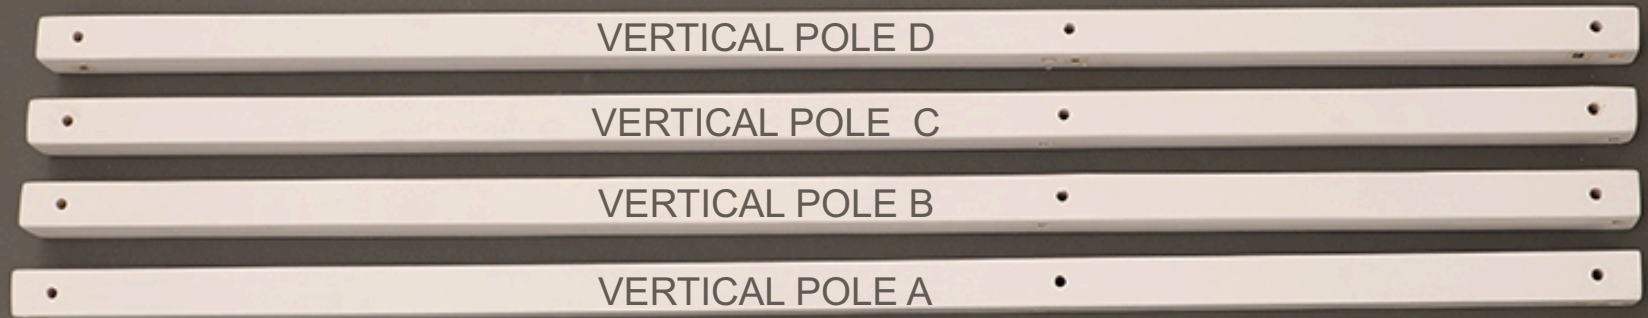


VERTICAL POLE D

VERTICAL POLE C

VERTICAL POLE B

VERTICAL POLE A

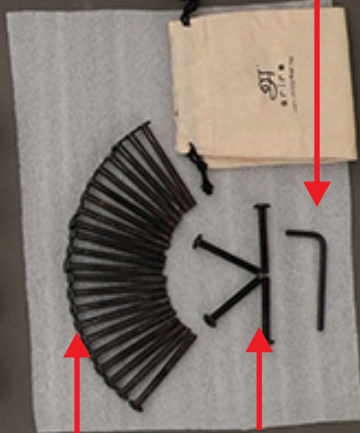

ALLEN KEY

22 LONG
SCREWS

4 SMALL
SCREWS




SHORT ROOF POLE

SHORT ROOF POLE

LONG ROOF POLE

LONG ROOF POLE

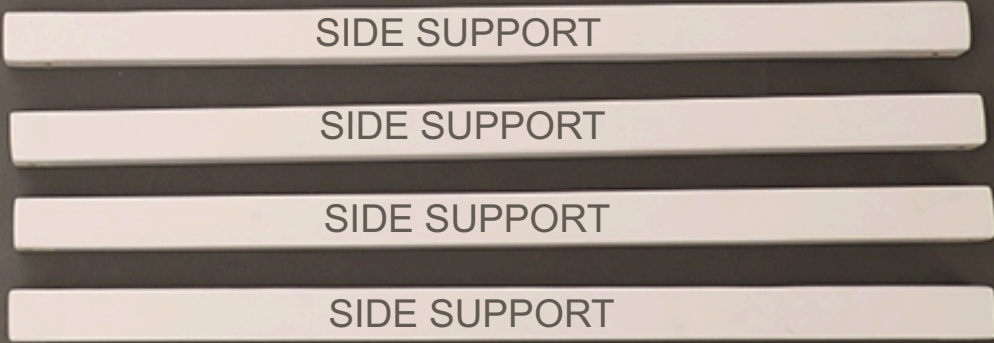

SIDE SUPPORT

SIDE SUPPORT

SIDE SUPPORT

SIDE SUPPORT





TOP ROOF POLE

**DURING ASSEMBLY MILDLY SECURE IT THROUGH THE PROCESS
ONCE YOU COMPLETE THE ASSEMBLY YOU CAN SECURE IT TIGHTLY**

STEP 1


PLACE THE VERTICAL POLES AND SIDE SUPPORT AS SHOWN IN FIG 1 AND GENTLY SECURE THEM WITH GIVEN LONG SCREWS THE DIRECTION SHOWN BELOW

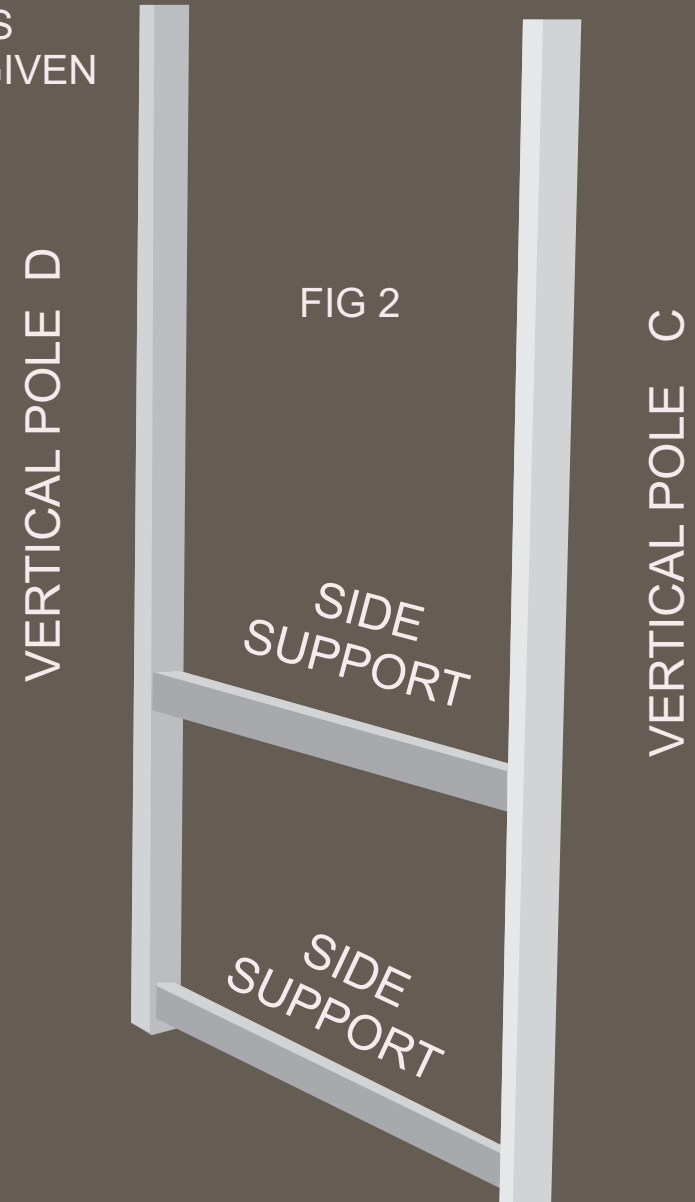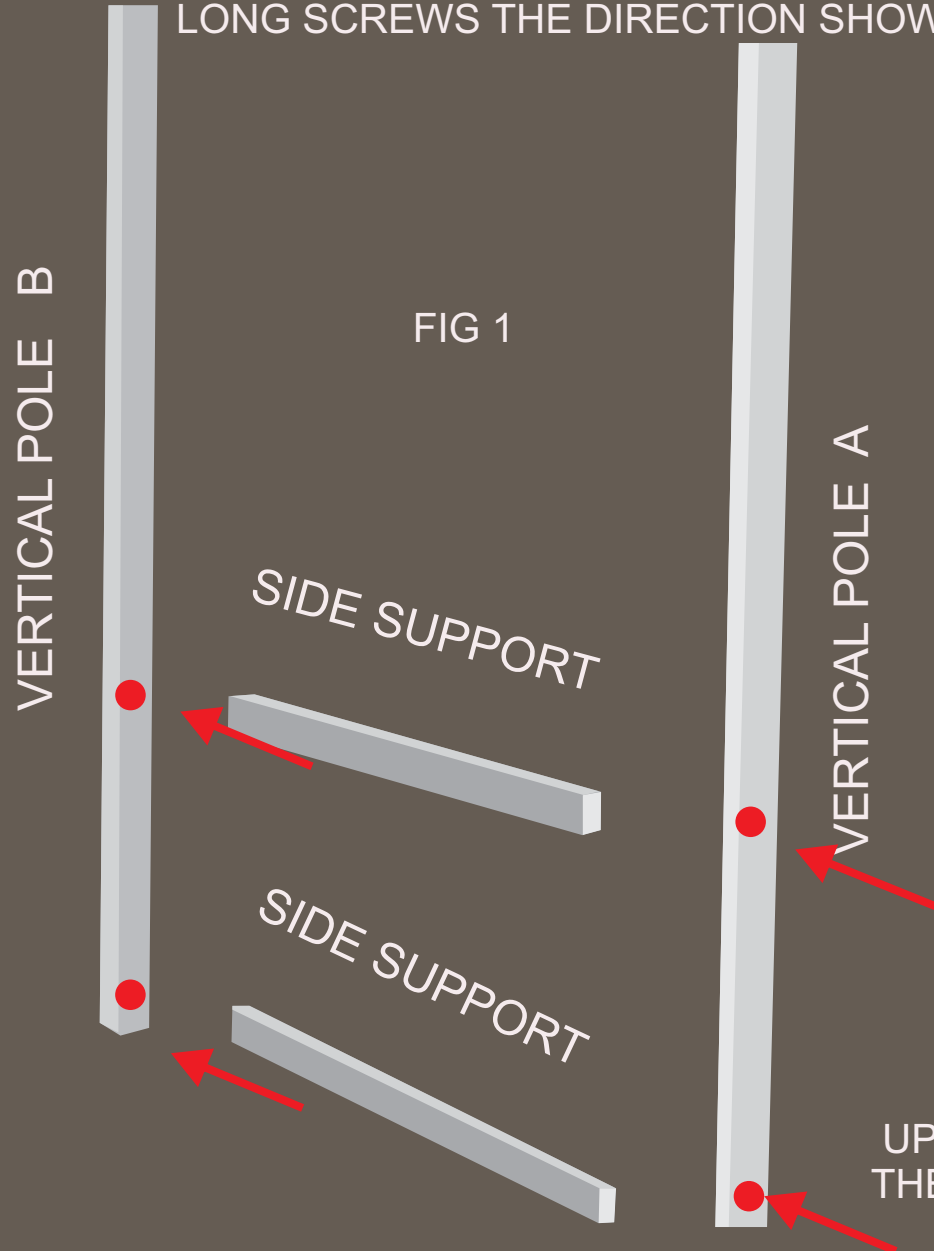

UPON COMPLETION IT SHOULD LOOK LIKE FIG 2. REPEAT THE SAME WITH VERTICAL POLE C AND VERTICAL POLE D. YOU WILL HAVE TWO FRAMES LIKE IN FIG 2

STEP 2

PLACE THE HORIZONTAL POLES AS SHOWN IN THE IMAGE BELOW AND GENTLY SECURE THEM WITH LONG SCREWS IN THE **DIRECTIONS MARKED BY ARROWS**

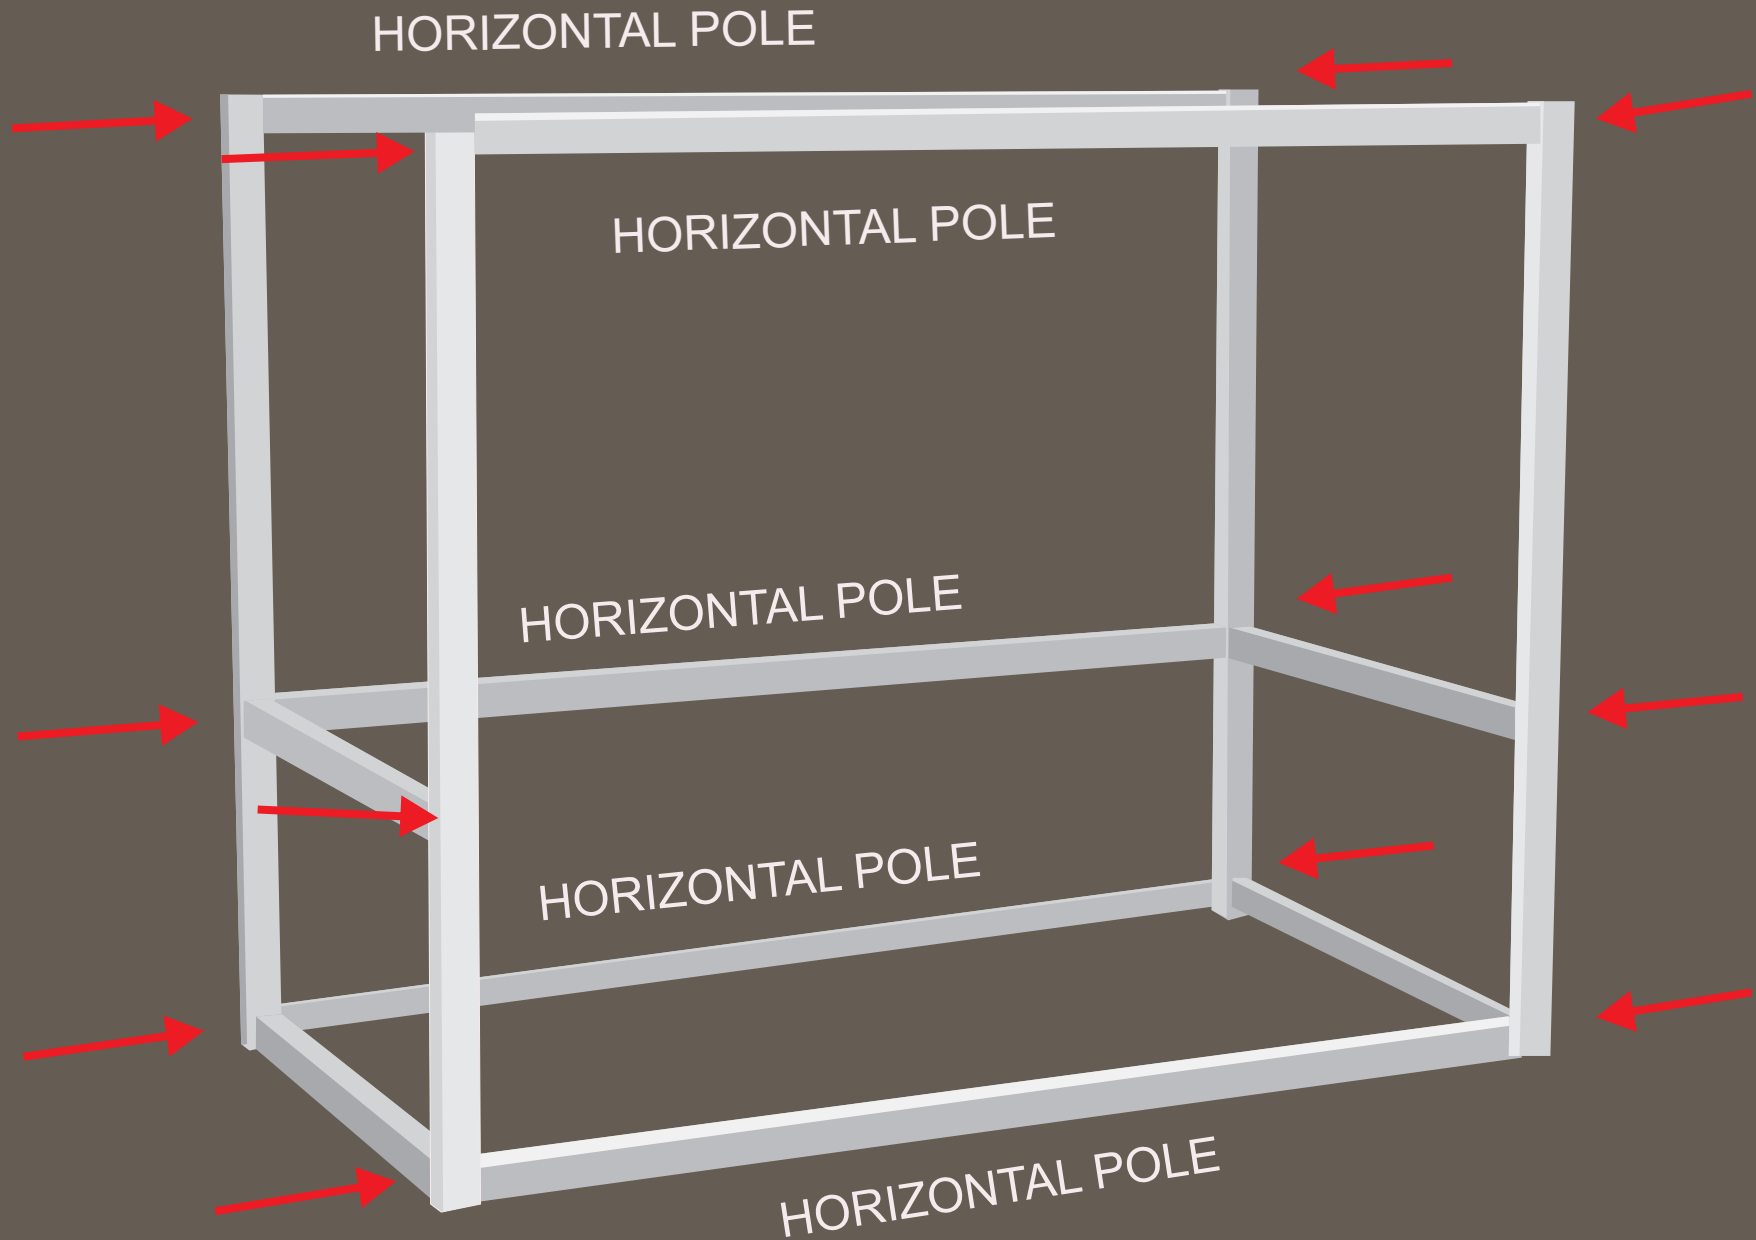


STEP 3


PLACE THE SHORT ROOF SUPPORT POLE ON ONE SIDE AND LONG ON THE OTHER SIDE AS SHOWN. MAKE SURE THAT BOTH SHORT AND LONG IS PARALLEL TO EACH OTHER



STEP 4

NOW USE THE TOP SQUARE POLE AND PLACE IT AS SHOWN BELOW AND SECURE THEM GENTLY WITH GIVEN LONG SCREWS

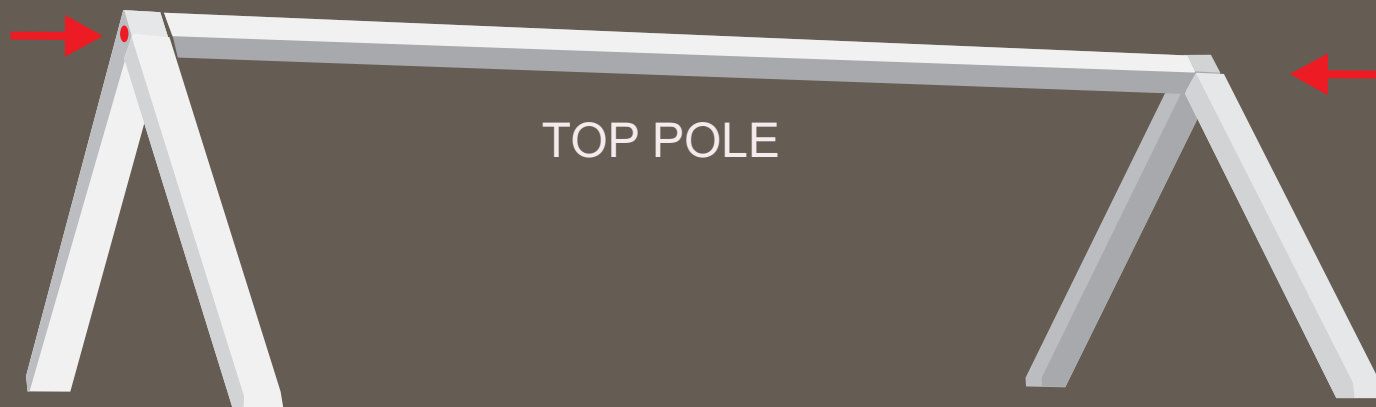

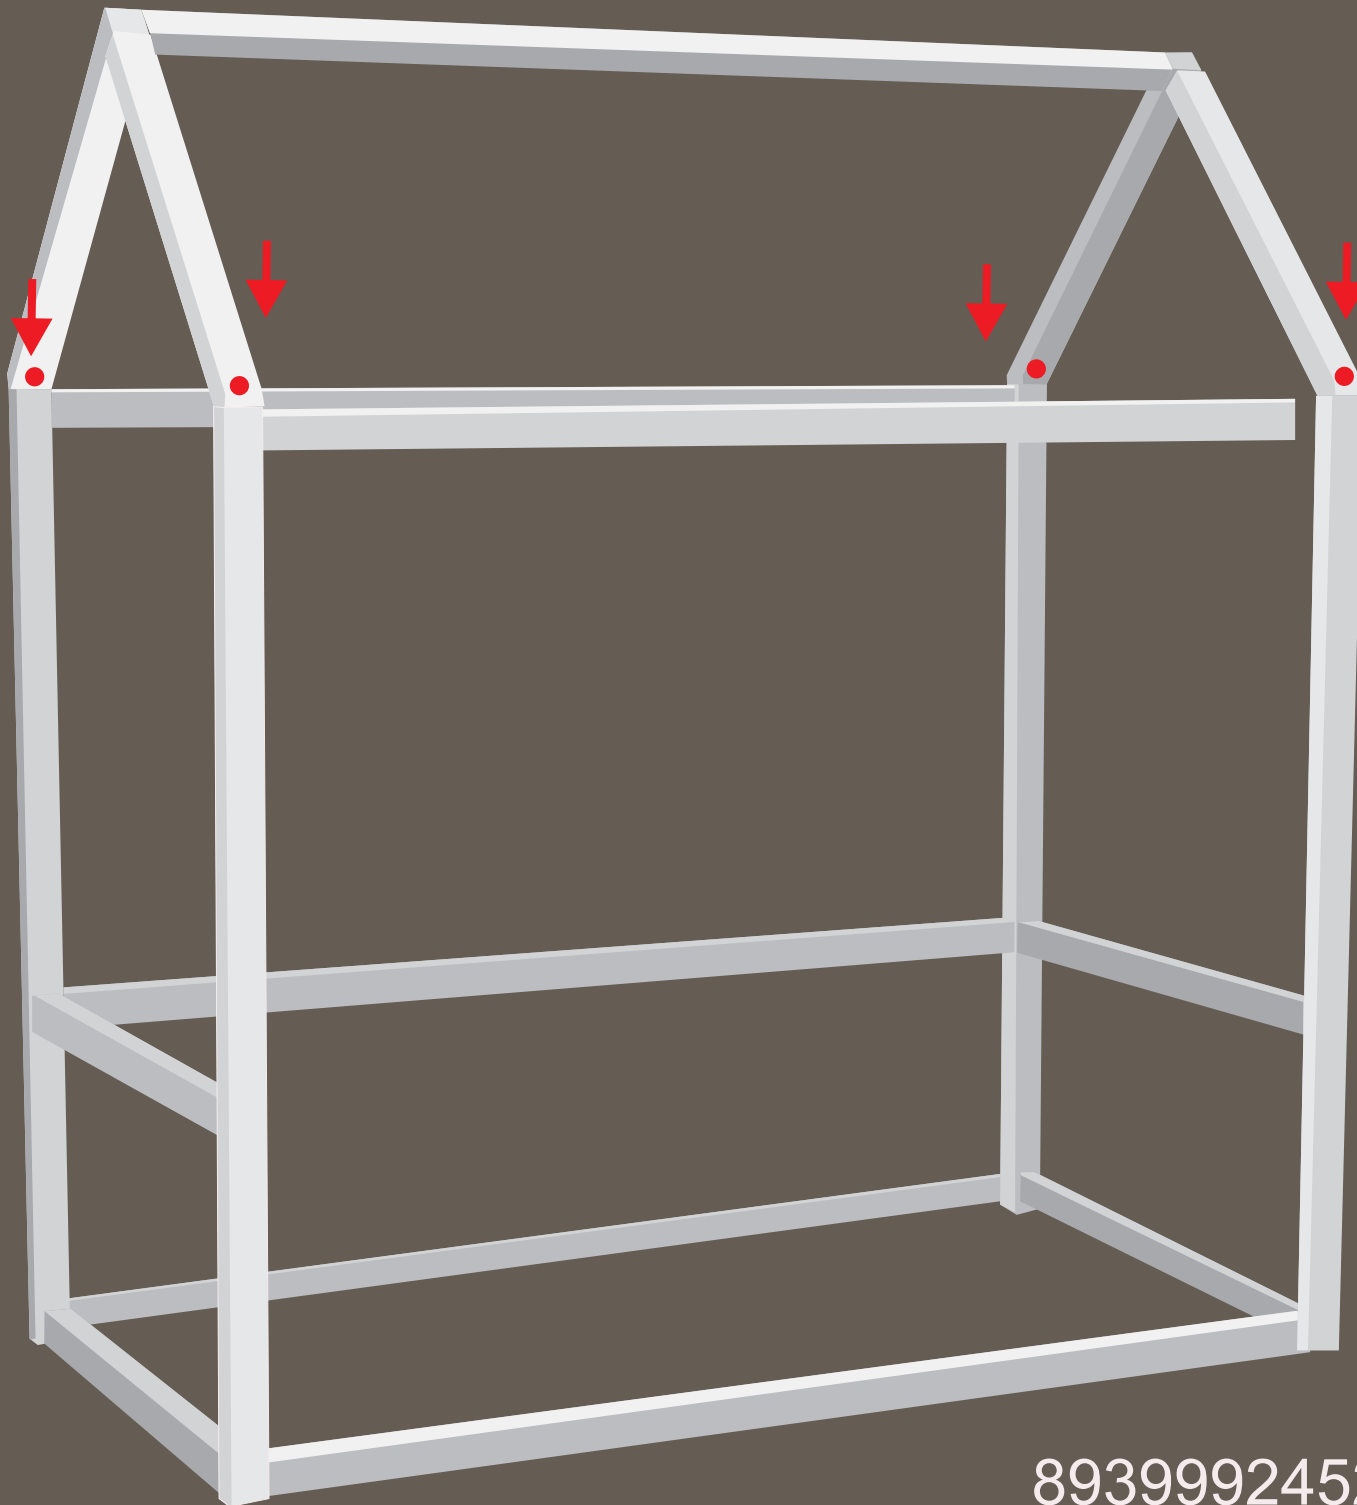

STEP 5

NOW PLACE THE ROOF
PORTION ABOVE THE
PREVIOUSLY ASSEMBLED
MAIN UNIT AND SECURE
THEM WITH GIVEN
SMALL SCREWS IN THE
DIRECTIONS HIGHLIGHTED

www.ariotoys.com
8939992452/ help@ariotoys.com