

TUK TUK – THE TRICYCLE

INSTRUCTION MANUAL



STEP 1

INSERT THE FRONT WHEELBASE TO
TUK TUK BASE UNIT AS SHOWN IN
THE PICTURE.

STEP 2

ENSURE IT IS COMPLETELY
INSERTED AS SHOWN IN THE
PICTURE



STEP 3

INSERT THE HANDLEBAR UNIT
INTO THE TUK TUK BASE UNIT AS
SHOWN IN THE PICTURE.

**NOTE: ENSURE BOTH THE SCREW
HOLES INLINE**


STEP 4

NOW USE THE SHORT SCREW HERE



STEP 5

USING THE SMALL ALLEN KEY
GENTLY SCREW IT

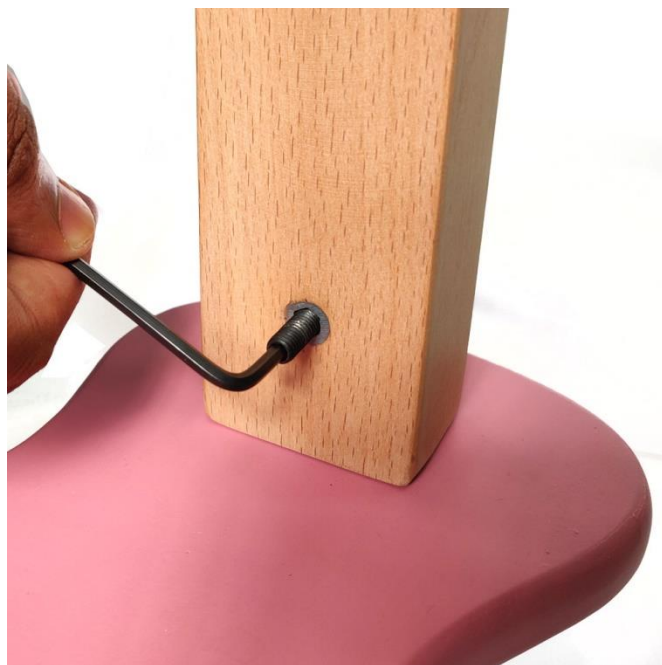

STEP 6

ON COMPLETION IT SHOULD LOOK
LIKE THIS



STEP 7

NOW PLACE THE BACKREST AS
SHOWN IN THE PICTURE AND USE
THE LONG SCREWS HERE

STEP 8

USE THE LONG SCREW AND USING
ALLEN KEY GENTLY SECURE IT



www.ariotoys.com

89399 92452/ help@ariotoys.com