


## Instruction Manual

# Traditional Push Wagon

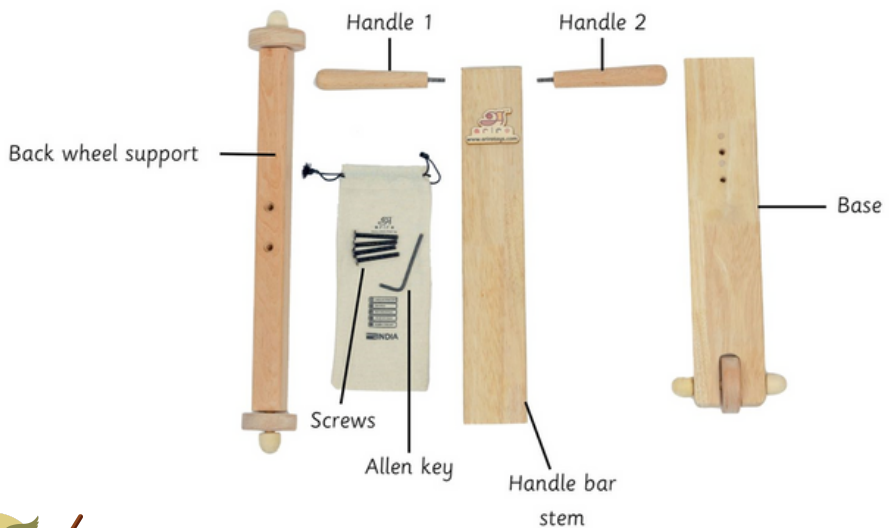

## Note

- We suggest 1 person to take charge of the assembly.
- Assembly takes 4 - 5 minutes.
- Unwrap the Traditional Push Wagon parts and place them as shown in the image for convenient assembly.
- Secure all screws mildly during assembly. Tighten after you complete the assembly.

## Step - 1

Place the back wheel support on the base.  
(As shown in the picture)




## Step - 2

Insert screws into the **Back Wheel Support and Base**.  
Fasten the screw. Do not Tighten yet.



## Step - 3


Insert two screws at the **Bottom of the Base** and hold the screw firmly with your fingers. Bring the **Handlebar Stem** to this base and place it on the screws, the screws will retract back. Fasten the screws. Do Not Tighten Yet

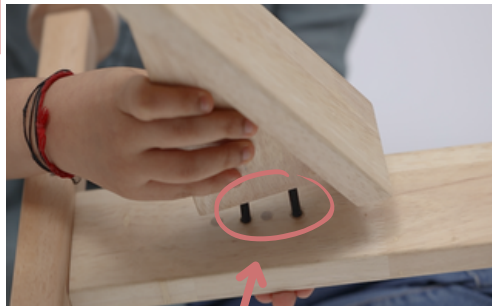

Insert two screws in the base  
from bottom as shown

## Step - 4

Ensure the **Handle Bar Stem** is positioned in the center of the base.

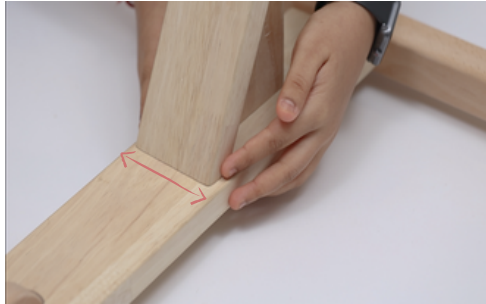

## Step - 5

Flip the base

Now tighten the screws with the Allen key.



## Step - 6

Tighten the screws on the back wheel.

Make sure all the wheels are evenly placed on the ground.



## Step - 7

Screw in the handlebar and tighten them as shown in the picture. *Do not overtighten them.*



Your Traditional Push Wagon is ready for the little one to vroom around.



Thank you for getting me home!

[www.ariotoys.com](http://www.ariotoys.com)  
89399 92452/ [help@ariotoys.com](mailto:help@ariotoys.com)