## Sound Assassin Installation JL 4 door

- Determine where the strips will go as shown in the below pictures (some strips must be cut).
- Installation will be done with the hard top on the Jeep. You do not have to remove it.
- Clean area with Acetone where Sound Assassin strips will attach (sanding not necessary)
- Peel a few inches of the brown paper off back of Strips and stick in place. Once one end is stuck straighten out the other end and pull the rest of the brown paper off sticking the entire strip.
- Roll down strip with included roller (If the white roller comes off the handle just pinch the little teeth on one side of the roller and slide it back on handle).

No Strips go in the Small sections between the Mid & rear sections.



Front panel (both are done the same).


Use 2 full pieces in the longer spots.

Cut one piece to fit in the smallest spot. Cut the salvage from that in two and lay in curved spot.





Cut 2 pieces on each side to fit in the longer spots. Use the piece cut off to fill in the shorter spot.

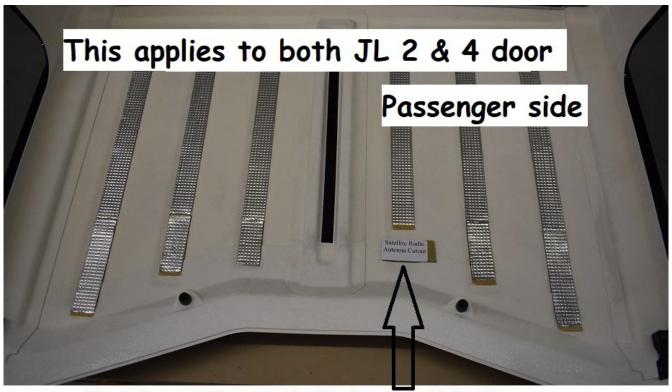

Do not go all the way to the front on this piece as it may interfer with Satilite Radio Reception.