

Sound Assassin Installation, Rear Section: Top & Side.

Tools needed: Sissors & provided seam roller.

1. Clean 2" upper recessed groves with acetone (do not scuff).
2. Scuff & Clean side area if you have the Small. Side Panels
3. Install 2" strips of Sound Assassin on inside top of hard top as in Pic A (strips will have to be butted together in rear section of hard top). Do not go all the way to the front on the center most strip on the Passenger side as it may interfere with Satellite Radio Reception (see Pic A).
4. Install 2" strip of Sound Assassin in each side piece as in Pic B (only install sound assassin strips in side areas if you have the Sm Side Panels for cover the strips of sound assassin).
5. Front Freedom panel sound assassin install see Pic D.


VERY IMPORTANT: Sound Assassin strips do not go under 3M tape (see Pic C).

Pic A




Do not go all the way to the front on this piece as

Pic C

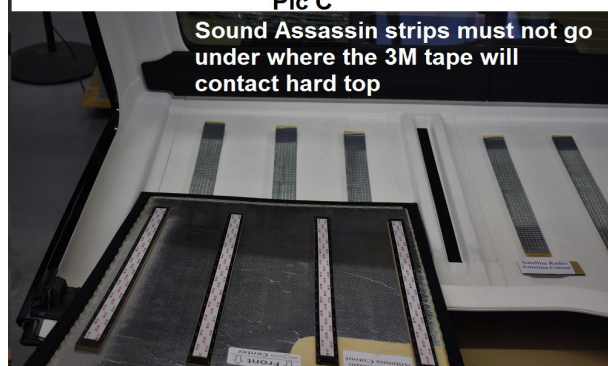

Sound Assassin strips must not go under where the 3M tape will contact hard top

Pic B

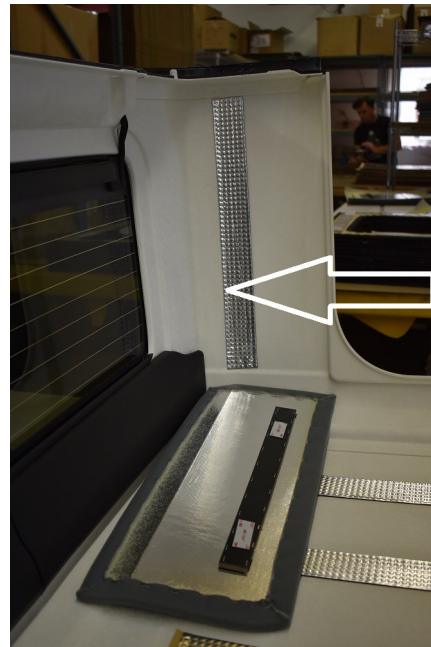

Install Sound Assassin strip directly against small ridge. 3M tape on side panels must not touch sound assassin.

Front Panel, Pic D



Front panel (both are done the same).

Use 2 full pieces in the longer spots.

Cut one piece to fit in the smallest spot.

Cut the salvage from that in two and lay in curved spot.