


BF4KIT2 – Configuration Guide

Tools Required

- Drill
- 27mm hole saw
- Measuring tape (or ruler)

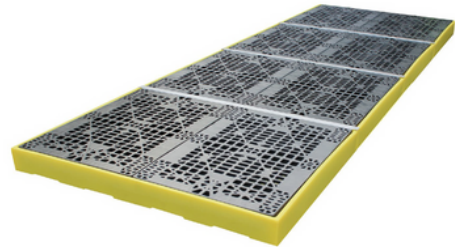

Instructions

1. Lay out four bases, as shown in the technical drawing.
2. Beginning with “Base A”, standing at one of the longer (1660mm) sides, measure on the inside, from the right hand side, 495mm from the inside edge, and 42mm up from the base, and then mark it for drilling.
3. Moving to “Base B” and “Base C”, again standing at one of the longer (1660mm) sides, measure on the inside, from the right hand side, 495mm from the inside edge, and then 42mm up from the base, and then mark it for drilling. Then move over to the parallel longer (1660mm) side, measure on the inside, from the left hand side, 495mm from the inside edge, and then 42mm up from the base, and then mark it for drilling.
4. For “Base D”, standing at one of the longer (1660mm) sides, measure on the inside, from the left hand side, 495mm from the inside edge, and 42mm up from the base, and then mark it for drilling.
5. Now they are all marked, drill the holes, using the 27mm hole saw.

