LOGAN





INSTRUCTIONS


Pipe will be around 1 to 2cm shorter than distance between walls. One thread gets removed when cutting the pipe.



Push fittings as far as possible onto the pipe.



Place rack in between the walls and push fittings out as far as possible again.

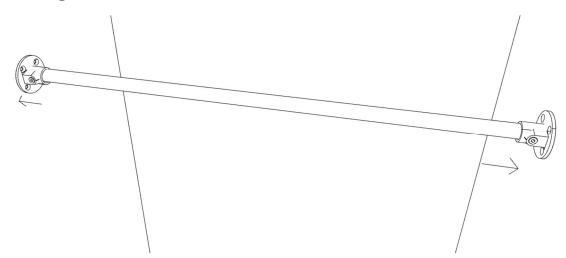

Mount with screws and plugs. Fasten pipe with key clamp.

