

Fit Filter and Low pressure fuel pump bracket to rear of chassis using 4x M6 Rivnuts, fixings secured by 3x M6 bolts and 1 Mounting for the low pressure pump. Fix tiewrap saddle by M6 Rivnut and M6 Bolt.

Fit fuel filter with jubilee clip, making sure outlet goes to the pump.
Mount pump as per photo and fit pipe between pump and filter.


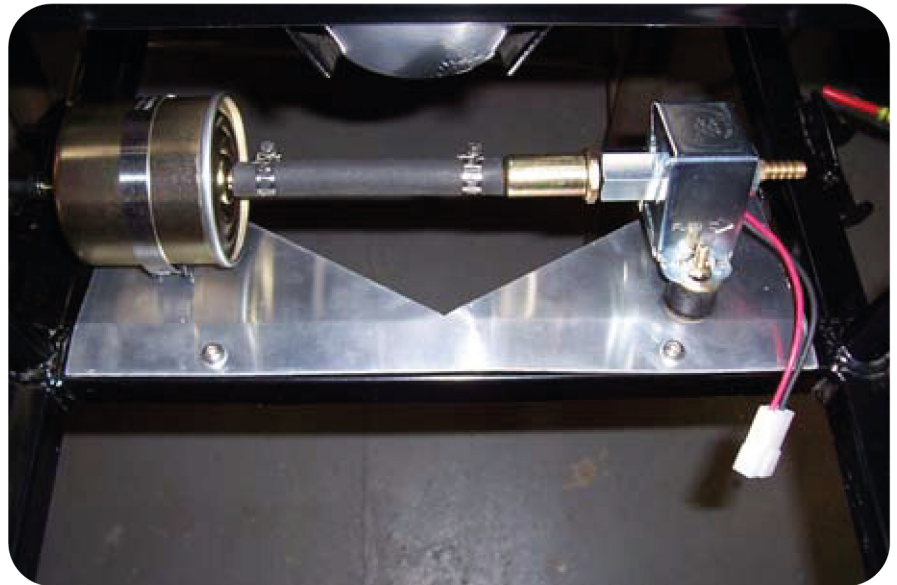


Photo shows suggested fixings of jubilee clips



Photo shows suggested route for feed from tank to fuel filter.
Return pipe from the top of the tank to front of the car, joining plastic fuel pipe in photo below.

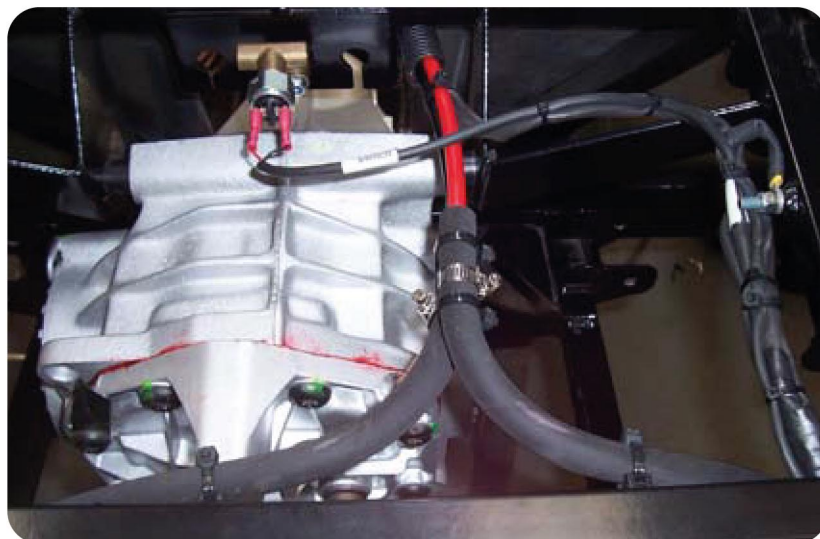

See images below for joining of rubber to plastic pipe



Above shows plastic fuel pipe brass insert.



Push insert fully into plastic fuel pipe.



Tighten jubilee clip onto rubber fuel line, over brass insert.