



1

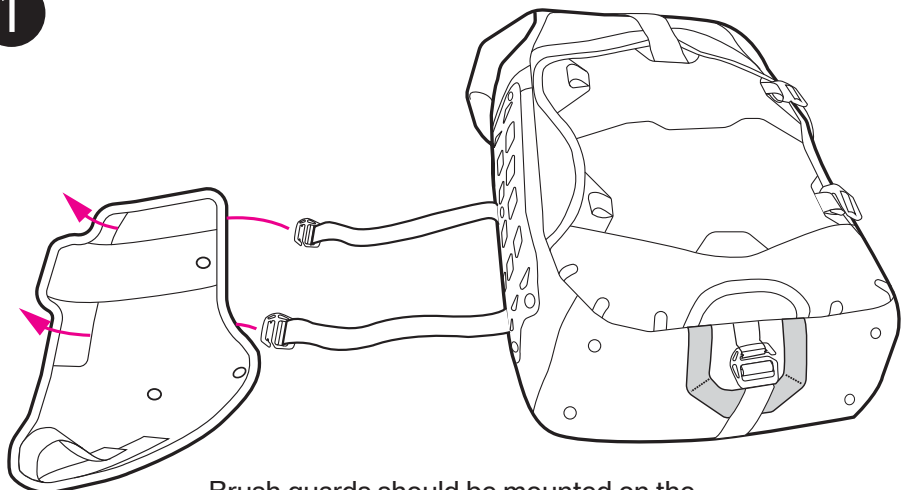


Brush guards should be mounted on the leading edge of your Backcountry Panniers

2

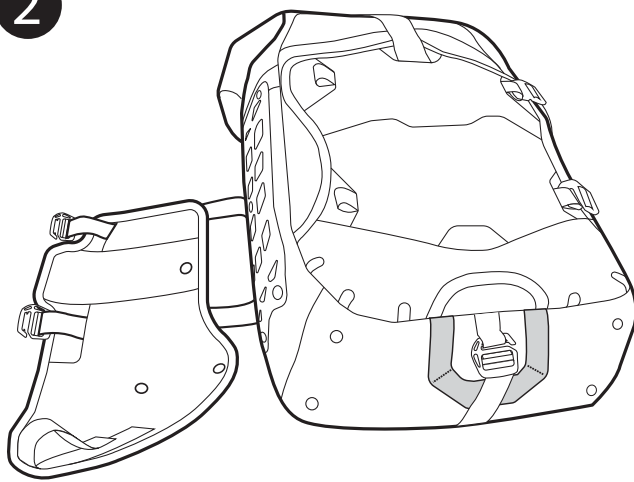


Feed compression straps through the slots like this

3

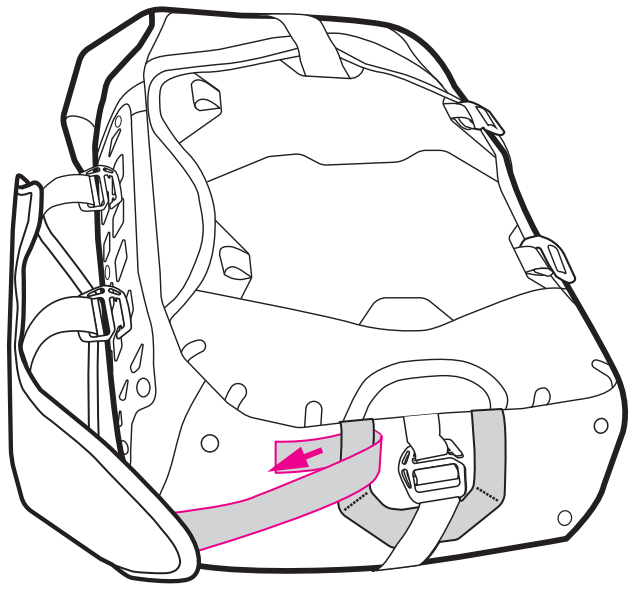

Loop the Velcro under strap through the MOLLE opening

4

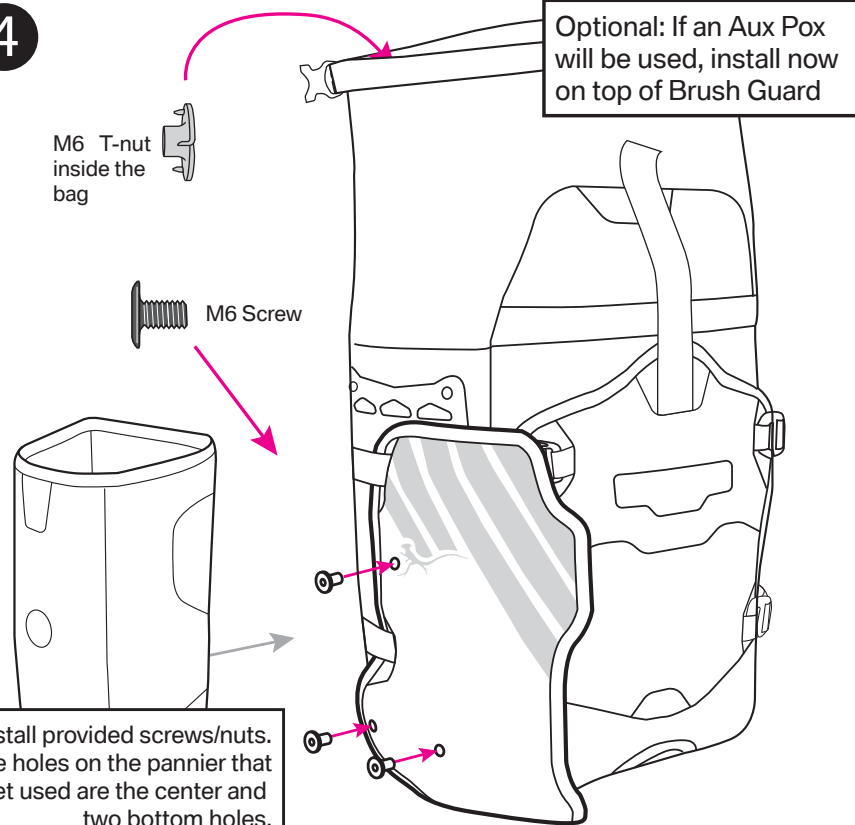

Install provided screws/nuts. The holes on the pannier that get used are the center and two bottom holes.

Brush Guard

Installation instructions

