




Laptop Case Setup Instructions

Your laptop case comes pre-assembled. However you will need to adjust the case spacers to your laptop's size and tighten the spacer screws

Tools Required:

- Torx T8 bit

1. Insert your laptop into the laptop case

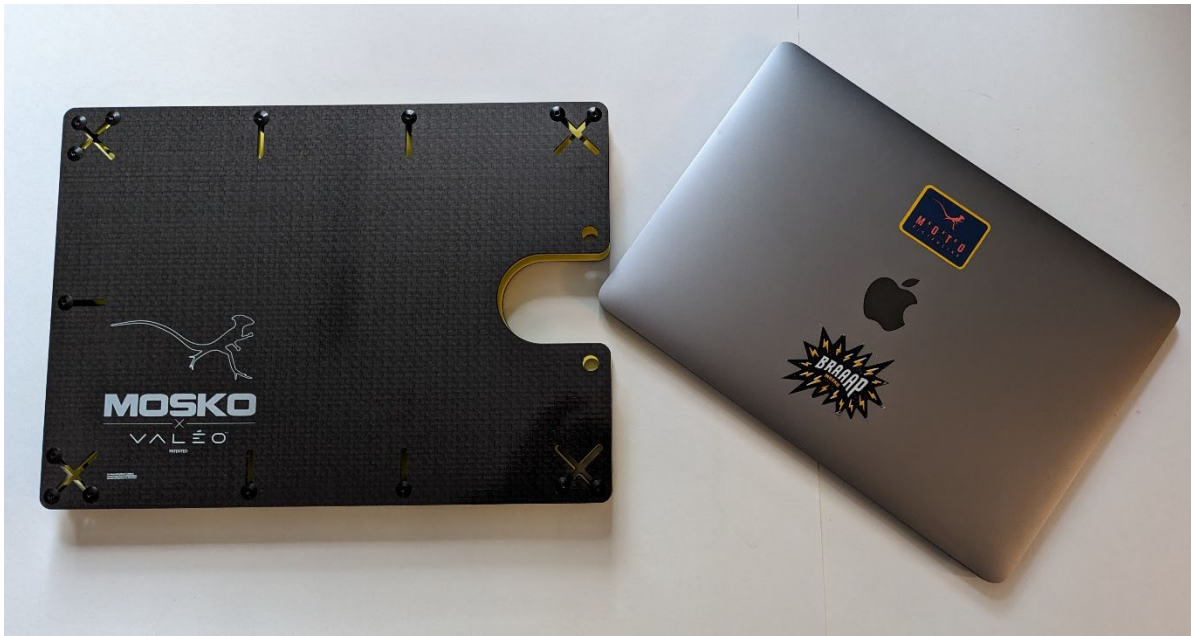

For more information contact us at moskomoto@moskomoto.com or 1-509-281-3211 for our USA team and moskoeu@moskomoto.com or +49 151 74212658 for our EU team



2. Push the spacers in towards the laptop until they contact the laptop edge. If the spacers don't move by hand you can loosen the screws on either side using a Torx T8 bit.




For more information contact us at moskomoto@moskomoto.com or 1-509-281-3211 for our USA team and moskoeu@moskomoto.com or +49 151 74212658 for our EU team



3. With the spacers contacting the edge of the laptop, tighten down all 15 screws on the face side of the case



4. Flip the case over and tighten down all 15 screws on the back of the case

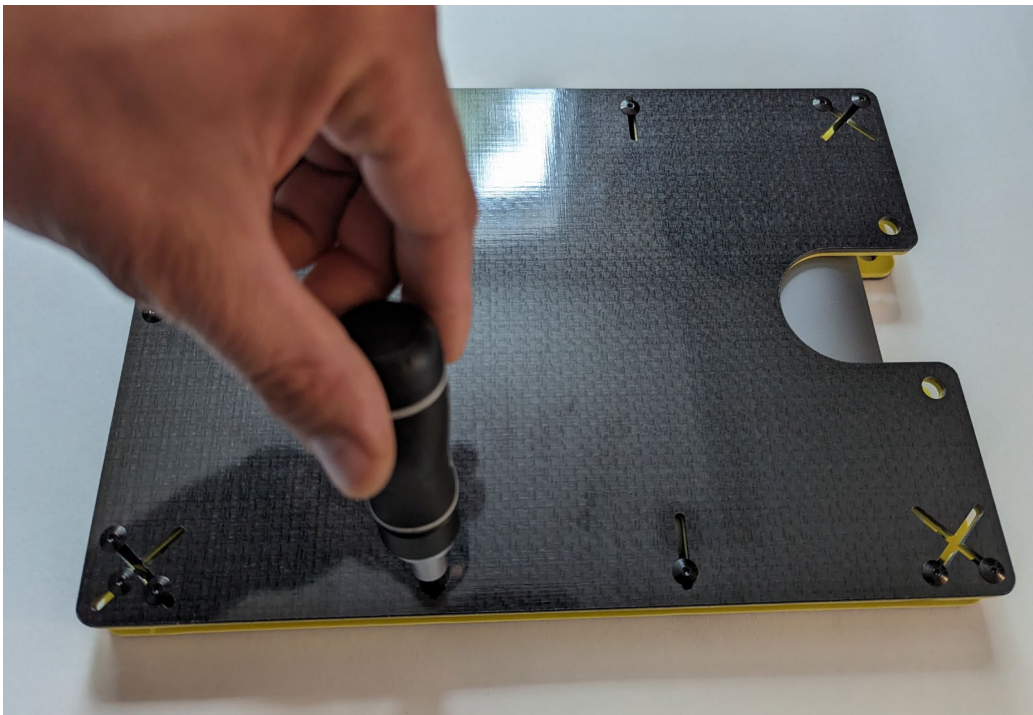

5. Slide your laptop in and out of the case to make sure it fits correctly. If the fit is too tight or too loose adjust the spacers as needed by loosening the screws and repeating steps 2-4

For more information contact us at moskomoto@moskomoto.com or 1-509-281-3211 for our USA team and moskoeu@moskomoto.com or +49 151 74212658 for our EU team