



## Nomax Tank Bag Installation



### Tools Required:

- Side cutting pliers
- Scissors

1. Remove the front harness (pictured below) from the tank bag. The harness "loop" will go around the motorcycle steering column with the open buckles facing aft.



Front of motorcycle



Rear of motorcycle



2. Route the harness around the steering column or head tube of the motorcycle.




Note: When routing the harness be sure that it does not pinch any wires, cables or hoses. Check that the harness does not impede the steering by turning the handles bars from one side to the other. Watch to make sure that the harness does not pinch any wires, cables or hoses as the handle bars are turned.





3. With the straps loosened, attach the tank bag to the front harness. Tighten the straps on both sides of the front harness and/or the front straps on the tank bag to achieve the desired position on the tank. It is preferable to position the tank bag as far forward on the tank as possible. On some applications the front of the tank bag may contact the handlebars which is okay so long as it does not interfere with the motorcycle's controls. Tighten the center strap on the front harness.

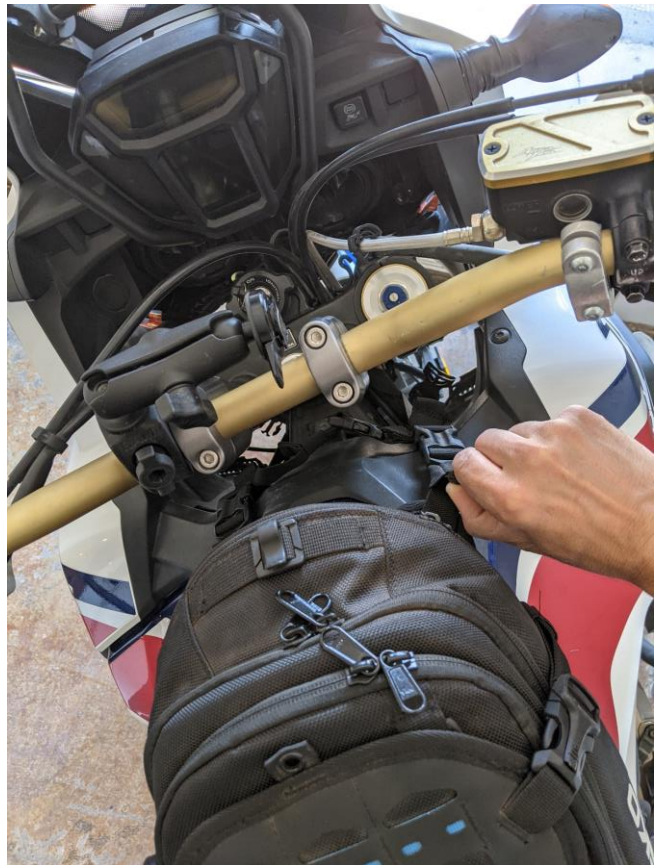

Note: Once the front harness is adjusted for the first time it does not need to be adjusted for subsequent rides even if the tank bag has been removed.







4. Install the rear mounting straps on the motorcycle. Once the tank bag is in the desired position on the tank pick a mount point on the lower frame that is close to where the rear straps fall. Route a zip tie around the mount point being sure not to pinch any wires, cables or hoses. Be sure the zip tie is not in contact with the exhaust. Route the zip tie through the strap end as shown.






5. Tighten the zip tie and cut off the excess length as shown below. Install a second zip tie through a different loop on the strap end as shown. Repeat this process for the other side of the motorcycle.

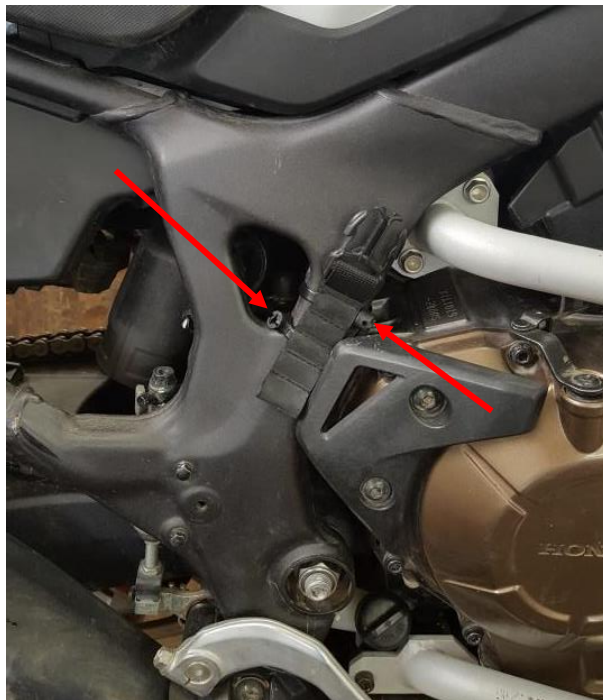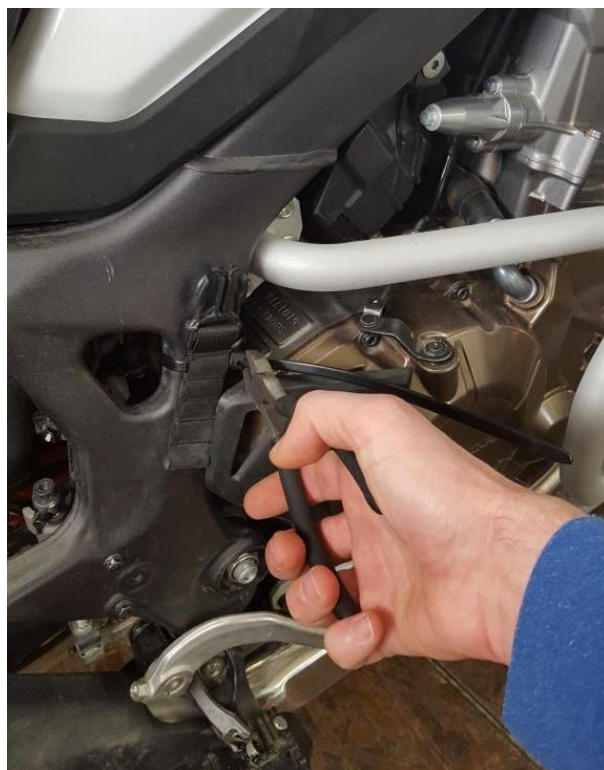





- Adjust the length of the rear straps. Undo the Velcro as shown and clip the rear strap to the strap end attached to the bike as shown. Pull the rear strap tight and close the Velcro. Fasten the Velcro keeper at the bottom of the strap to secure extra strap length.

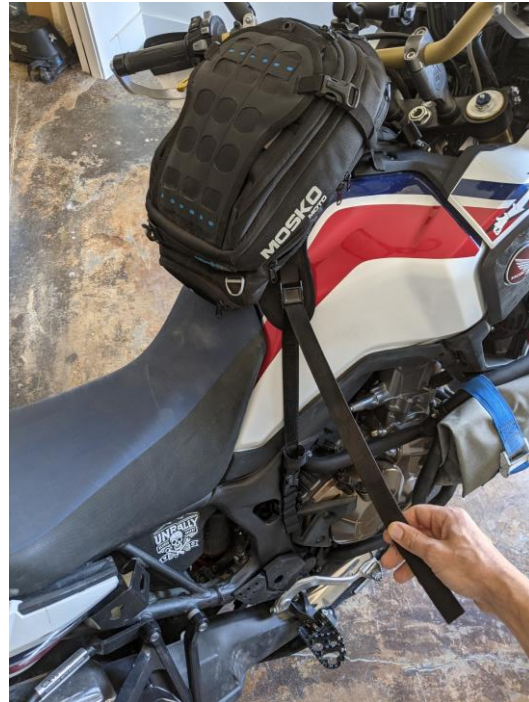






7. If desired, cut off any excess length on the strap at one of the “breaks” in the Velcro strip. Repeat this process for the other side of the motorcycle. After cutting, use a lighter to singe the ends of the nylon straps to prevent fraying.

NOTE: Before cutting the Velcro, check to be sure that the straps are long enough to go around your waist for when the tank bag is converted into a backpack. It is not necessary to cut the strap as the Velcro keeper can secure any extra strap length.

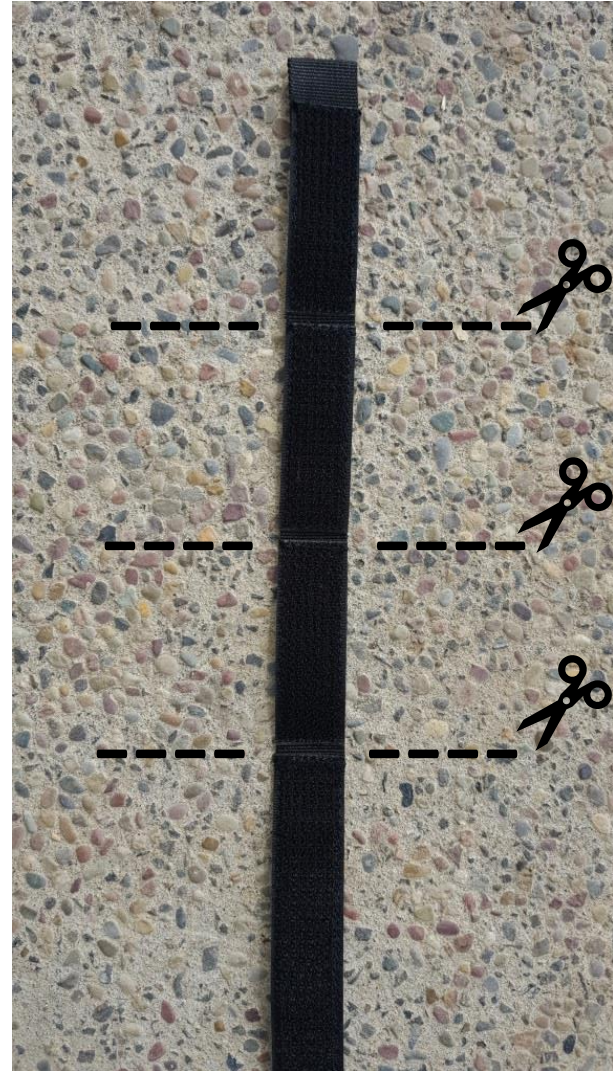





Installation complete.







## Nomax Tank Bag Hydration Reservoirs Installation

1. Fill the hydration reservoir to the desired amount



2. Open the top zipper pocket closest to the back/bottom of the bag





3. Route the hydration hose through the top pocket and out the side zipper as shown



4. Slide the hydration reservoir into the top pocket with the hose connection going in first







5. To keep the reservoir from sagging to the bottom of the bag, secure it with the top clip as shown below





6. Close the zippered closures and route the hydration hose as shown, attaching it to the three plastic clips on the tank bag

