

Start Strong with Post Bases

Outdoor Accents® post bases secure wood columns to concrete, while providing a 1" standoff height that meets building code requirements and helps reduce decay. These bases are available for lumber in both nominal and rough sizes.



Complete Bases with Side Plates

Outdoor Accents decorative side plates attach to the bottom of a post or column to provide a symmetrical finished look to an installed post base. The side plates are purchased separately from the post base and are optional.

Post Base


M-J-1 N-	Ga.		Dimensions (in.)			Fastener Qty.5		DF/SP Allowable Loads (lb.)	
Model No.	Base	Strap	L	w	Н	Post (qty.)	Anchor (dia.)	Uplift (160)	Down (100)
APVB44	16	12	3	3%16	6¾	4	(1) 5/8"	1,035	6,725
APVB44R	16	12	3	41/16	61/2	4	(1) %"	1,035	6,725
APVB66	12	12	5	51/2	613/16	4	(1) 5/8"	1,260	11,450
APVB66R	12	12	5	6	6%16	4	(1) 5/8"	1,260	11,450
APVB88	14	12	7	71/2	9%	8	(2) 5/8"	2,670	22,255
APVB88R	14	12	7	8	9%	8	(2) 5/8"	2,670	22,255
APVB1010	14	12	9	91/2	93/4	8	(2) 5/8"	2,365	23,725
APVB1010R	14	12	9	10	91/2	8	(2) 5/8"	2,365	23,725

- Uplift loads have been increased for wind or earthquake loading with no further increase allowed. Reduce where other loads govern.
- Specifier is to design concrete and anchorage for uplift loads. For information about Titen HD[®] stainless-steel screw anchors or SET-3G[™], see strongtie.com.
- 3. Specifier is to design concrete and anchorage for uplift loads.
- 4. Downloads shall be reduced where limited by capacity of the post.
- All post fasteners are Outdoor Accents SDWS22312DBB structural wood screws inserted through an STN22 hex-head washer. Fasteners sold separately.
- Post bases do not provide adequate resistance to prevent members from rotating about the base and therefore are not recommended for installations that lack top support (such as fences or unbraced carports).


Decorative Side Plates

	0	Dimen:	Fastener Qty.		
Model No.	Ga.	W	Н	Post	
APVB44DSP		3	61/2		
APVB66DSP	40	5	6%	4	
APVB88DSP	12	7	9%	- 8	
APVB1010DSP	1	9	91/2		

- All fasteners are Outdoor Accents SDWS22312DBB structural wood screws inserted through an STN22 hex-head washer. Quantities listed are for two parts, Fasteners sold separately.
- 2. Install top of decorative side plates flush to top of post base strap legs. Decorative side plates installed on APVB post bases will be raised up ¼" from the bottom of the post base, while installations on rough models will not.

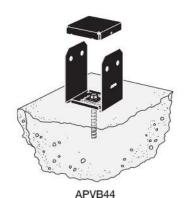

(Shown installed with Stainless-Steel Titen HD screw anchor)

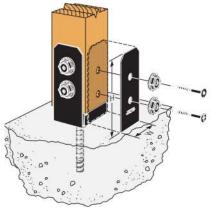

APVB44DSP shown with APVB44 post base (Shown installed with Stainless-Steel Titen HD screw anchor)