


Composite Decking DIY Guide

T-Clip Advanced Fastening System



STEP 1 - Take your screws and hand tighten it into the clip to make a set.


STEP 2 - Once your composite decking plank is cut to size and in place. Take your made up clip and place it tightly against the plank on the cross joist of your frame. Once lined up tightly drive the screw through the clip till the screw just applies pressure onto the clip.

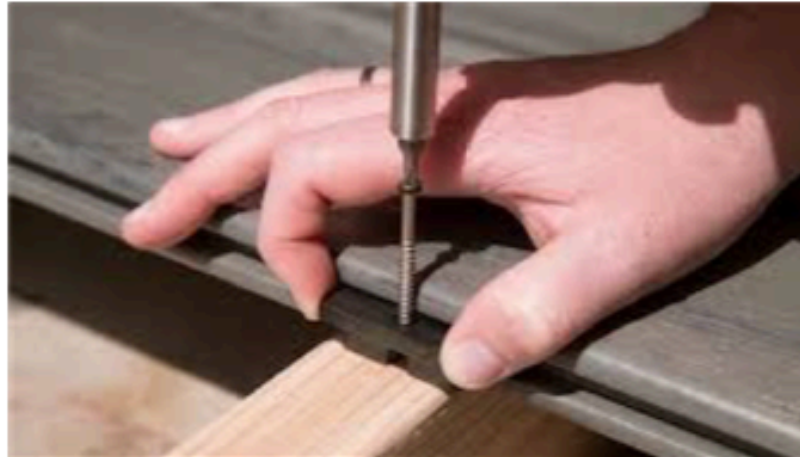

Structure Installation Guide

Top view

50 x 228mm beams will be spaced 800mm from each other.

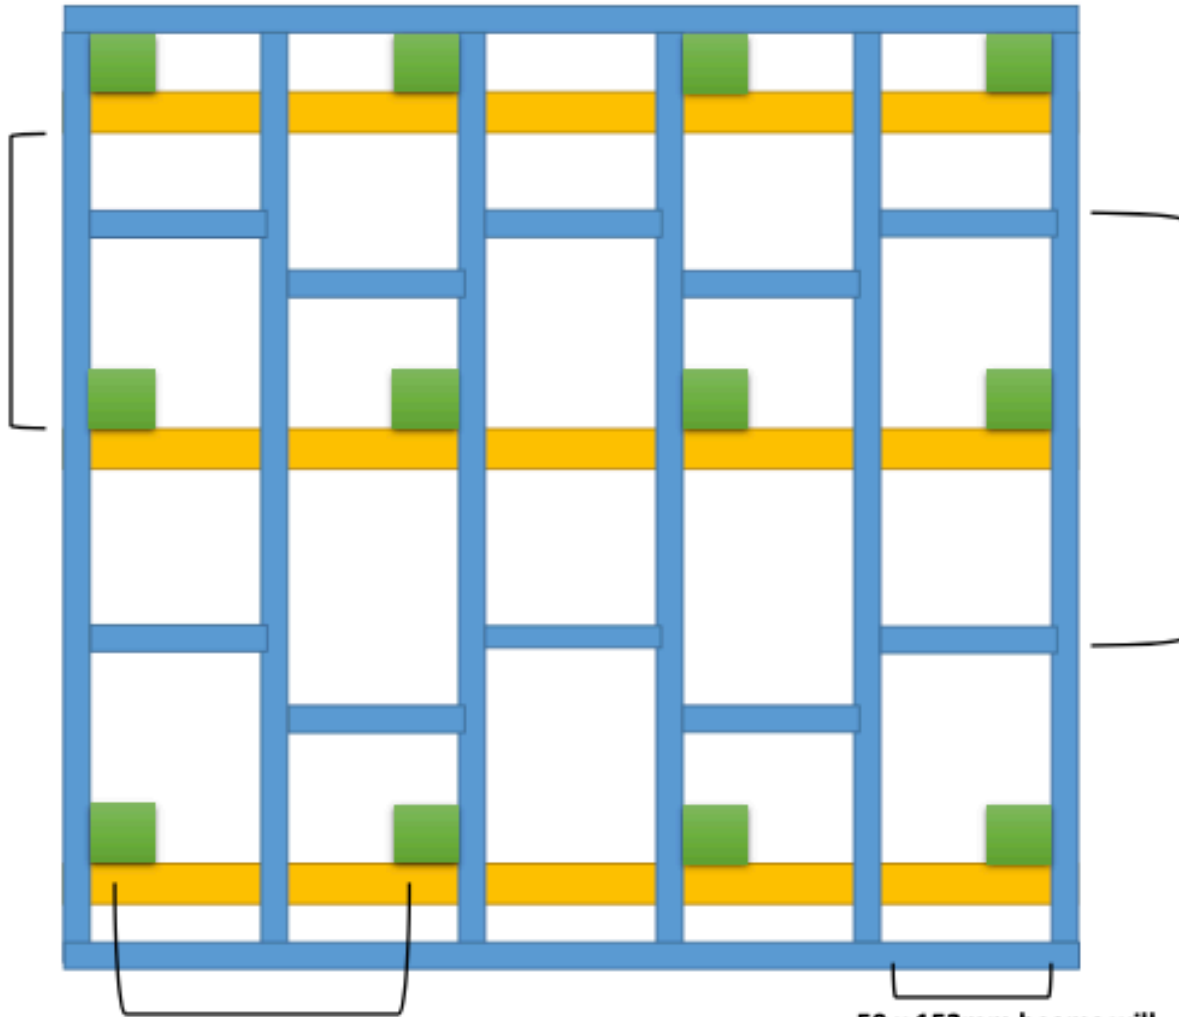

My 350mm support spacers will be steps and every 800mm from each row.

120 x 120 legs will be spaced 1m from each other.

50 x 152mm beams will be 350 mm spaces.

