






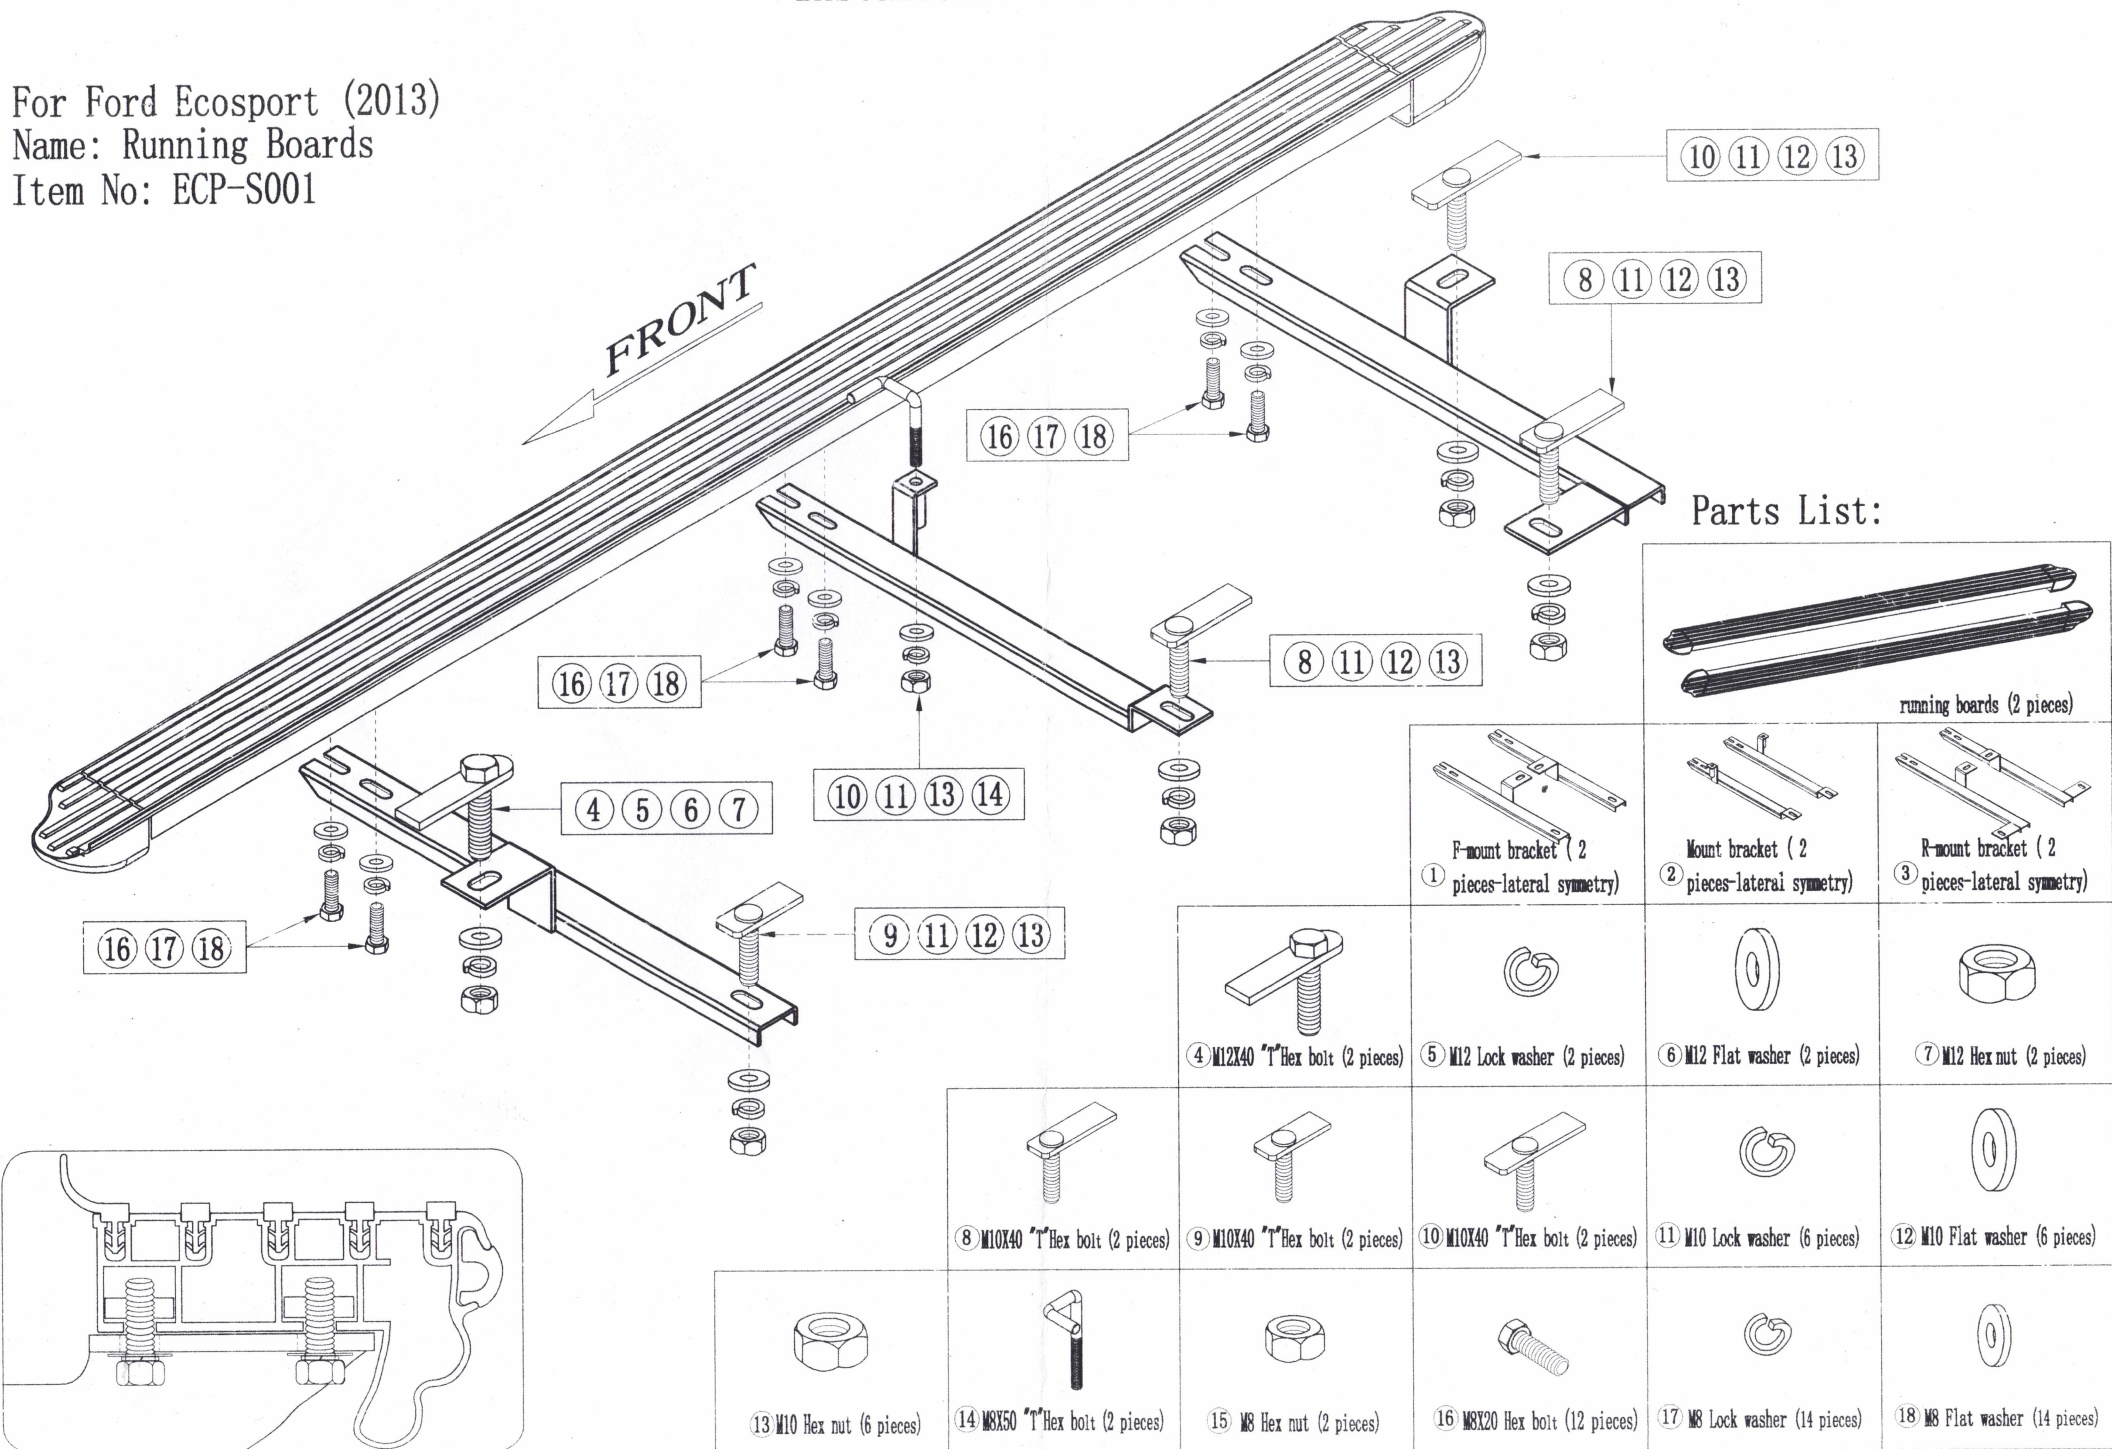








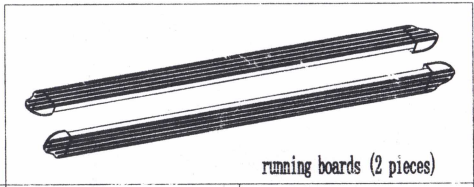


Installation Instruction

For Ford Ecosport (2013)
 Name: Running Boards
 Item No: ECP-S001



Parts List:



 F-mount bracket (2 pieces-lateral symmetry)	 Mount bracket (2 pieces-lateral symmetry)	 R-mount bracket (2 pieces-lateral symmetry)
 ④ M12X40 "T"Hex bolt (2 pieces)	 ⑤ M12 Lock washer (2 pieces)	 ⑥ M12 Flat washer (2 pieces)
 ⑧ M10X40 "T"Hex bolt (2 pieces)	 ⑨ M10X40 "T"Hex bolt (2 pieces)	 ⑩ M10X40 "T"Hex bolt (2 pieces)
 ⑬ M10 Hex nut (6 pieces)	 ⑭ M8X50 "T"Hex bolt (2 pieces)	 ⑮ M8 Hex nut (2 pieces)
 ⑯ M8X20 Hex bolt (12 pieces)	 ⑰ M8 Lock washer (14 pieces)	 ⑱ M8 Flat washer (14 pieces)