

# ATV-TEK Padded Bottom Bag


## Assembly Instructions

### Parts Identifier:

Rear bag side rail (2)



Side bag side rail (4)

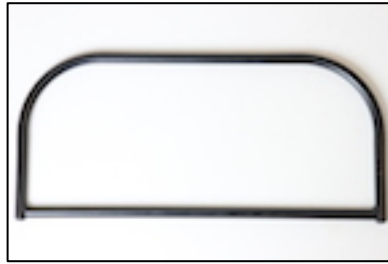

Tensioning Rod (12)



Foam Pad (3)



Lid (3)



Side Bag (2)



Rear Bag (1)



## STEP 1: Insert Foam Pads

- Place the foam pads into the bottom of each bag compartment.



## STEP 2: Attach Bottom Tension Rods

- Pre-build the frame by attaching the bottom two tension rods onto the side rails.



## STEP 3: Insert Frame into Bag Skin

- Insert frame inside of skin until it is securely on top of the foam pad.



## STEP 4: Attach Bottom Velcro

- Attach the bottom Velcro onto each of the side rails.



## STEP 5: Insert Top Tension Rods

- Snap one side of the tension rod and wedge it between the two side rails. Slide the Rod until it is flush at the top of the fabric on each side of the bag.



## STEP 7: Attach Top Velcro Straps

- Pull Velcro straps over the steel frame and attach on all sides.



## STEP 8: Attach Lids

- The top buckle is on the opposite side as the water bottle holder for each side. The top buckle is on the opposite side as the logo for the rear compartment.



## STEP 9: Attach The Rear and Front Velcro for Each Side Bag

- Attach the rear velcro straps through the loop holes on each side bag. After the rear is attached, connect the front two Velcro straps as shown.



## STEP 10: Attach Seat Bottom

- Flip the bag on its back and attach the Velcro on the seat.



## STEP 11: Attach to ATV

- Loop the straps around the ATV rack. Bring the strap from the back in the middle hole towards the front. Insert Strap back through the bottom hole and pull secure.

