

# **XWG-092**

## **INSTRUCTIONMANUAL**

### **10 FT x13 FT Gazebo**

The gazebo comes with 3 boxes. Sometimes they may be delivered on different day, please wait 2-3 more days or contact us for help.


**Note: The gazebo needs to be installed in cooperation with five people. The following tools are not included and needed for assembly:**



Pistol Drill




Tape Measure

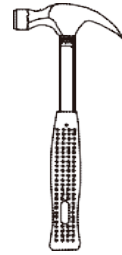


Hammer



Screw Driver

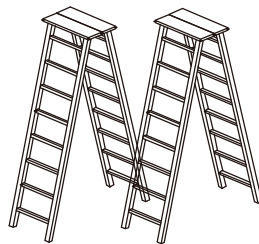

Ladder

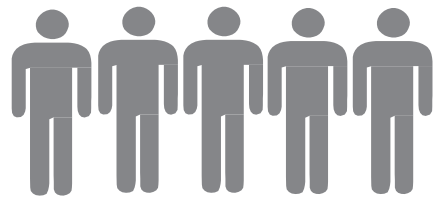


5 people

### Warning






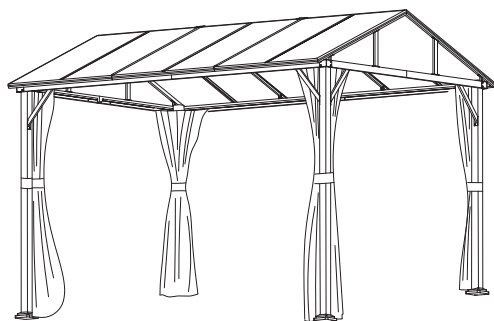



1. A 5 person assembly is required for this gazebo.
  2. Please take appropriate actions as heavy rain, wind and snow can damage the gazebo. If necessary please dis-assemble and store for later use.
  3. In snowy conditions please do not allow the thickness of the snow to be more than 0.45 inch on the roof, this should be cleared as soon as possible for your safety.
- When the wind speed reaches 12 km/h, please take measures to avoid the wind.

## Attention:


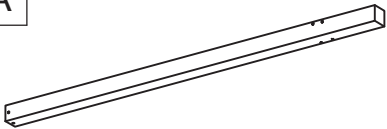


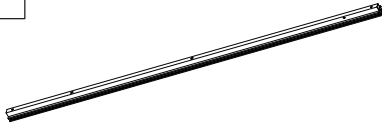

1. Please fix all the screws first, do not lock off, after assembling is fully completed, lock all at once finally.
2. Please check the manual carefully and make sure you have received all the parts.
3. If there is any missing, please let us know the letter of the parts you need.
4. If there is any damage, please send clear photos to us, we will check and offer you best solution soon.











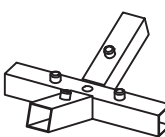





















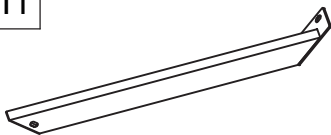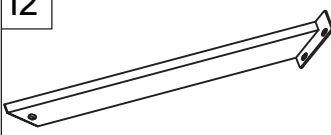
### Parts List (Box A)

<b>A</b>  Leg 4 PCS	<b>B1</b>  Left long beam 2 PCS	<b>B2</b>  Right long beam 2 PCS
<b>D1</b>  Left bevel roof tube 2 PCS	<b>D2</b>  Right bevel roof tube 2 PCS	<b>F</b>  Middle bevel roof tube 4 PCS
<b>H</b>  Metal sheet 6 PCS	<b>Z1</b>  Long tube for Mosquito net 4 PCS	<b>Y3</b>  Sling fabric 2 PCS

### Parts List (Box B)

<b>C1</b>  Left short beam 2 PCS	<b>C2</b>  Right short beam 2 PCS	<b>E</b>  Roof tube 3 PCS
<b>G1</b>  Left tube of roof side 2 PCS	<b>G2</b>  Right tube of roof side 2 PCS	<b>G3</b>  Middle tube of roof side 2 PCS


I1		I2		J1		J2	
Left bevel supporting tube		Right bevel supporting tube		Right/left supporting tube of roof side		Middle supporting tube of roof side	
4 PCS		4 PCS		4 PCS		2 PCS	
K		Z2		Y1		Y2	
Standing supporting tube		Short tube for Mosquito net		Sidewall		Mosquito Net	
4 PCS		4 PCS		1 PC		1 PC	
L		M		N		O	
Connector for beam		Roof connector		Roof connector		Roof side connector	
4 PCS		2 PCS		2 PCS		4 PCS	
P		Q1		Q2		R	
L shape trestle		Left corner connector		Right corner connector		Stake cover	
4 PCS		2 PCS		2 PCS		4 PCS	
S		T		U		V	
Stake panel		PC board panel of roof		U shape connector		Middle connector	
4 PCS		2 PCS		4 PCS		4 PCS	
W		JJ					
Supporting plate of roof		Q shape ring					
2 PCS		80 PCS					
Hardware List							
AA		BB		CC		DD	
Bolt M6x15		Bolt M6x35		Bolt M6x45		Bolt M6x35	
156 PCS		8 PCS		16 PCS		4 PCS	

EE		FF		GG		HH	
	Hook		Stake		Wrench		Allen Key M8
	2 PCS		8 PCS		1 PC		2 PCS
<b>Parts List (Box C)</b>							
X							
	PC board						
	12 PCS						


<1>



(A) x 4




(R) x 4




(S) x 4


A

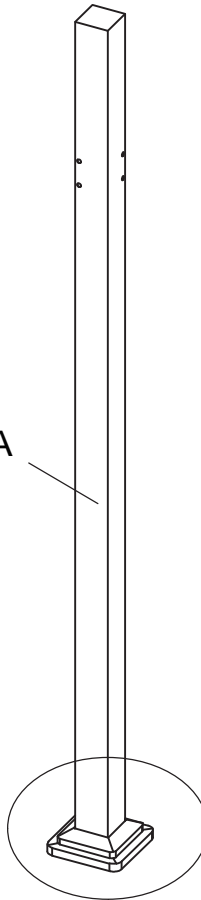


STEP 1

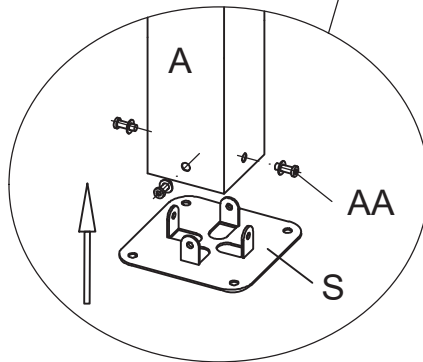

STEP 2

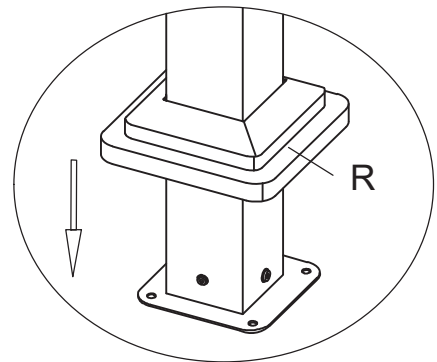

1



M6x15

(AA) x 16

<2>



B1 x 2




B2 x 2




Z1 x 4


2

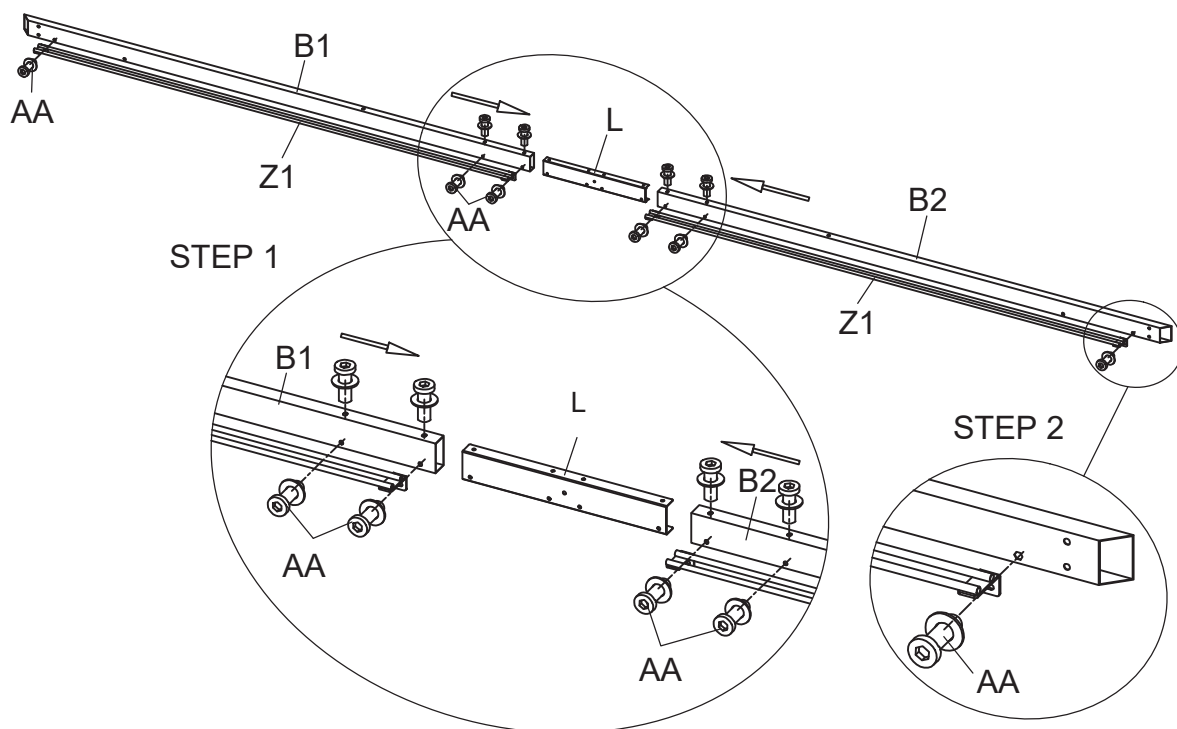

Attention: Pls assemble B1 and B2 with L one by one.



L x 2



AA x 20

M6x15

<3>



C1 x 2




C2 x 2




Z2 x 4


3

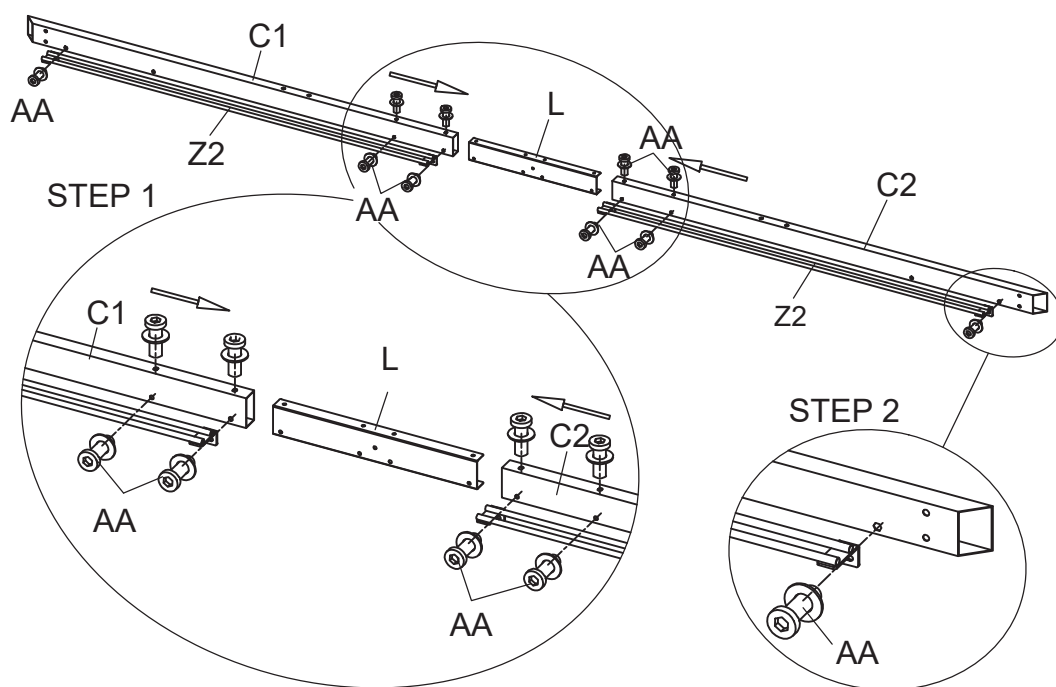

Attention: Pls assemble C1 and C2 with L one by one.



L x 2




M6x15

AA x 20






Q1 x 2



Q2 x 2




I1 x 4



I2 x 4


<4>

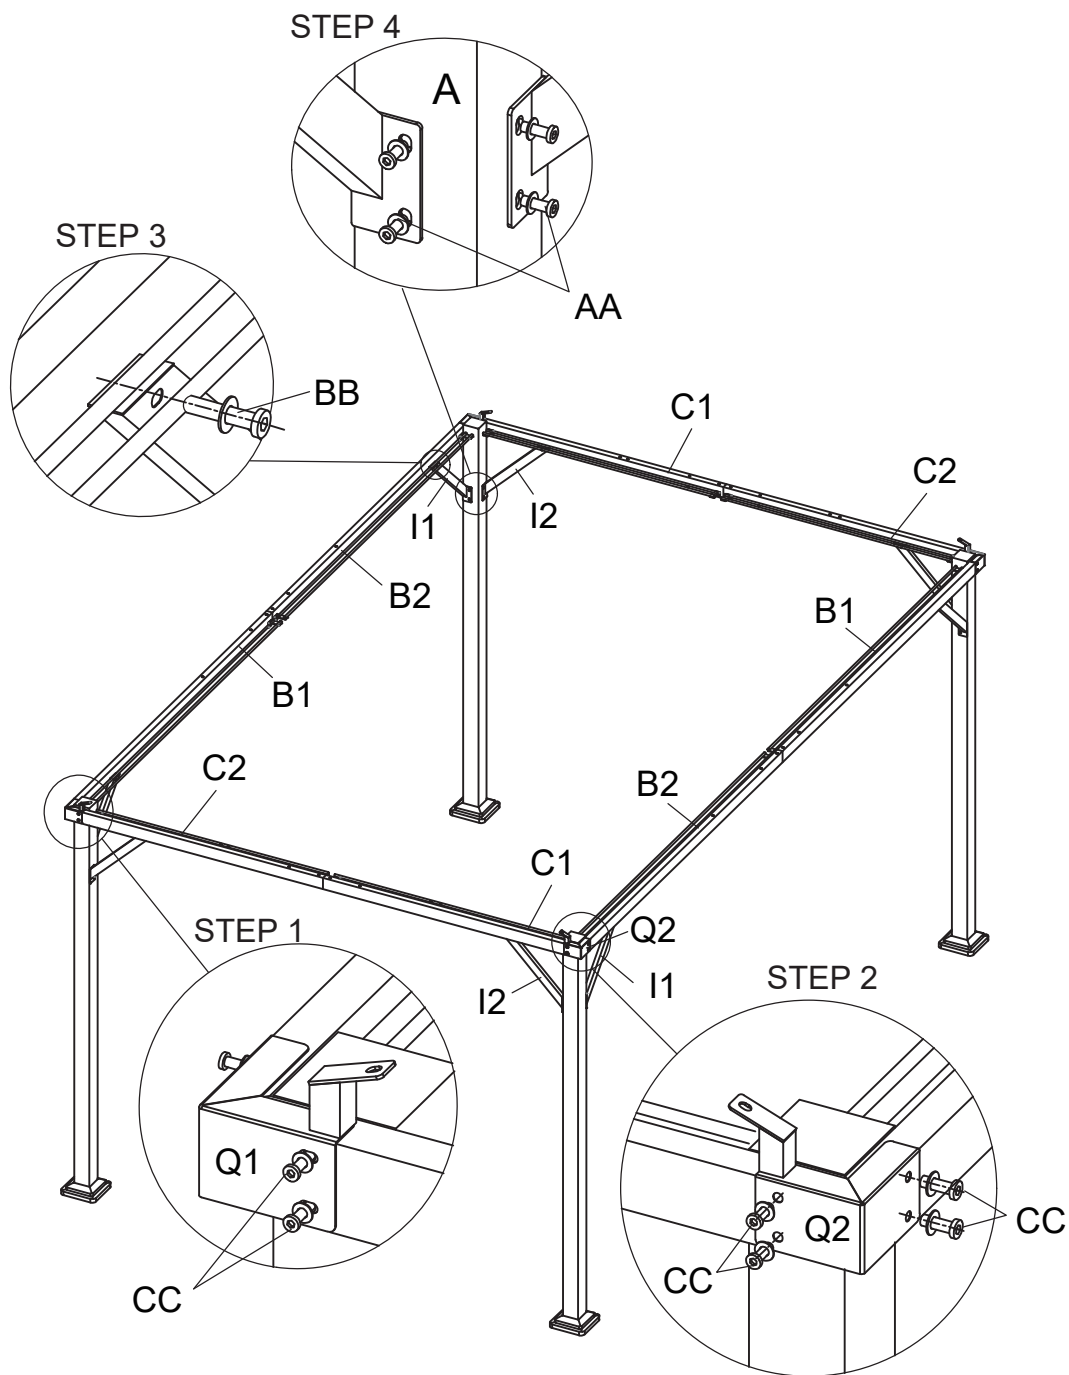

Attention:


1. At least 3 people required for this step.

2. Install as shown in the pictures, if you want to flat intallation, pls raise the pillar A to avoid the damage to Q1 and Q2.




CC x 16

M6x45



BB x 8


M6x35



AA x 16

M6x15

4




<5>


(K) x 4



(U) x 4

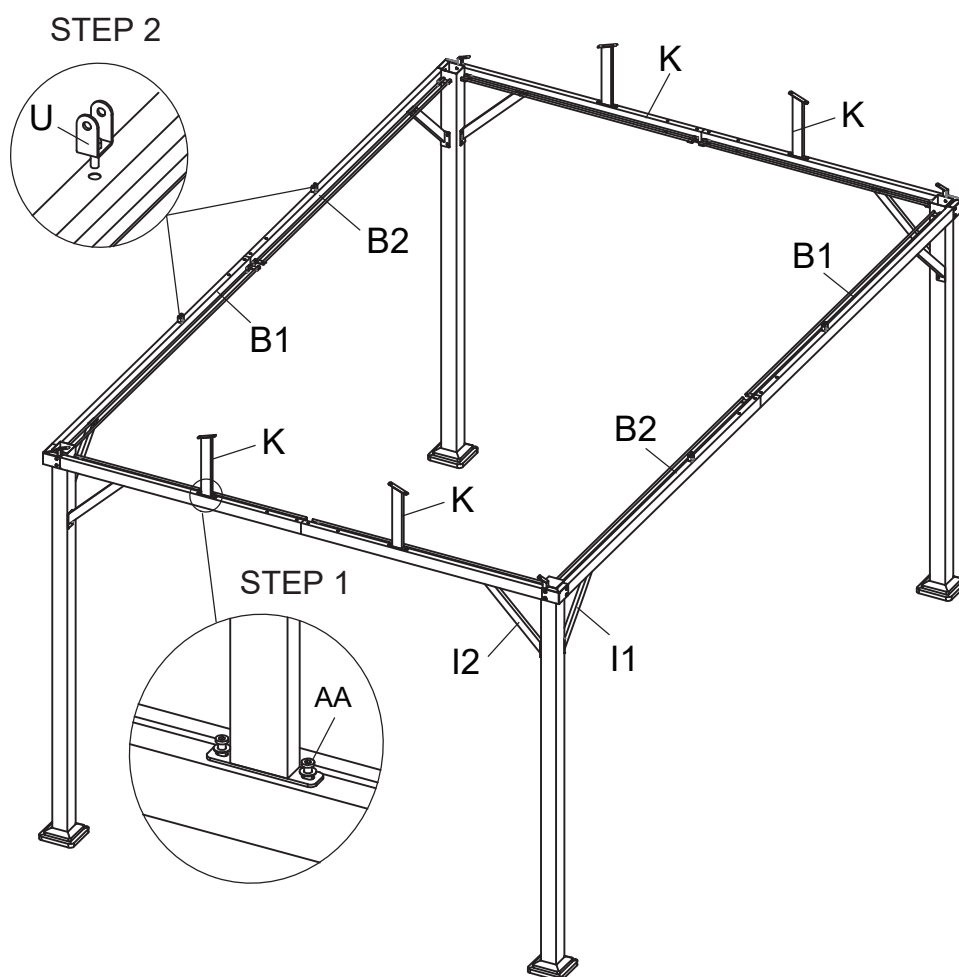

5



M6x15

(AA) x 8


<6>

D1 x 2

D2 x 2


M x 2

6

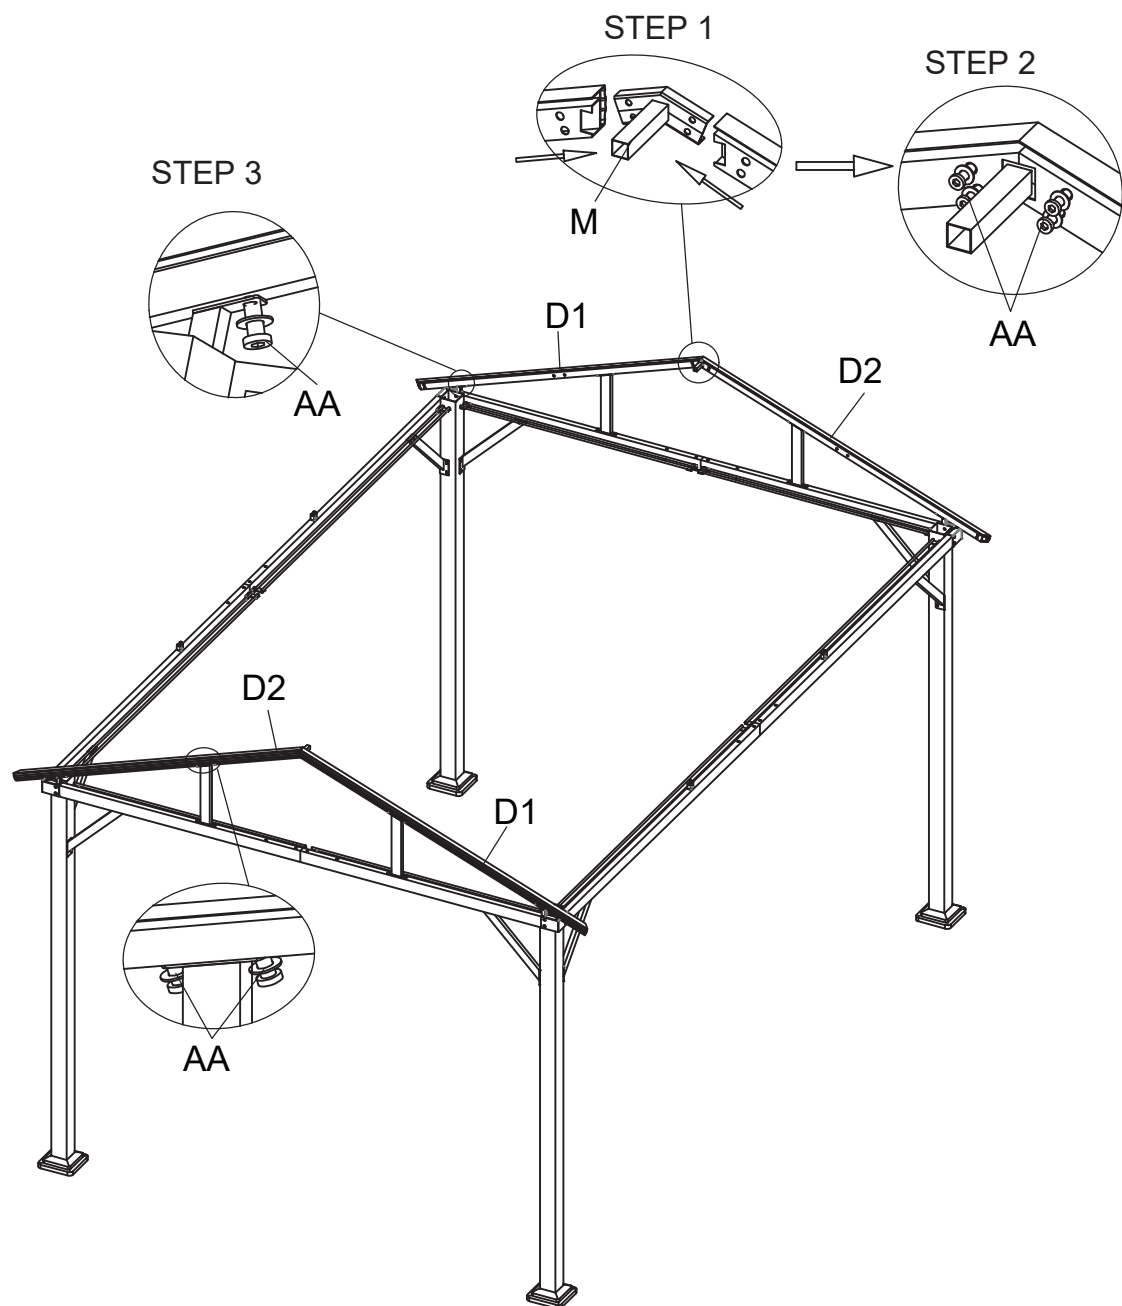

Attention:

Pls fix all the screws first,do not lock off,after assembling is fully completed, lock all at once finally.



M6x15

AA x 20

<7>

STEP 1

STEP 2

STEP 3

STEP 4

(E) x 3



(F) x 4

(W) x 2


(N) x 2

(T) x 2


7

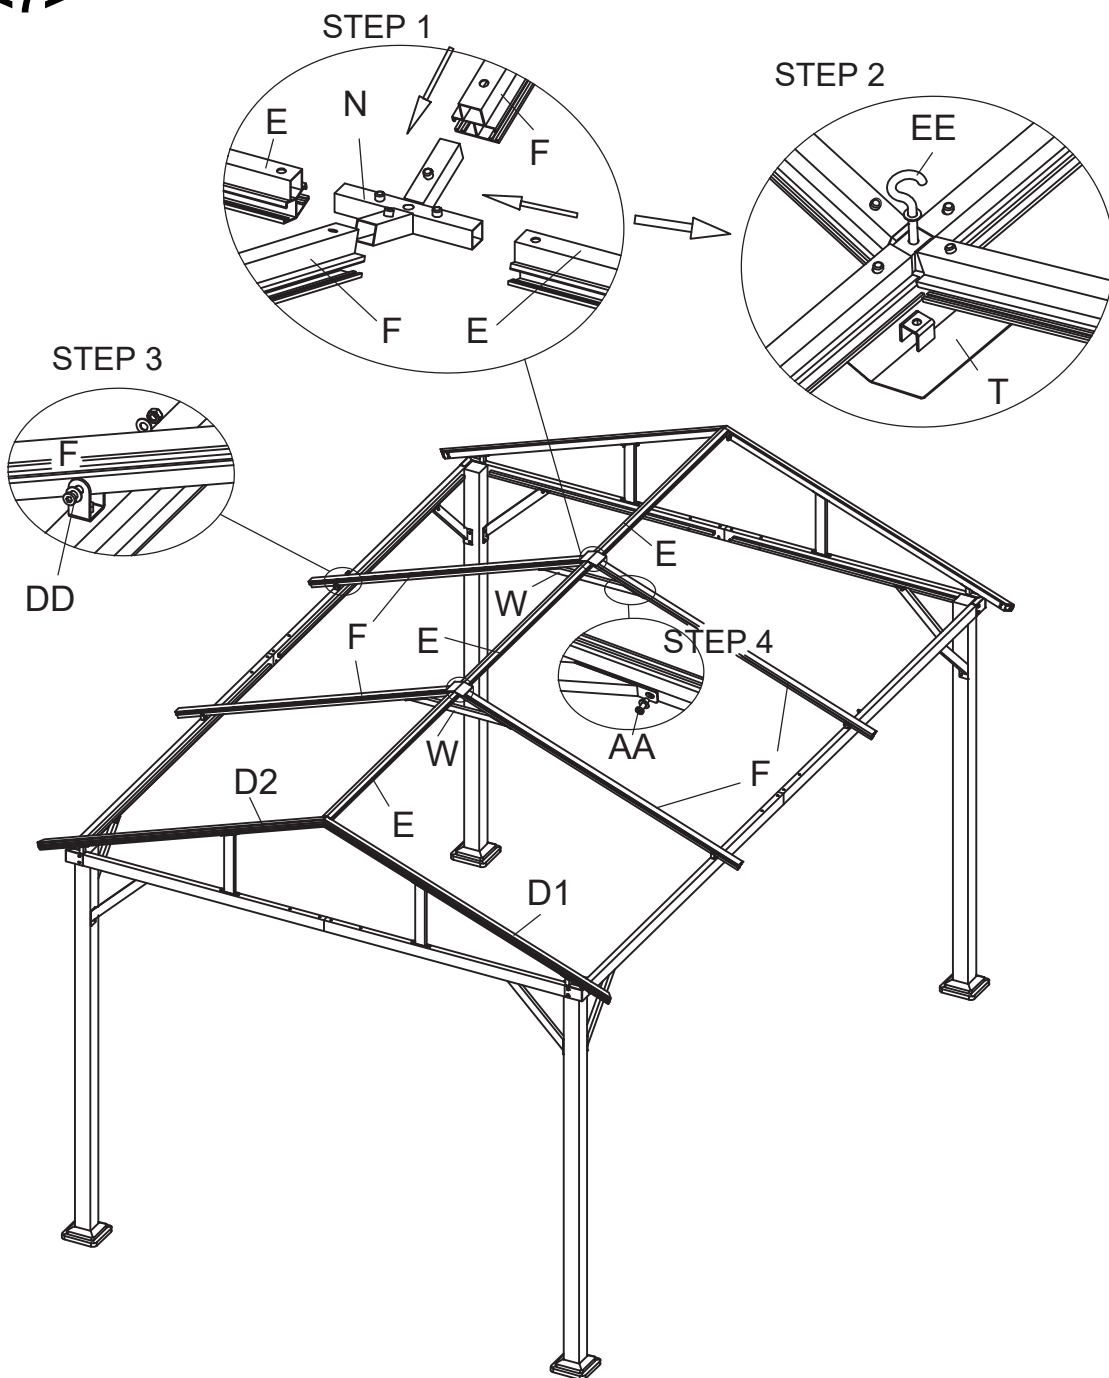

(EE) x 2



(DD) x 4



(AA) x 4

M6x35

M6x15


<8>



ⓐ x 4





ⓑ x 2




ⓒ x 4

8


STEP 1

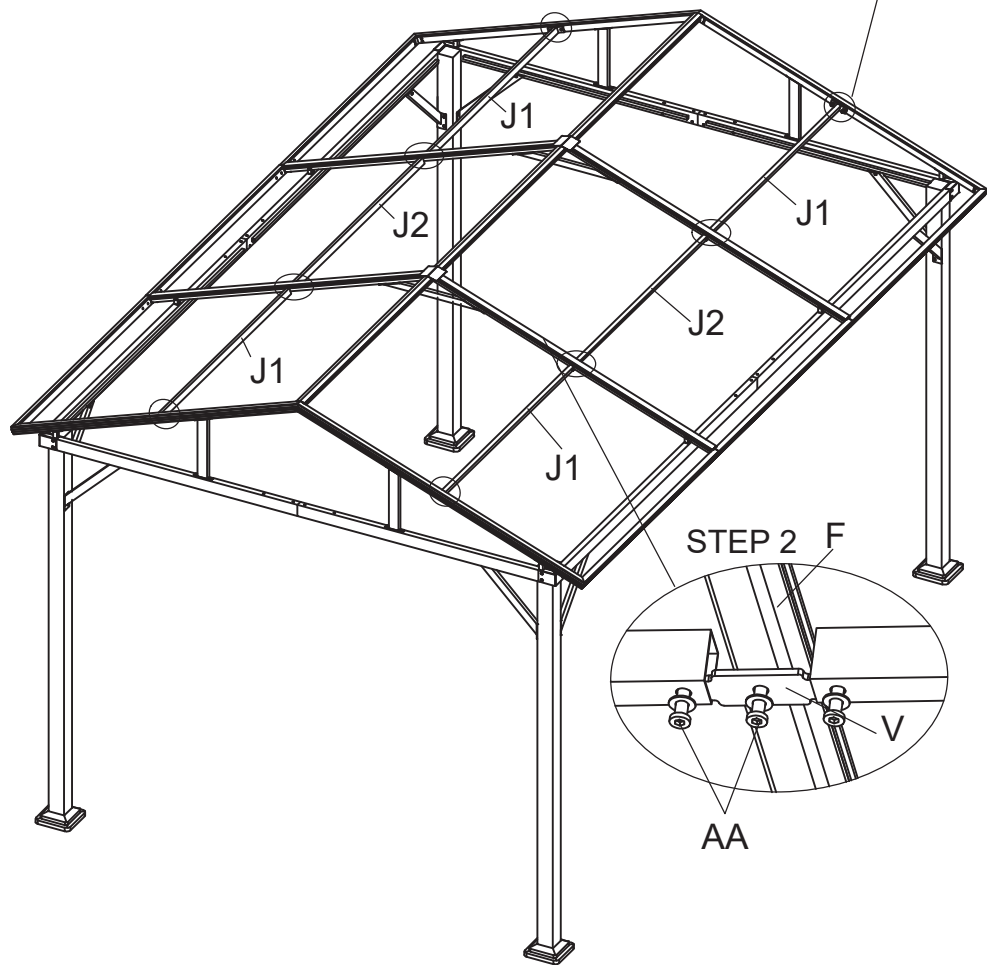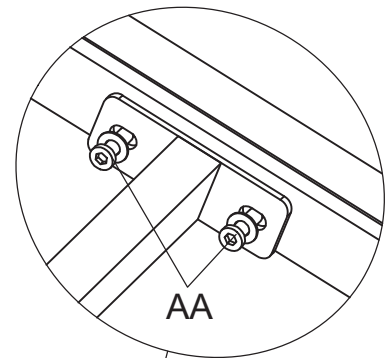

STEP 2 F

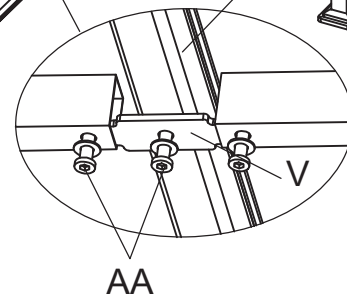

M6x15



ⓐ x 20

(H) x 3

(X) x 6

(G1) x 1

(G2) x 1

(G3) x 1


(O) x 2

(P) x 2

9

<9>

STEP 1

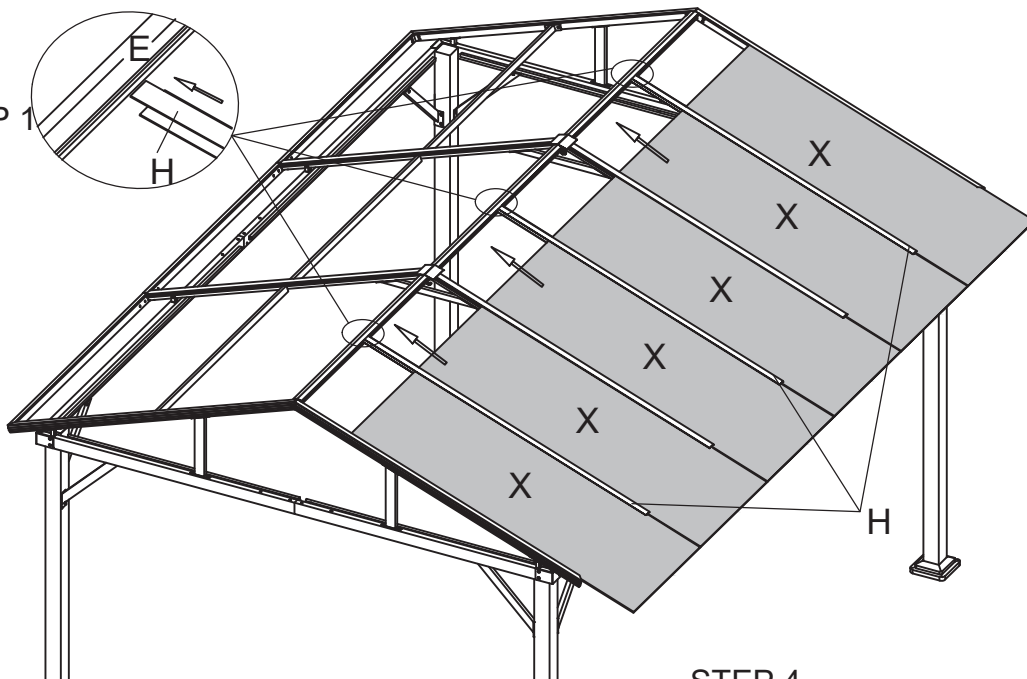


Attention:



1. Pls assemble the panels on one side of the gazebo first.
2. Pls join the O and G1, G3, G2 with AA first.
3. Pls make sure all the pannels are corresponded, avoid the damage to the parts.




STEP 4

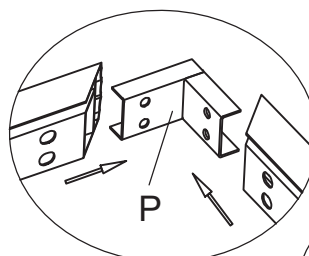


STEP 5

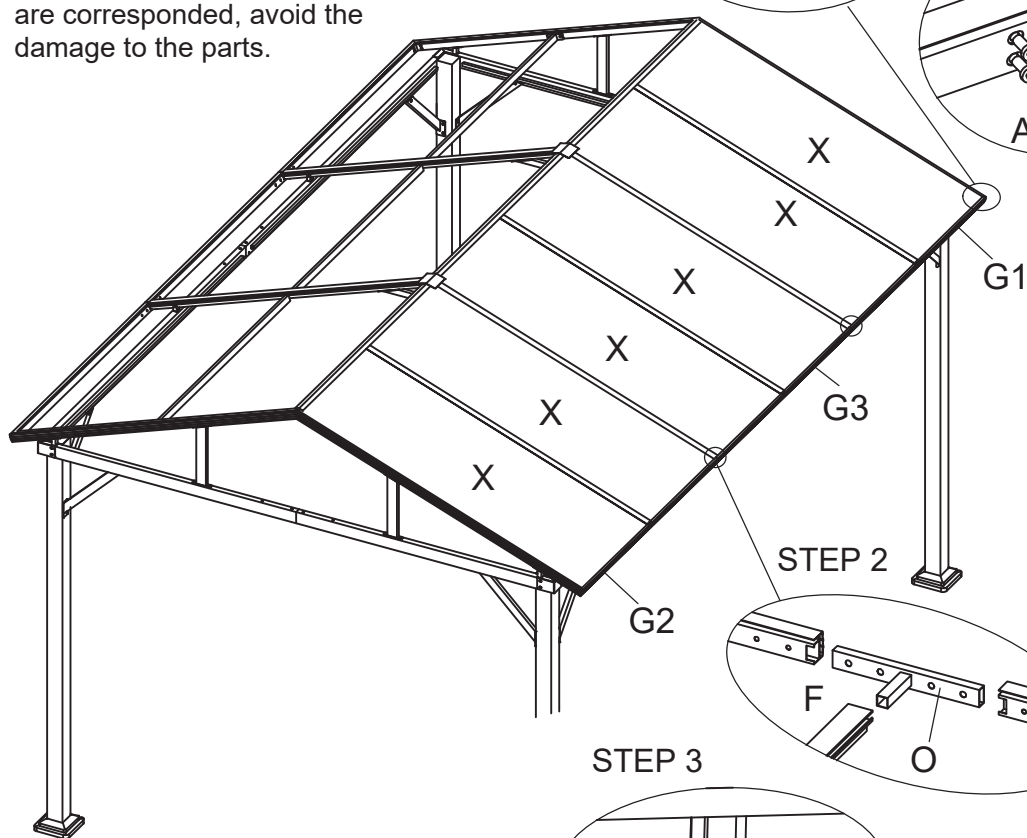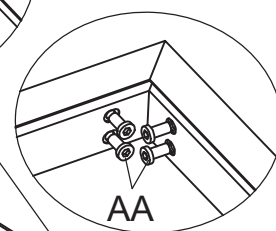


STEP 2

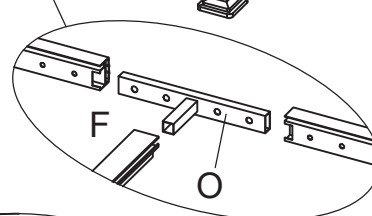

STEP 3

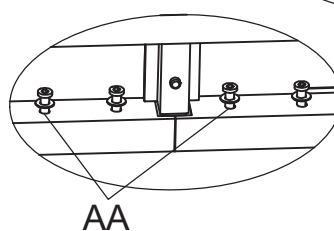

M6x15



(AA) x 16

<10>

(H) x 3

(X) x 6

(G1) x 1


(G2) x 1

(G3) x 1

(O) x 2


(P) x 2

10

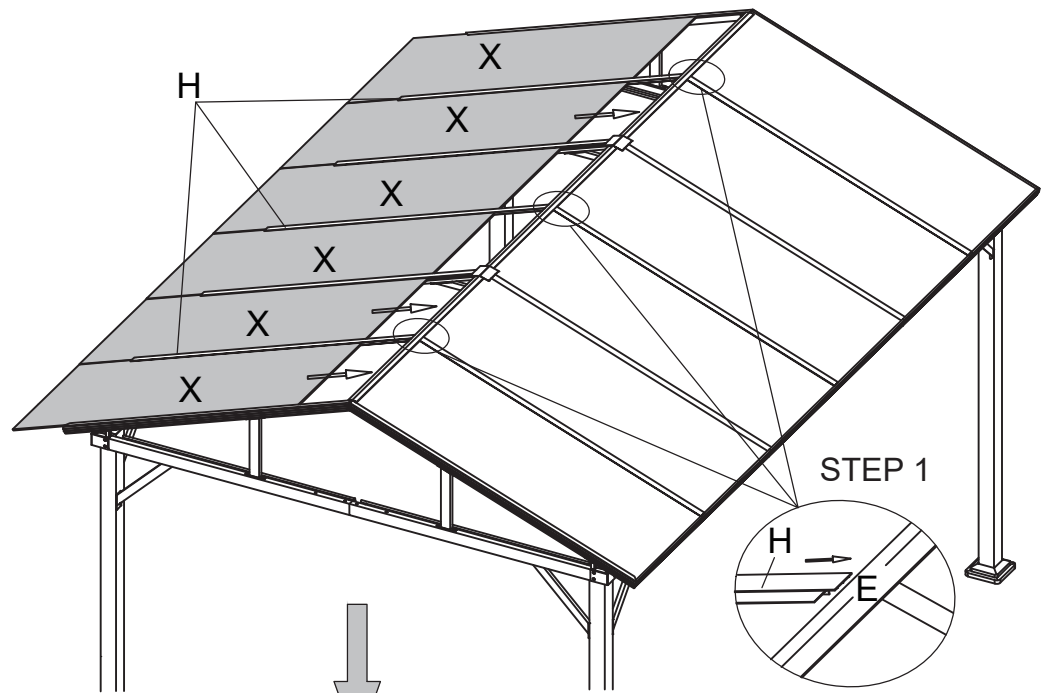

STEP 1

STEP 4

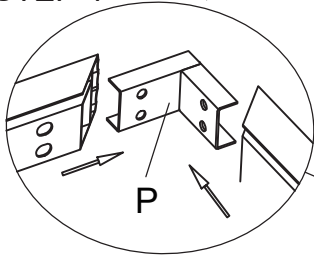


P


Attention:

1. Pls join the O and G1, G3, G2 with AA first.
2. Pls make sure all the pannels are corresponded, avoid the damage to the parts.

STEP 5

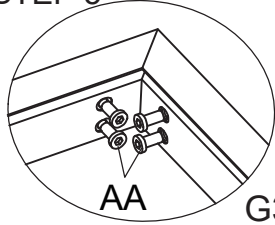

AA

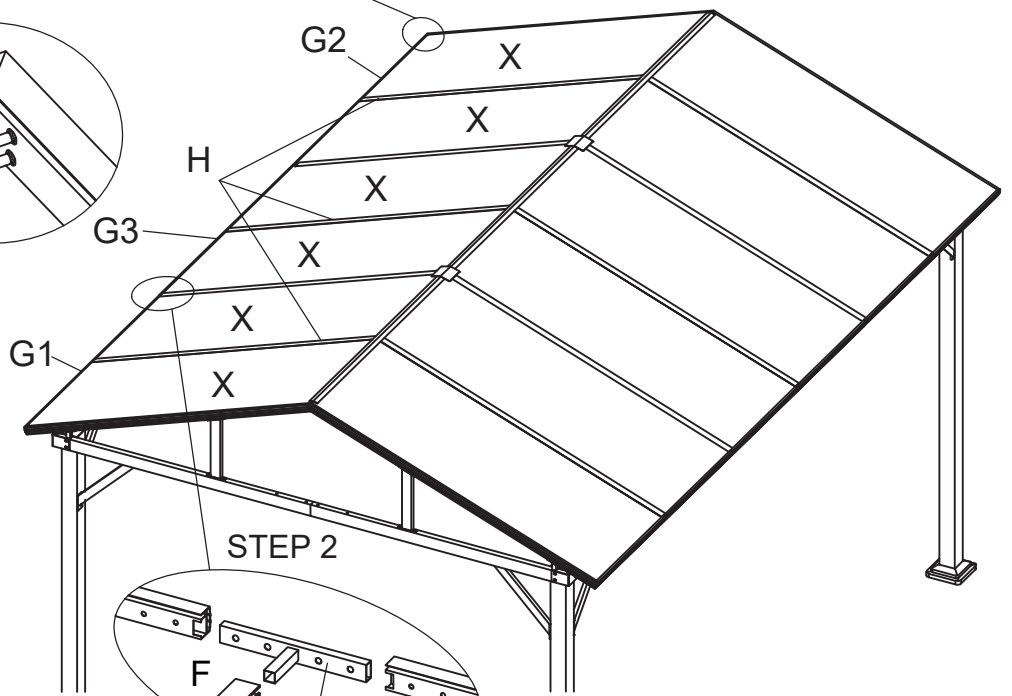


STEP 2

F


O

STEP 3

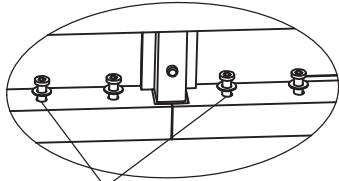

AA

M6x15



(AA) x 16

<11>




Y1 x 1



Y2 x 1



Y3 x 2

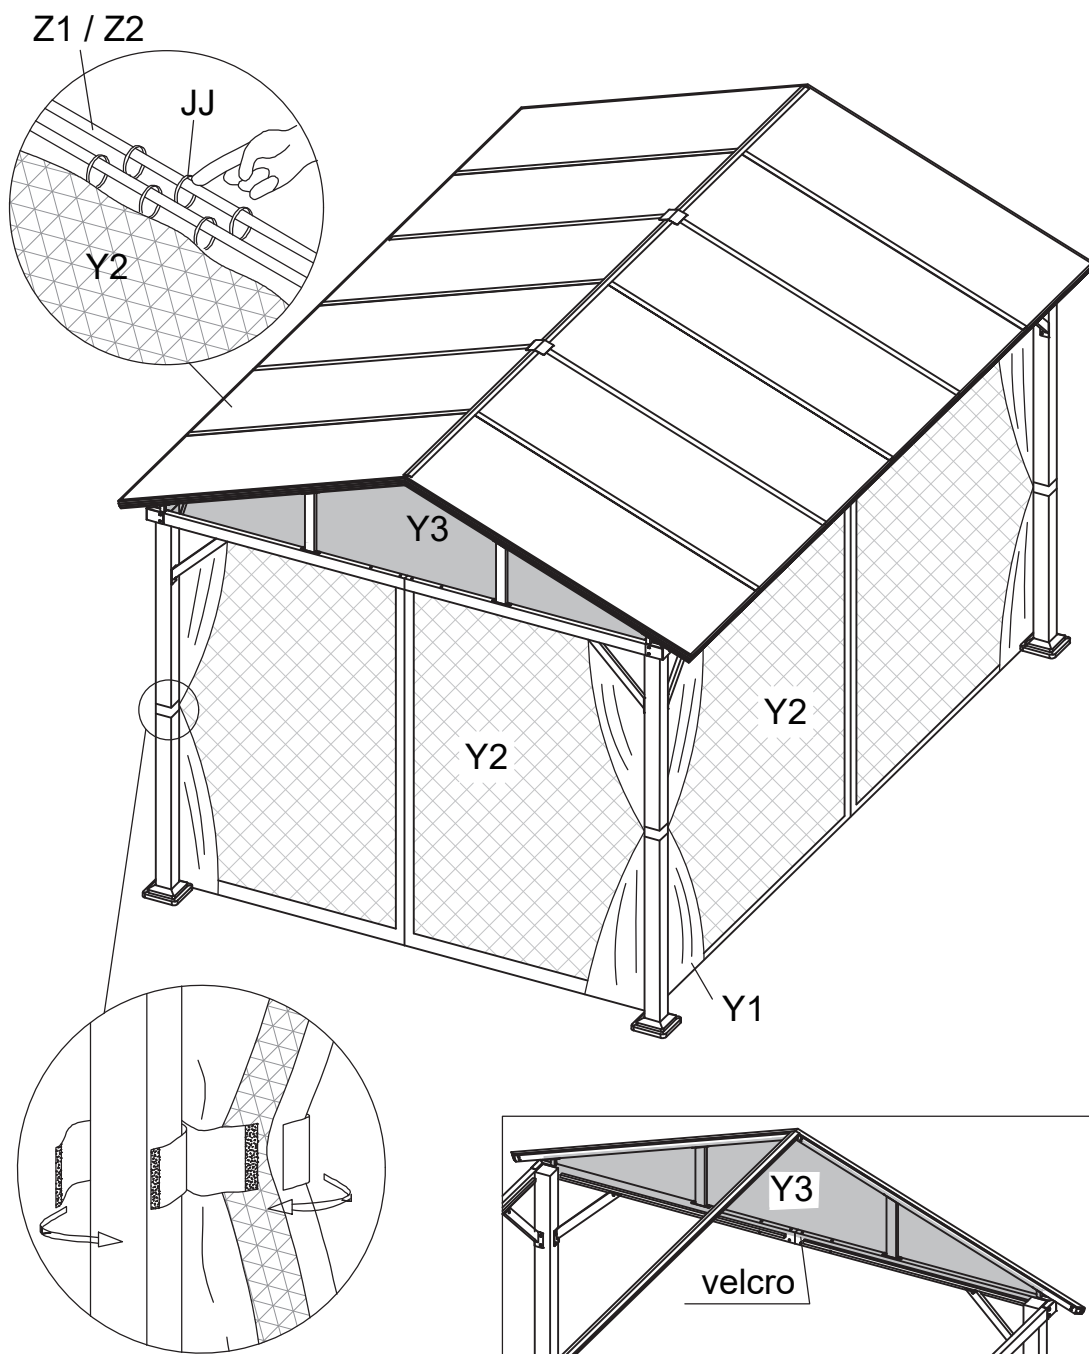

**Attention:**



1. Pls paste the Y3 on the corresponded C1, C2, D1, D2 when assemble this step. These parts have pre-adhesive tape.
2. Pls dis-assemble all the curtains and nettings when heavy rain, where the connect of the O and G1, G3, G2 may have small leakage.

O


JJ x 80



<12>

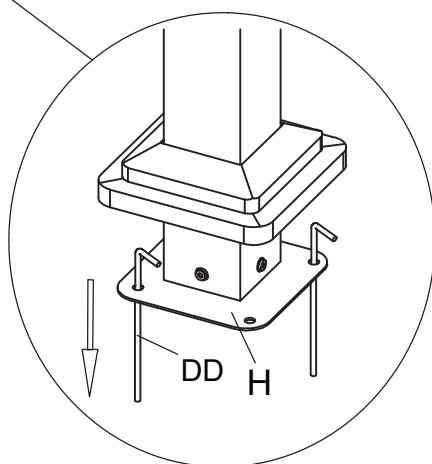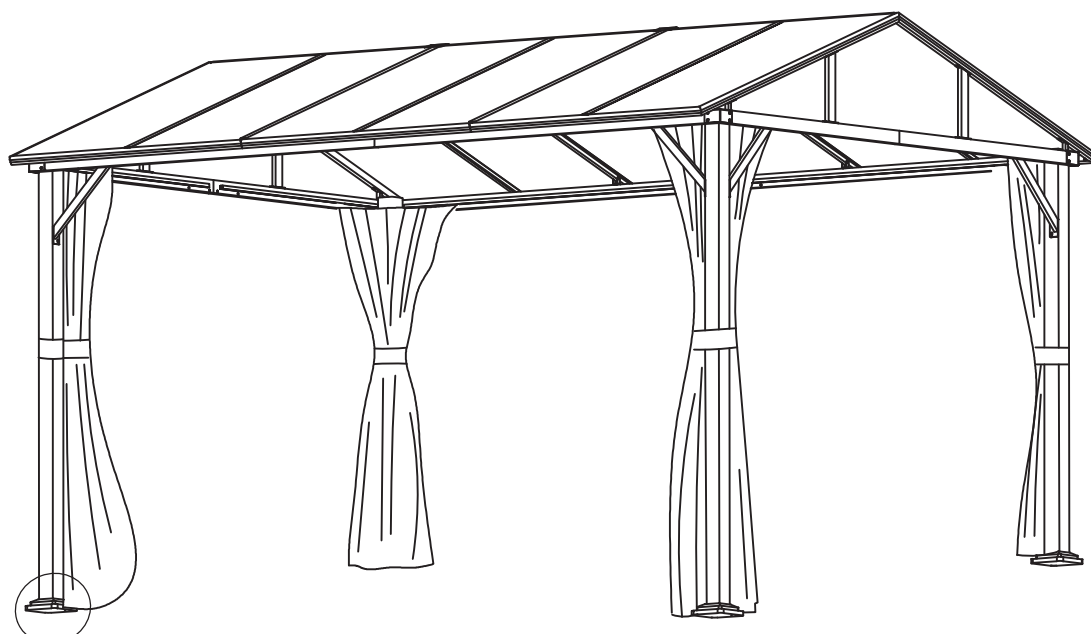

12



FF x 8