



15FT x 15FT

ZHG-016MS

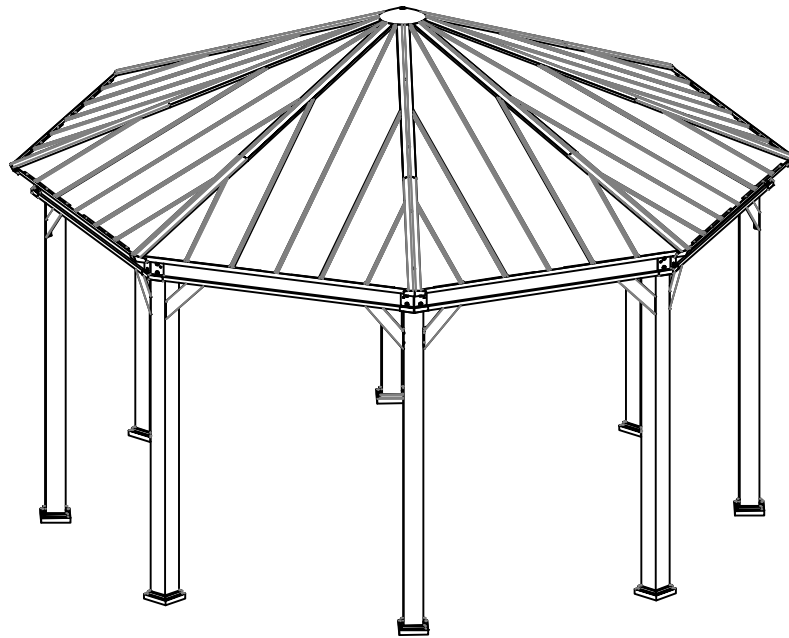

ATTENTION:


1. The gazebo comes with 4 boxes. Sometimes they may be delivered on different dates. Please wait another 2-3 days or contact us for assistance.
2. Please check the manual carefully to make sure you have received all the parts.
3. If there is anything missing, please tell us the letter of the parts you need.
4. If there is any damage, please send us clear photos, we will check and give you the best solution as soon as possible.



A 8x



B 8x




C 8x



E 1x



P 1x



F 8x



J1 8x



J2 8x




M1 8x




M2 8x




M3 8x




P1 16x




P2 8x




P3 8x

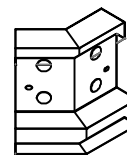


P4 8x



Q1 8x




Q2 8x



Q3 8x




R 1x




R1 8x



R2 8x



S 16x



Y1 8x



Y2 8x



ST 5x15

AA 16x




M6

BB 16x



M6

DD 16x



M6x50

EE 32x




M6x20

FF 320x




M6x15

GG 72x



M6x55

JJ 16x



M6x35

KK 16x




PP 16x



M6x40

QQ 32x



Z1 2x

<1>




A 8x




B 8x



C 8x




P1 16x




P2 8x


STEP1

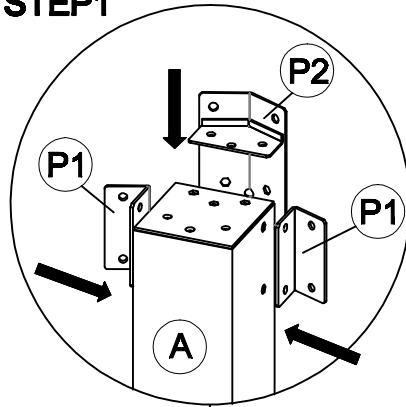


STEP4

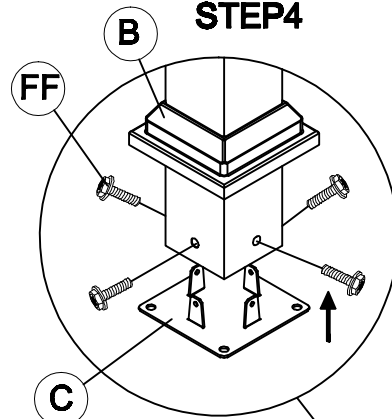

STEP2

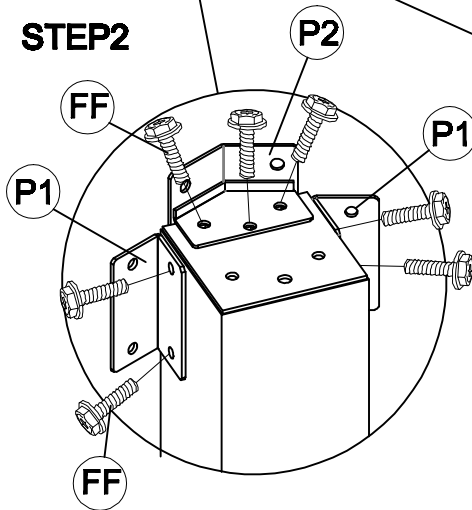


STEP3

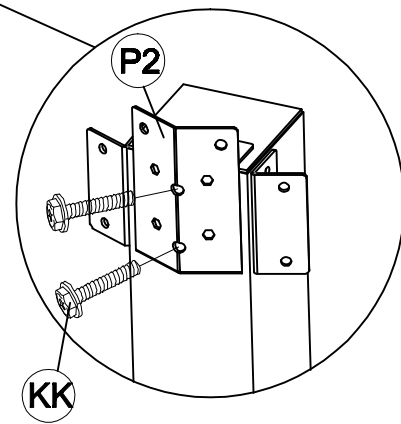


4

KK 16x




M6x35

FF 88x



M6x20


<2>






F 8x



Y1 8x



Y2 8x

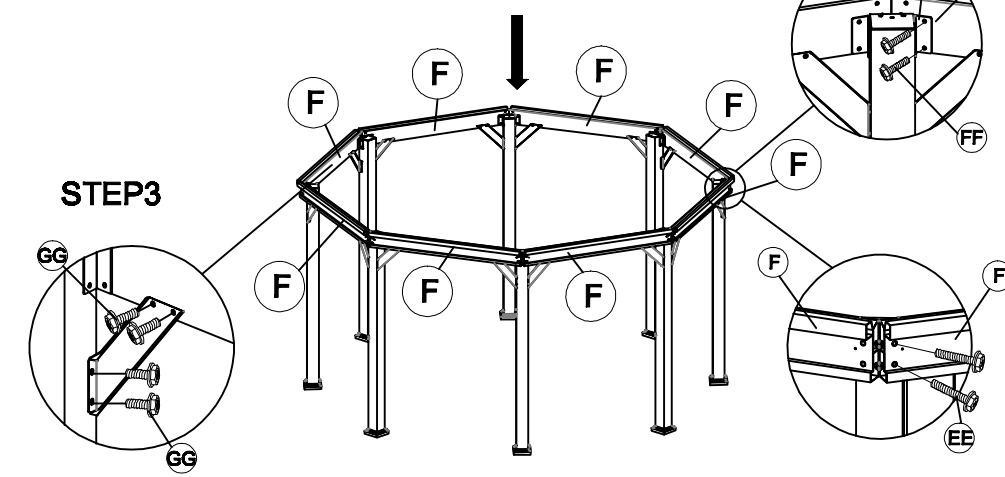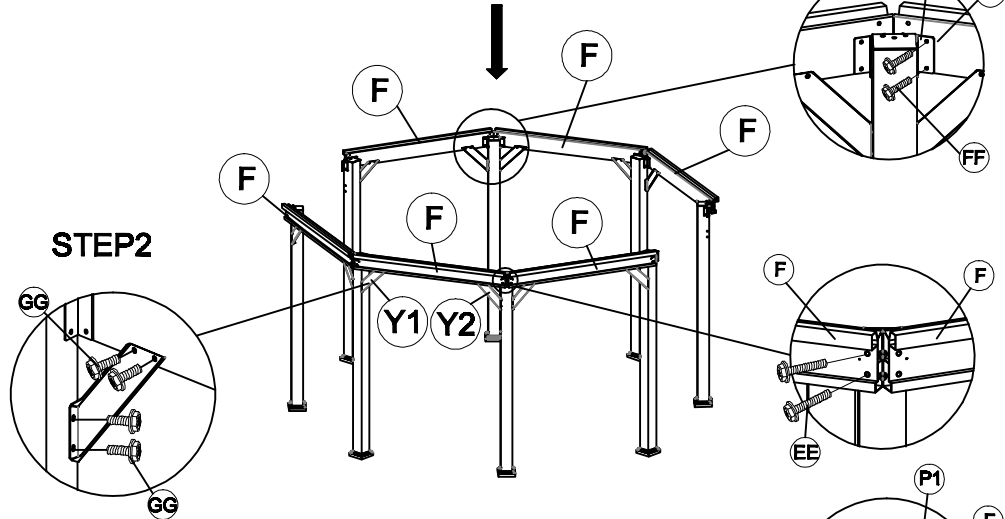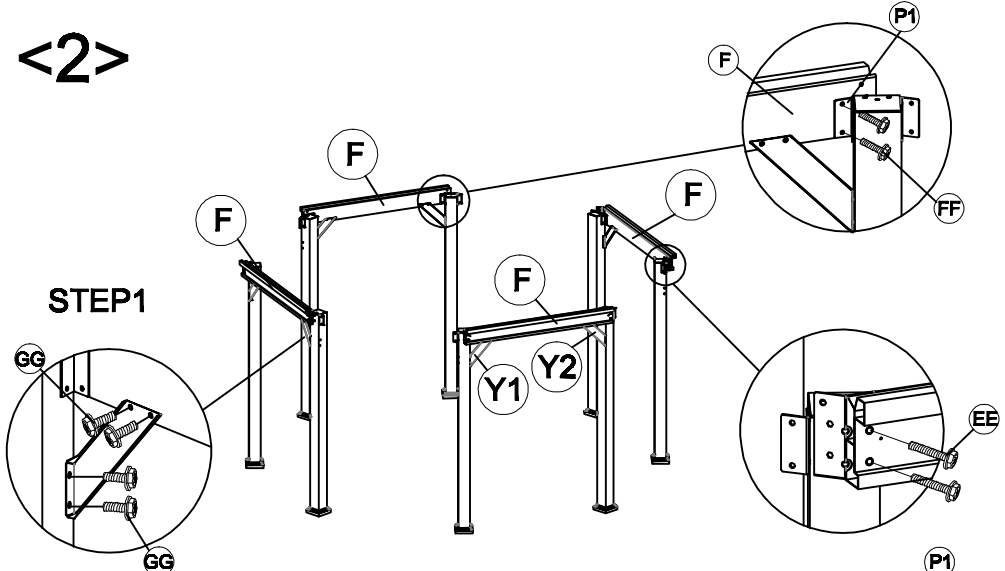


5


FF 32x M6x20

EE 32x M6x50

GG 64x M6x15




P3 8x

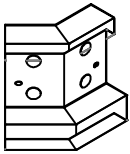



P4 8x

<3>


STEP1

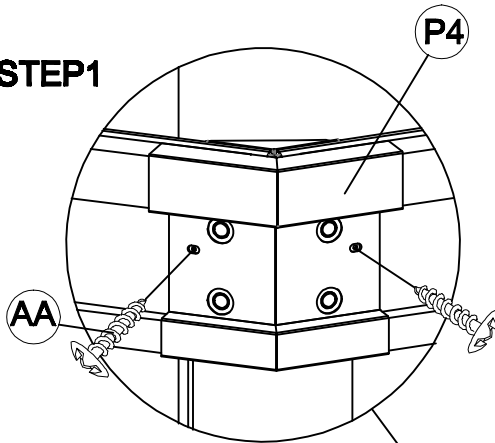

STEP2

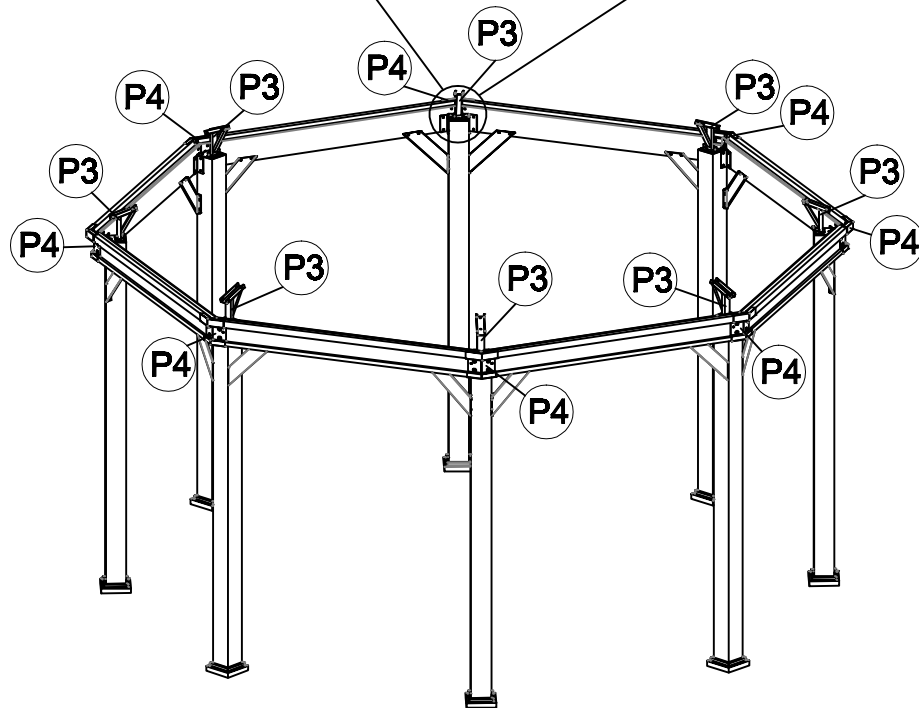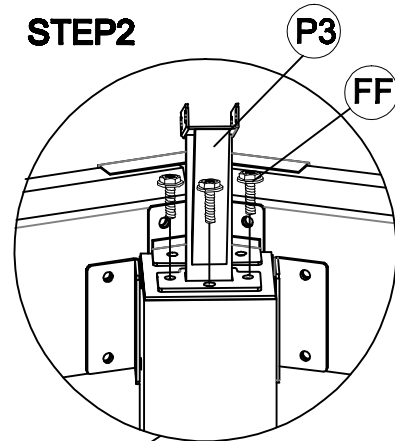


6



M5x15

AA 16x



M6x20

FF 24x


<4>




J1 8x



J2 8x

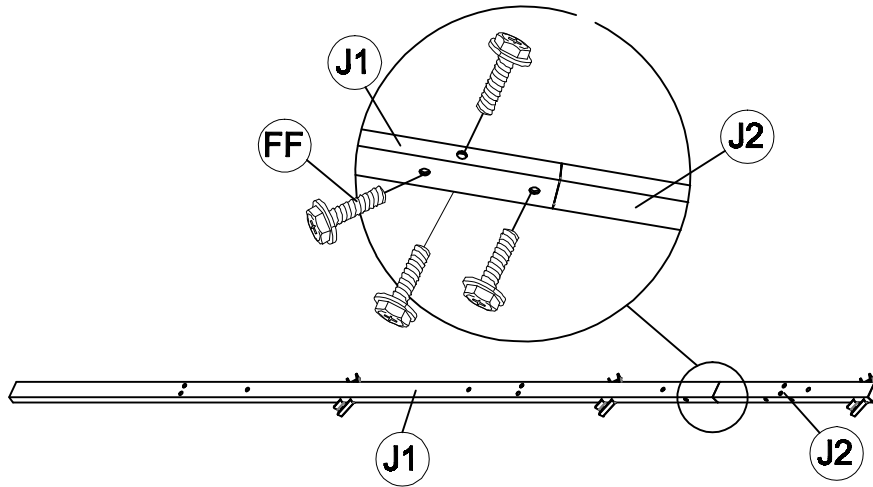

7




FF 32x

M6x20







<5>

E 1x

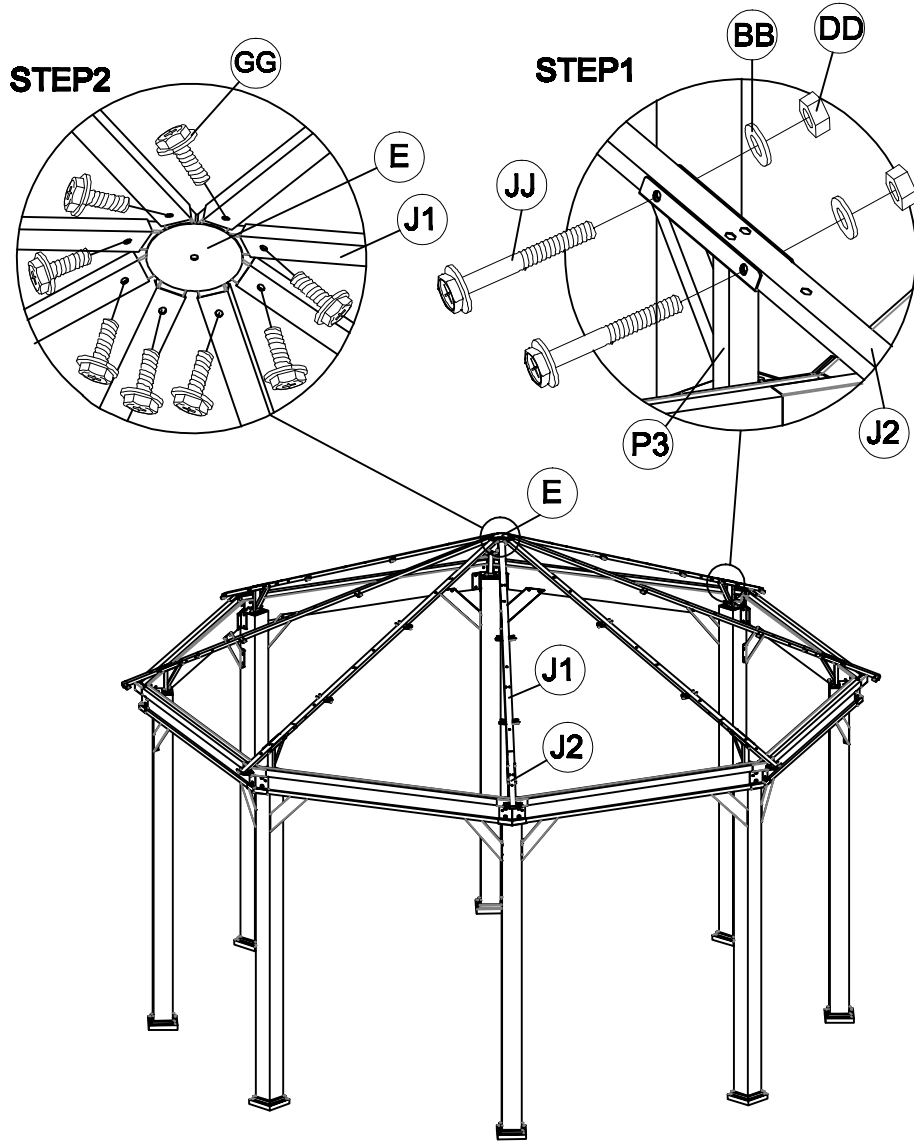

8



 M6 DD 16x	 M6 BB 16x	 M6x15 GG 8x	 M6x55 JJ 16x
---	---	---	--

<6>


M1 8x

M2 8x

M3 8x

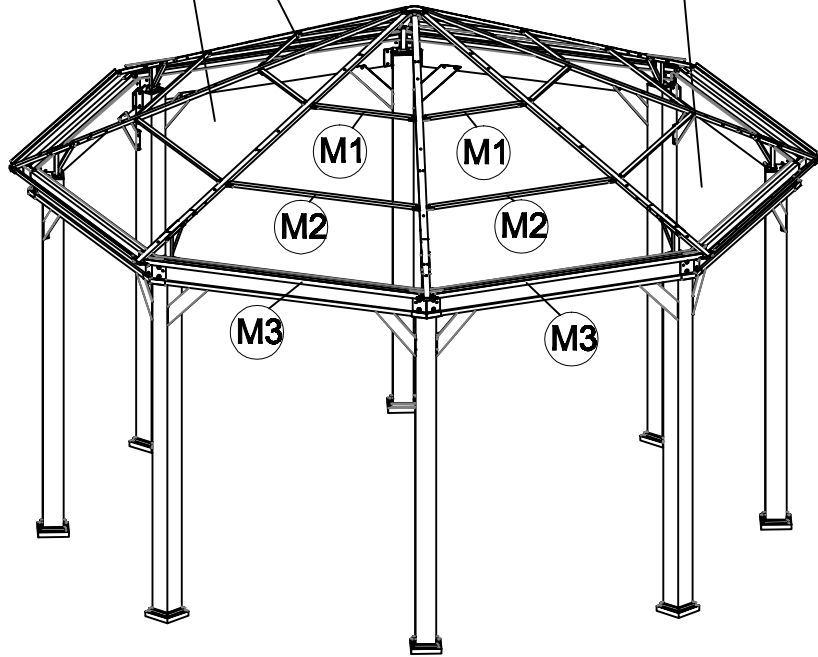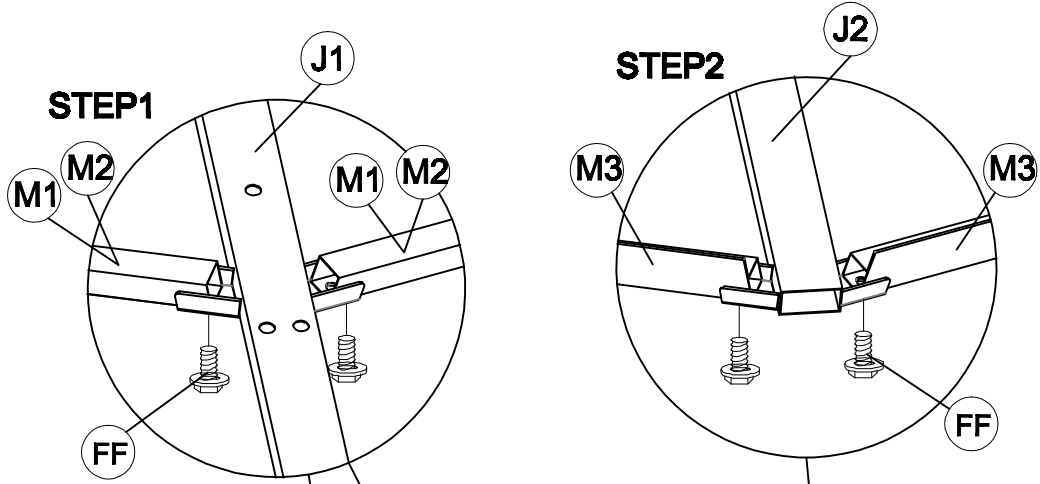


9




FF 48x


M6x20




Q1 6x



Q2 6x




Q3 6x




R1 5x

<7>

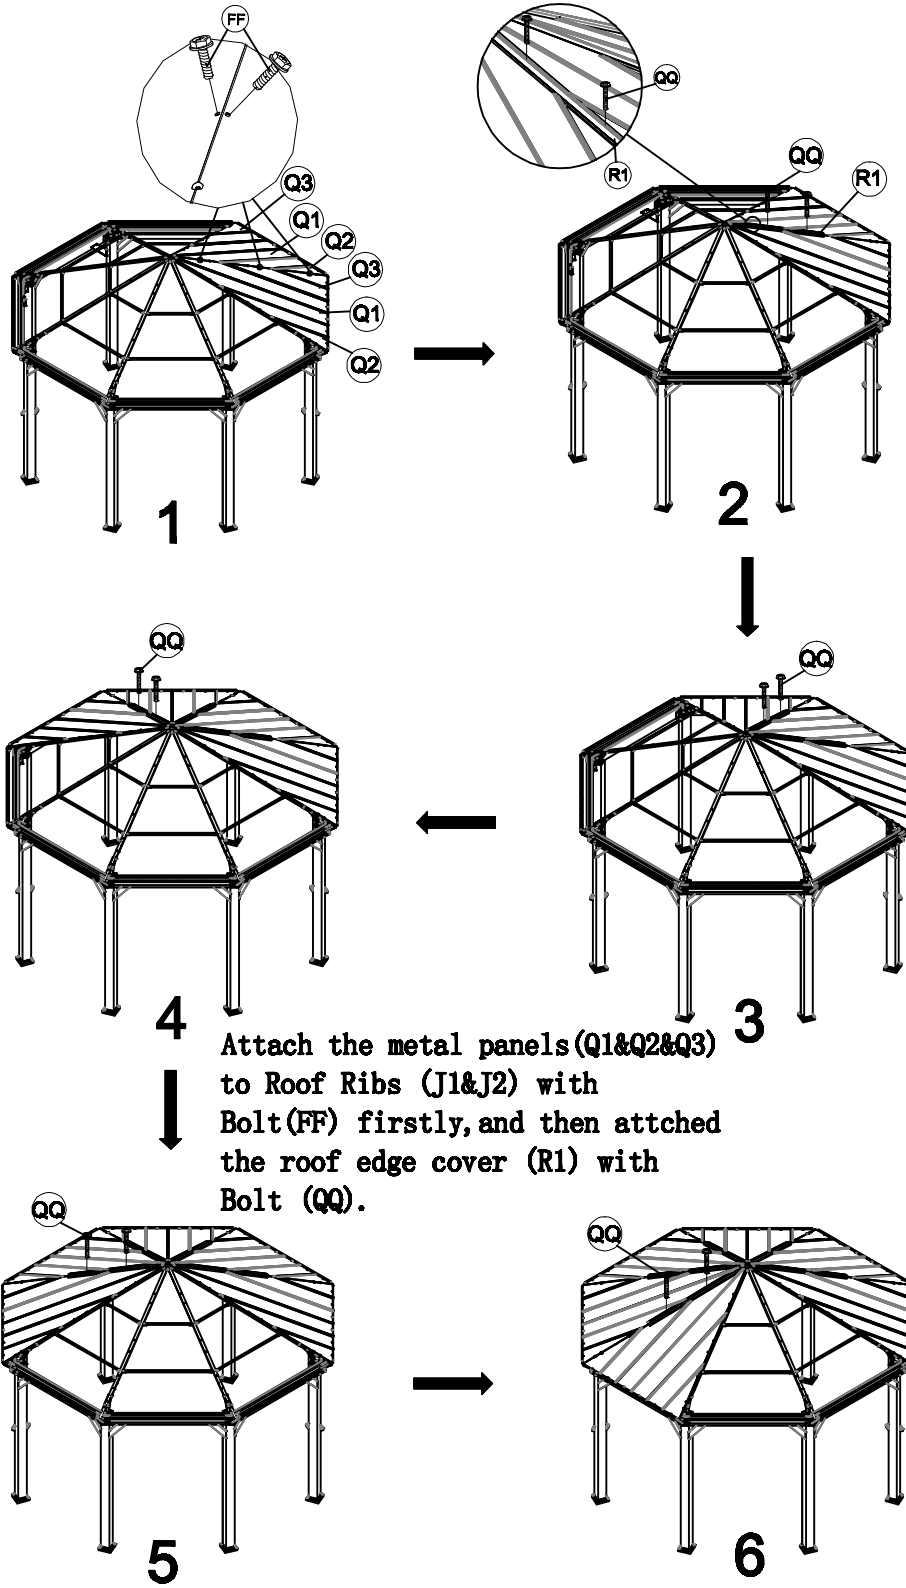


Attach the metal panels (Q1&Q2&Q3) to Roof Ribs (J1&J2) with Bolt (FF) firstly, and then attached the roof edge cover (R1) with Bolt (QQ).



QQ 10x


M6x40




FF 30x

M6x20


<8>




Q1 2x



Q2 2x



Q3 2x



R1 3x




P 1x





R 1x

11

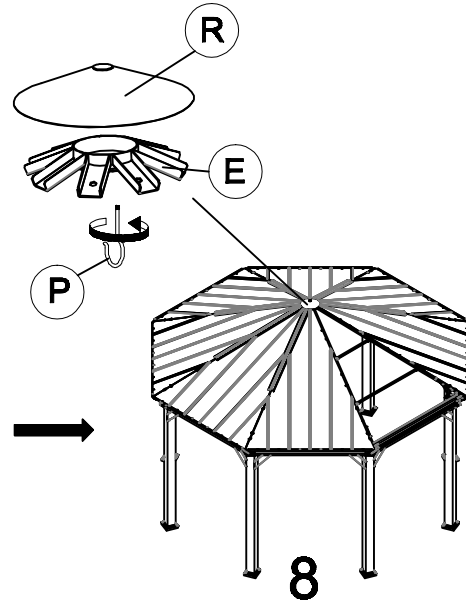


Attach the metal panels (Q1&Q2&Q3) to Roof Ribs (J1&J2) with Bolt (FF) firstly, and then attached the roof edge cover (R1) with Bolt (QQ).

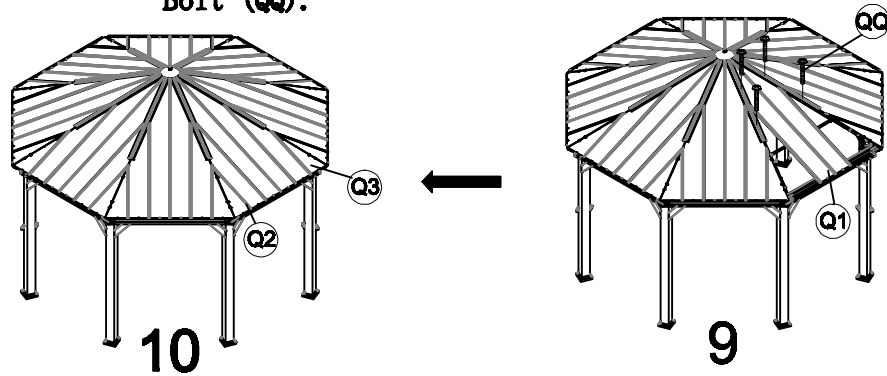

QQ 6x


M6x40



FF 18x

M6x20


<9>




S 16x



R2 8x

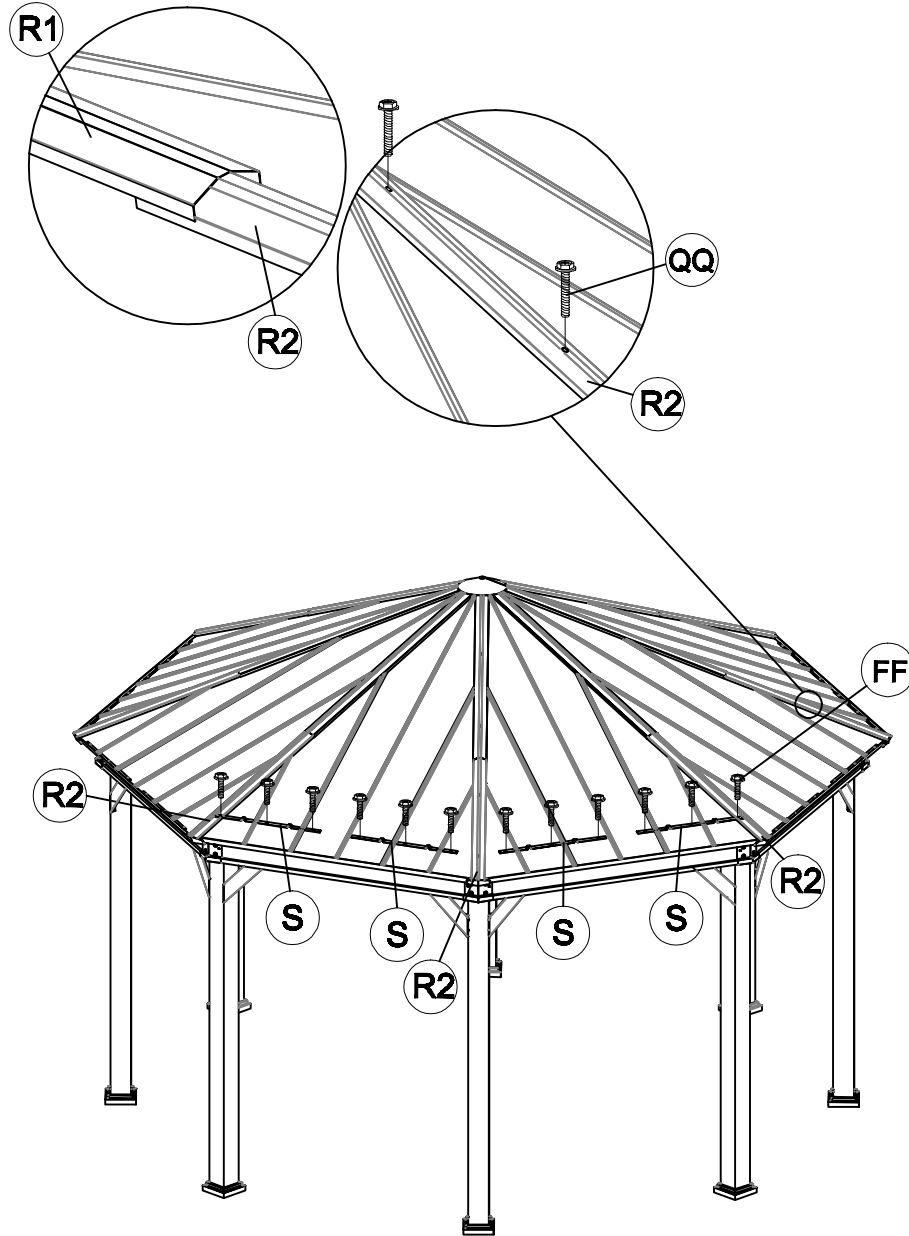


12



QQ 16x




M6x40



FF 48x

M6x20

<10>

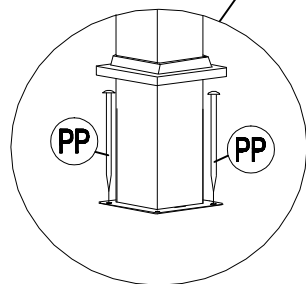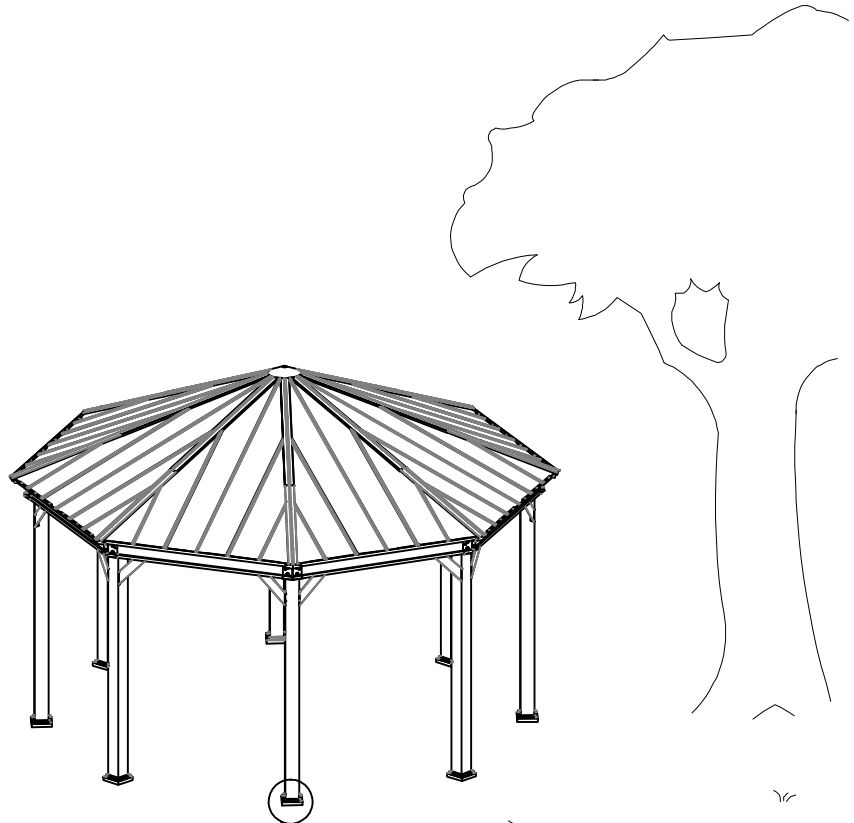

D8X180
PP 16x

