

# 

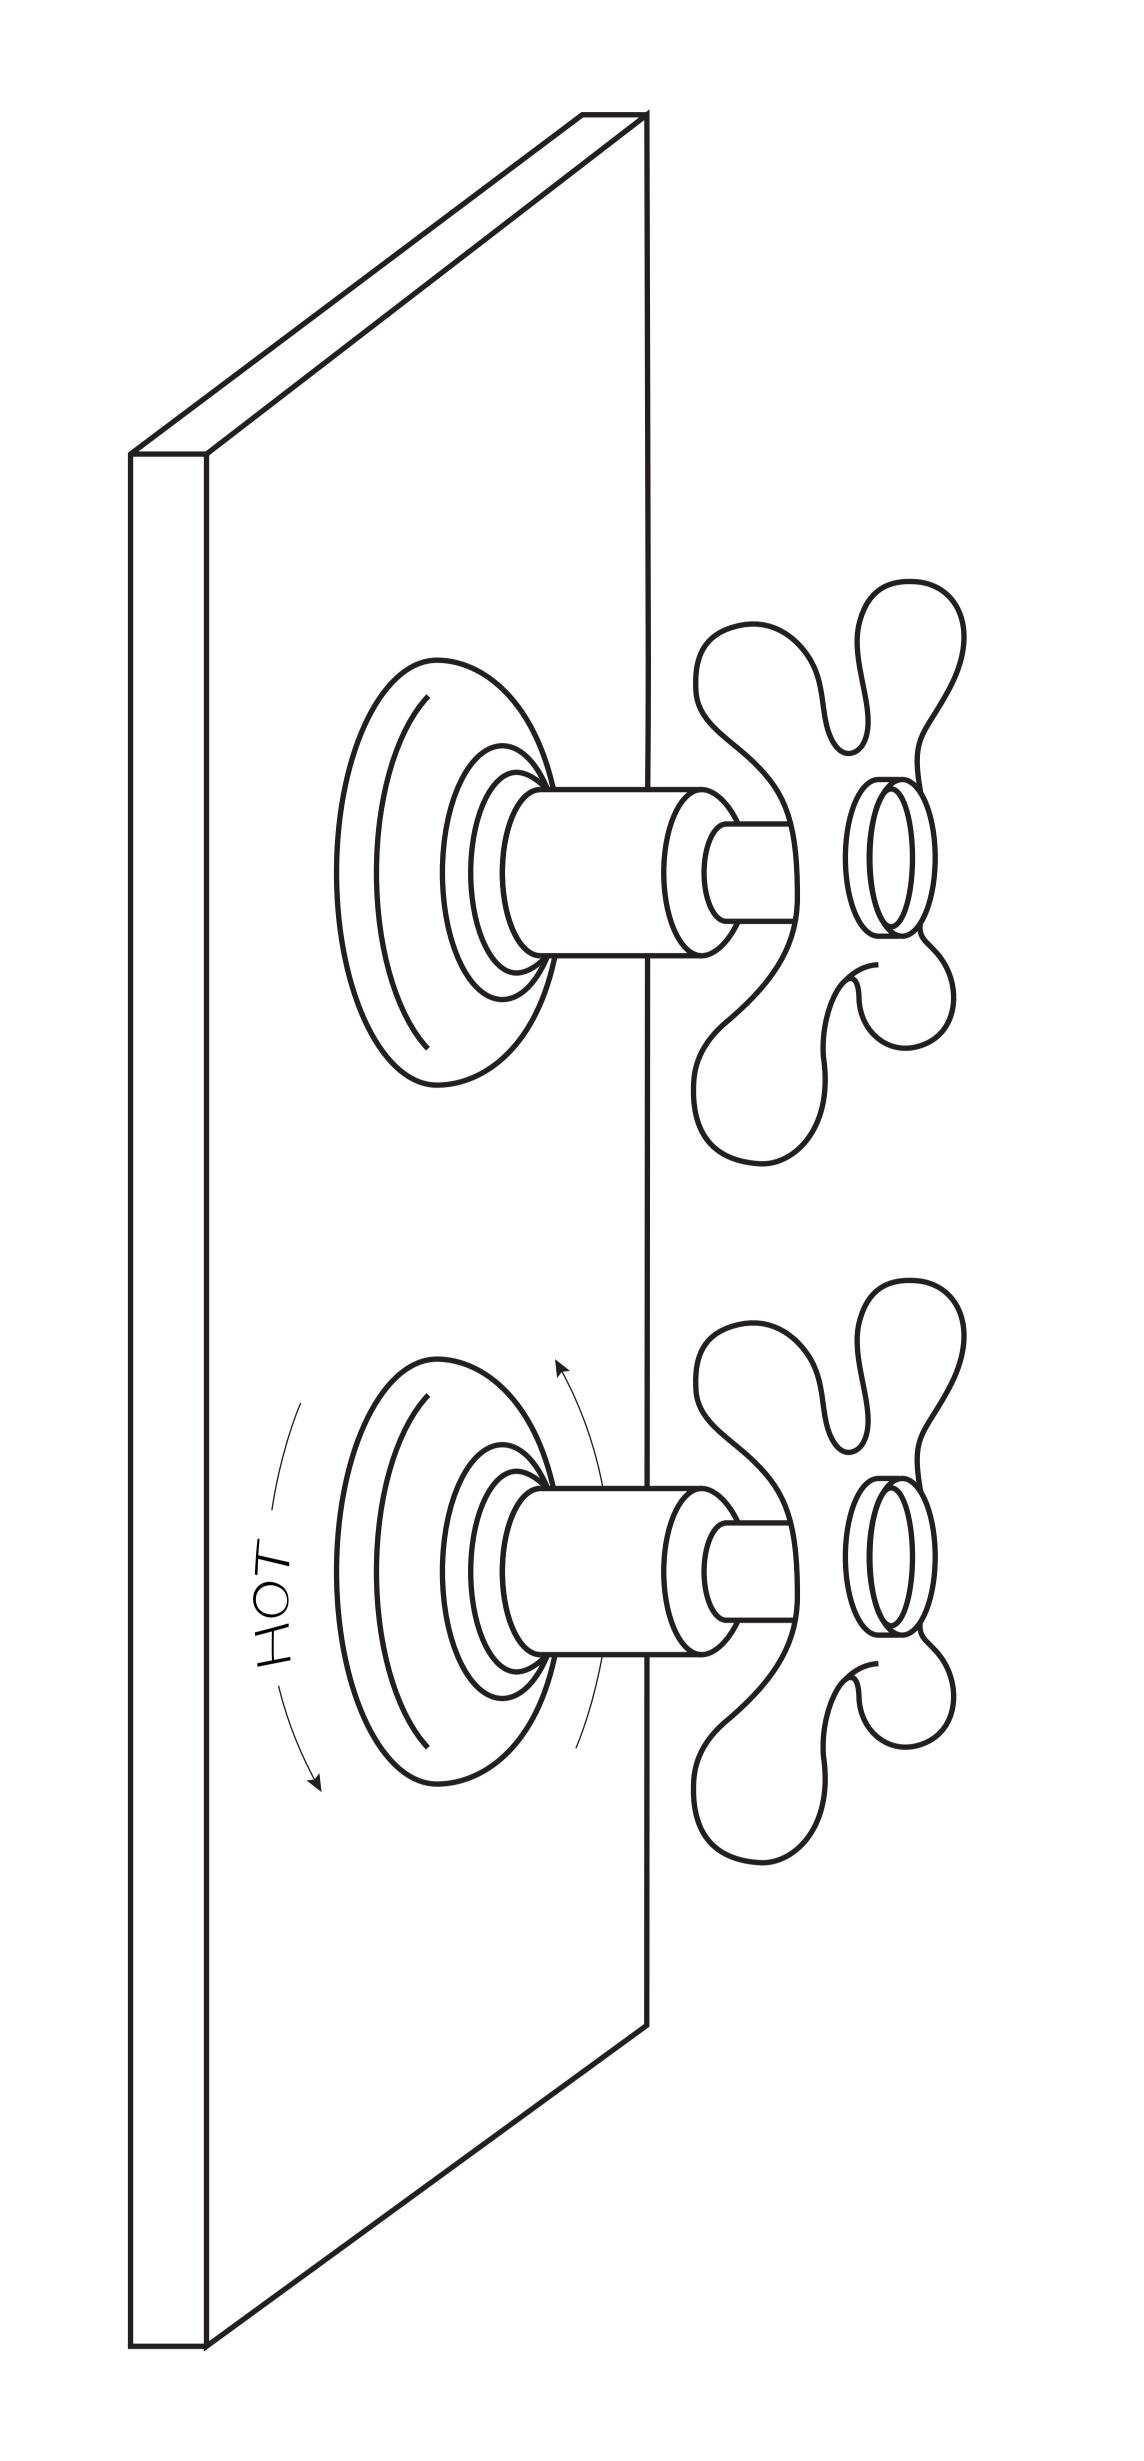

#### Guidelines

• Earth Bonding. Francone Bespoke Taps strives to continually improve so we reserve the right to change product specifications and design.

- All water fittings should only be installed by a qualified plumbing engineer.
- Take extra care during installation not to damage the finish or fitting.
- Before starting, flush pipes to remove debris and turn off water supply.
- We recommend the fitting of isolation valves to the inlet feeds for ease of maintenance.
- Optimal water pressure 3 bar. Minim water pressure 1 bar. Where water pressure exceeds 5 bar, we suggest pressure reducing valves are fitted. For optimum performance, hot and cold water pressure should be correctly balanced.
- Inspect all connections for leaks.

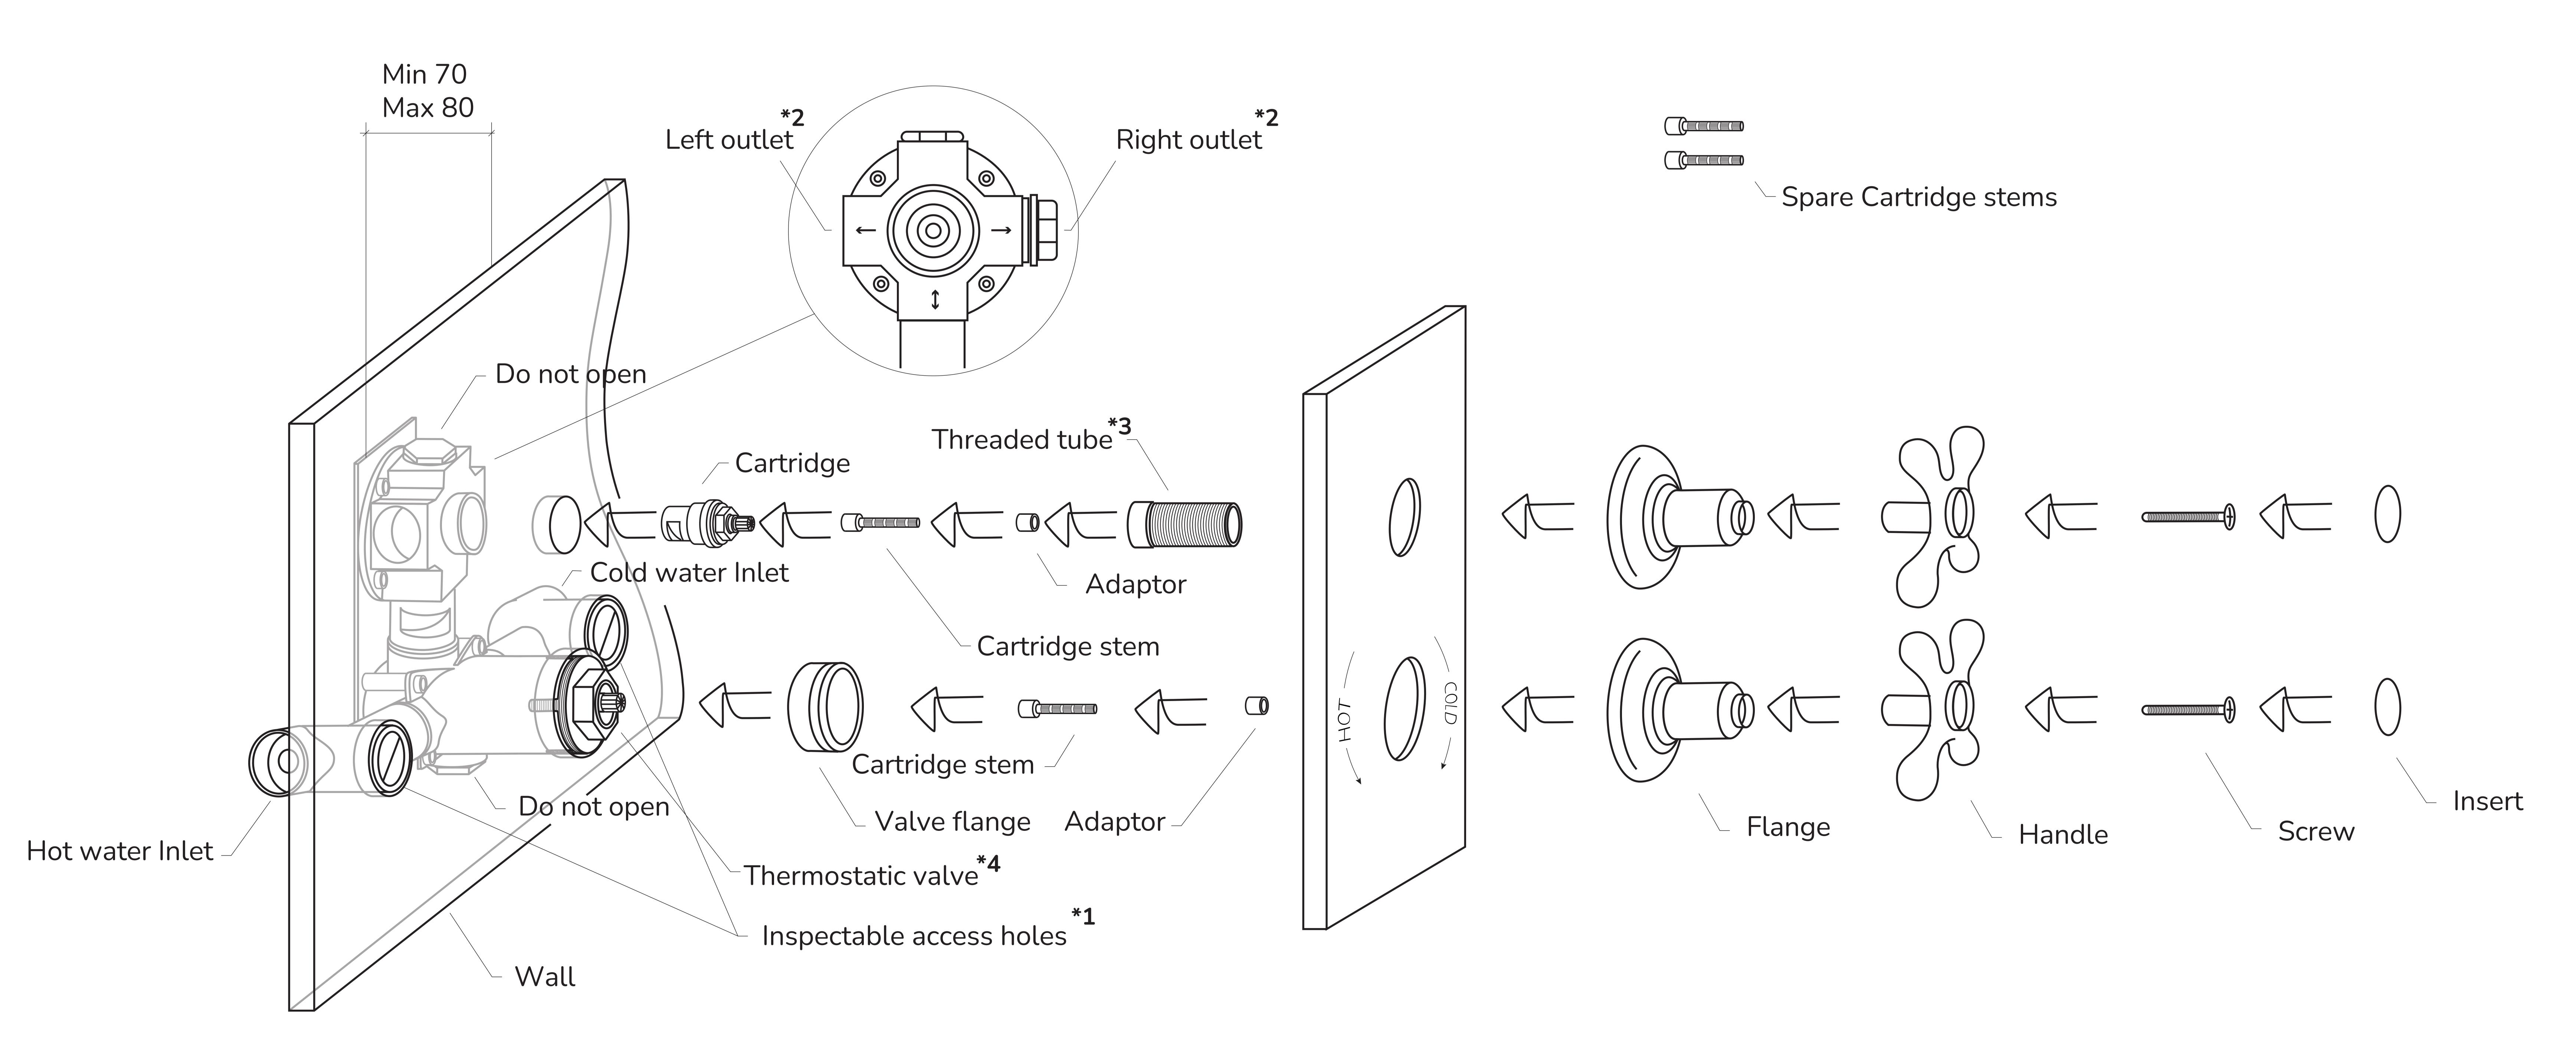

\*1 Inspectable access holes. Do not cover these.

### \*2 Left outlet and right outlet

Select either the right or left outlet to be used and seal the other with the nut supplied.

## \*3 Threaded tubes.

These are to be cut to your required length.

## \*4 Thermostatic valve.

You may hear a click when rotating the temperature handle fully. This is a safety mechanism.