
FRANCONE 2 ways diverted installation

Guidelines

• Earth Bonding. Francone Bespoke Taps strives to continually improve so we reserve the right to change product specifications and design.

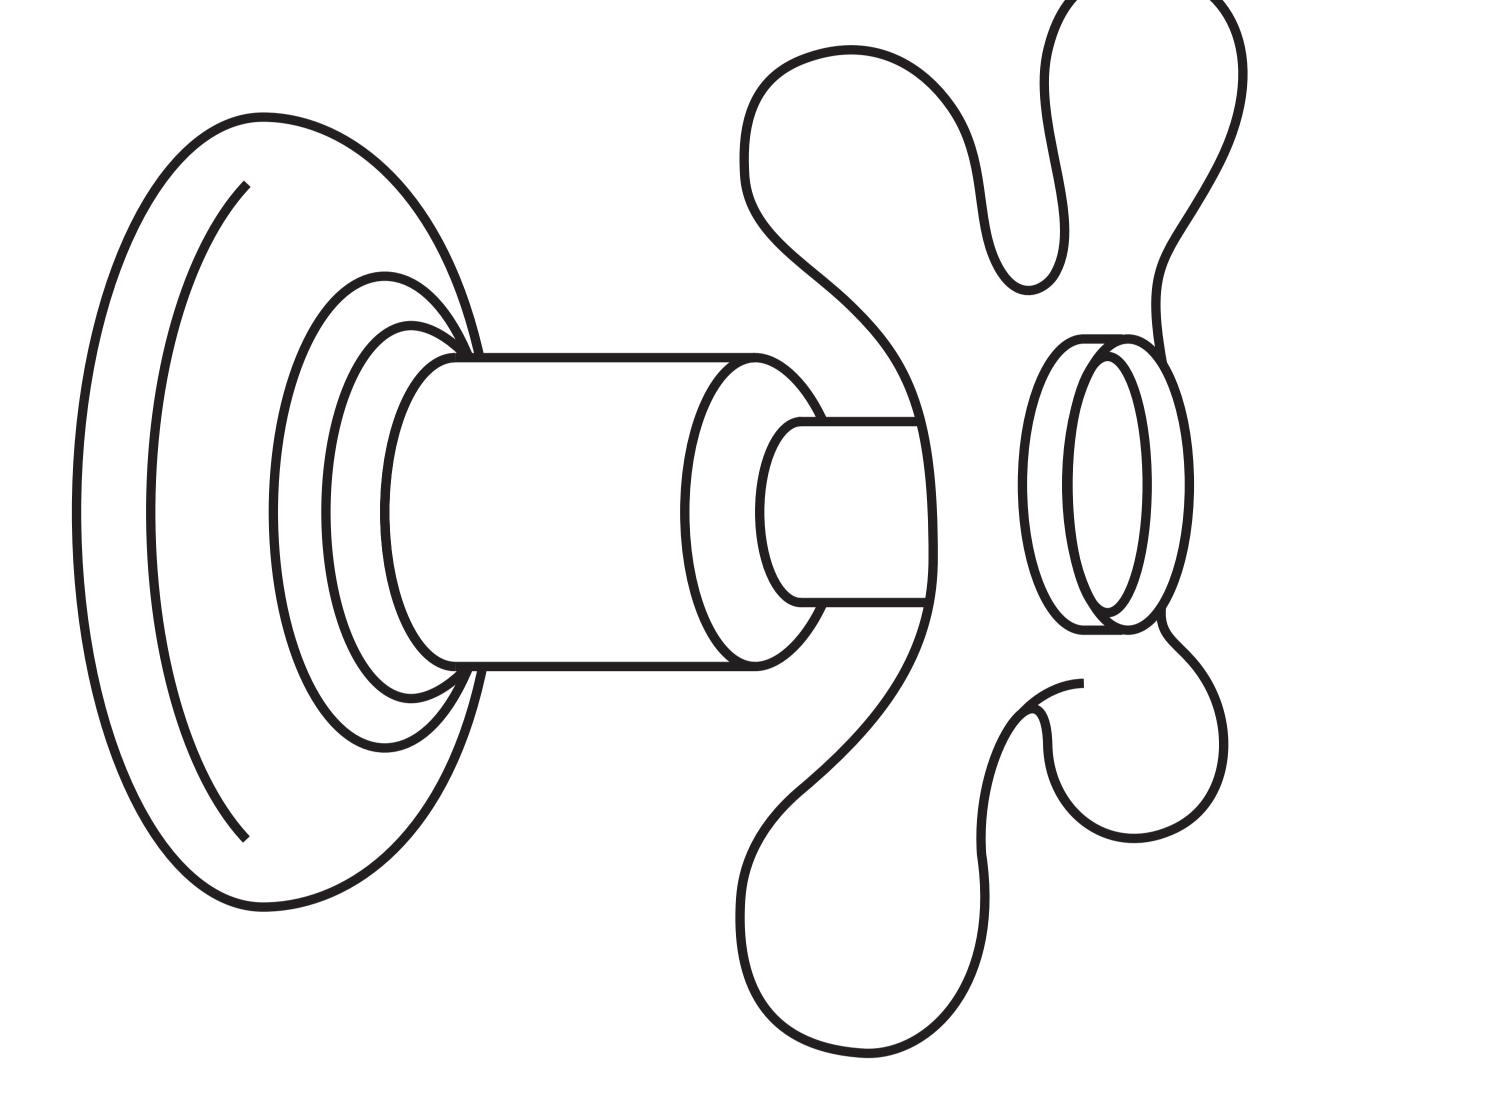

- All water fittings should only be installed by a qualified plumbing engineer.
- Take extra care during installation not to damage the finish or fitting.
- Before starting, flush pipes to remove debris and turn off water supply.
- We recommend the fitting of isolation valves to the inlet feeds for ease of maintenance.
- Optimal water pressure 3 bar. Minim water pressure 1 bar. Where water pressure exceeds 5 bar, we suggest pressure reducing valves are fitted. For optimum performance, hot and cold water pressure should be correctly balanced.
- Inspect all connections for leaks.

