

**1.**  
PRINT AT 100% SCALE  
ON A4 PAPER


**2.**  
ALIGN FOLDED EDGE  
WITH DOOR EDGE

**3.**  
DRILL HOLES WITH  
4.5MM DRILL BIT

**4.**  
CHOOSE THE SUITABLE  
SELF-TAPPING SCREW  
FOR YOUR DOOR  
THICKNESS, ENSURE THE  
SCREW WILL NOT BE TOO  
LONG THAT IT COMES  
THROUGH THE FACE OF  
YOUR HANDLE.

**5.**  
SCREW THROUGH THE BACK  
OF YOUR DOOR OR DRAWER  
FRONT INTO THE HANDLE

CENTRE

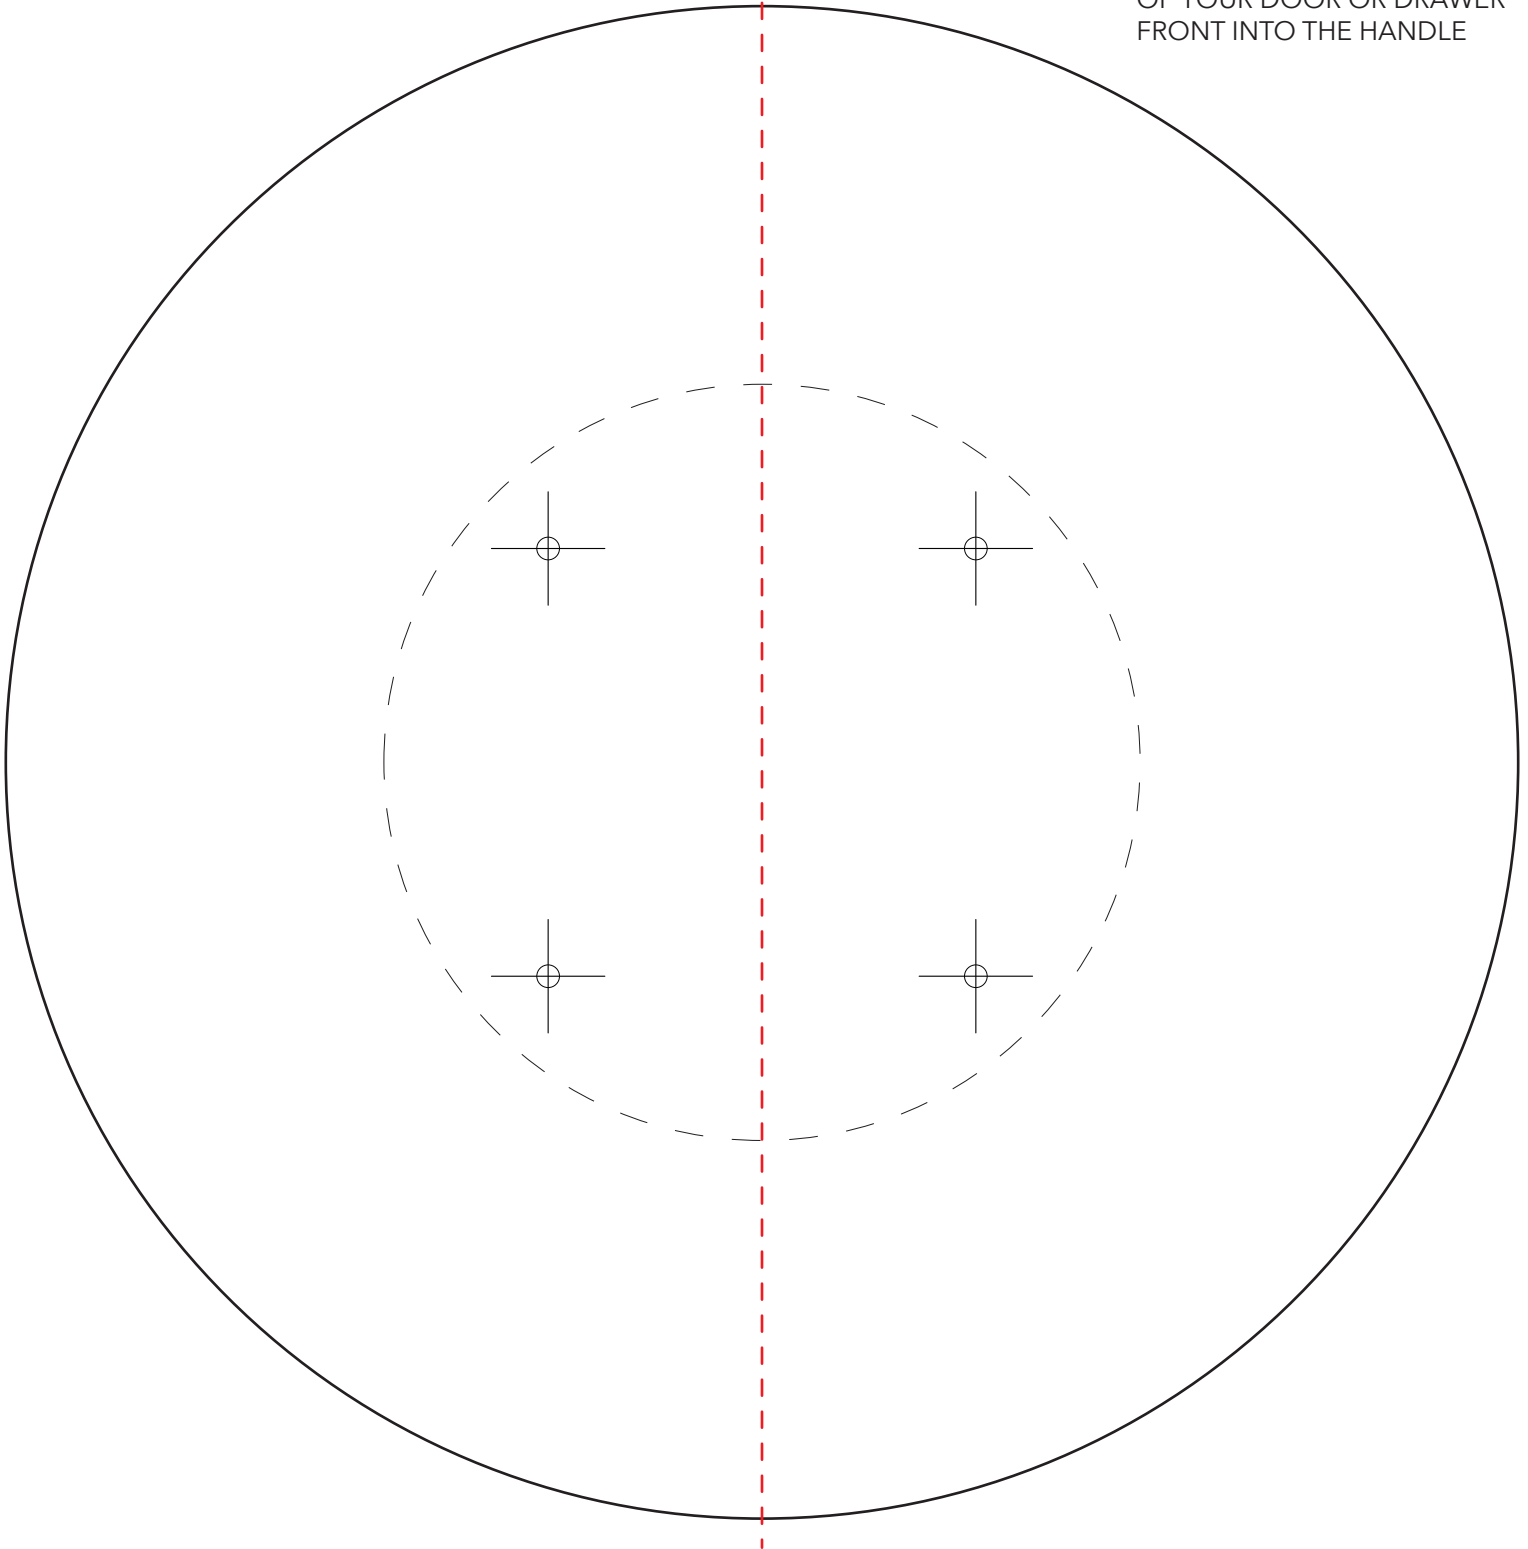

**SO WATT**

[www.sowatt.com.au](http://www.sowatt.com.au)

**FULL MOON - LARGE**  
MOUNTING TEMPLATE  
SW021A