


1. PRINT AT 100% SCALE ON A1 PAPER

2. ALIGN FOLDED EDGE WITH DOOR EDGE

3. DRILL HOLES WITH 4.5MM DRILL BIT

4. CHOOSE THE SUITABLE SELF-TAPPING SCREW FOR YOUR DOOR THICKNESS, ENSURE THE SCREW WILL NOT BE TOO LONG THAT IT COMES THROUGH THE FACE OF YOUR HANDLE.

5. SCREW THROUGH THE BACK OF YOUR DOOR OR DRAWER FRONT INTO THE HANDLE

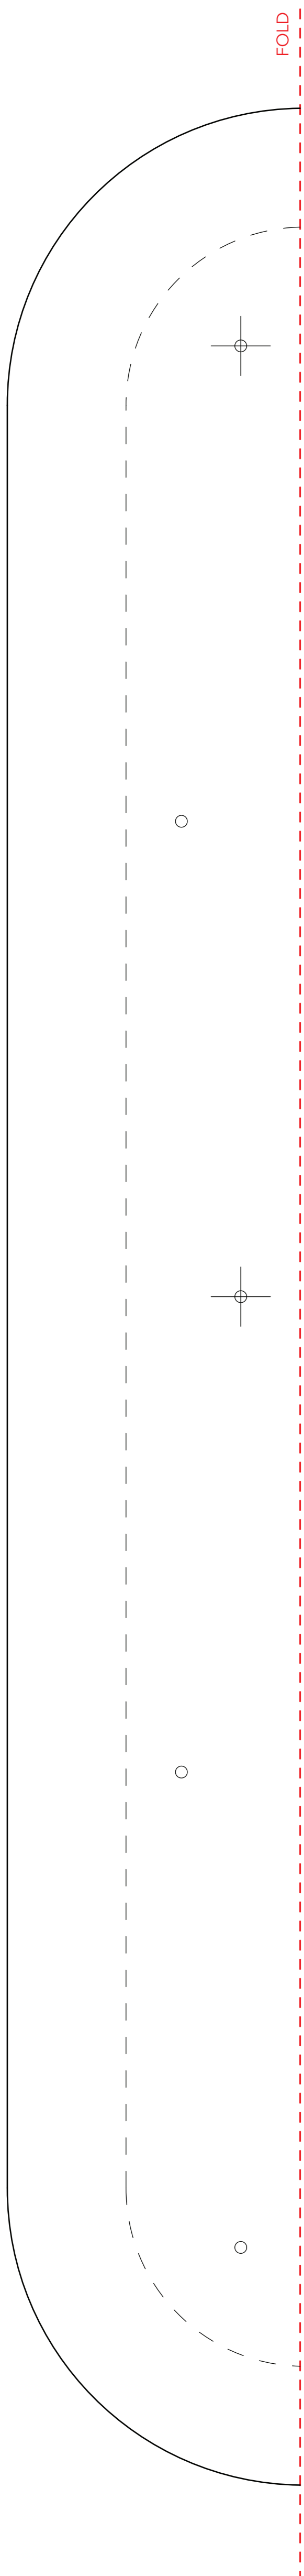


1. PRINT AT 100% SCALE ON A1 PAPER

2. ALIGN FOLDED EDGE WITH DOOR EDGE

3. DRILL HOLES WITH 4.5MM DRILL BIT

4. CHOOSE THE SUITABLE SELF-TAPPING SCREW FOR YOUR DOOR THICKNESS, ENSURE THE SCREW WILL NOT BE TOO LONG THAT IT COMES THROUGH THE FACE OF YOUR HANDLE.

5. SCREW THROUGH THE BACK OF YOUR DOOR OR DRAWER FRONT INTO THE HANDLE

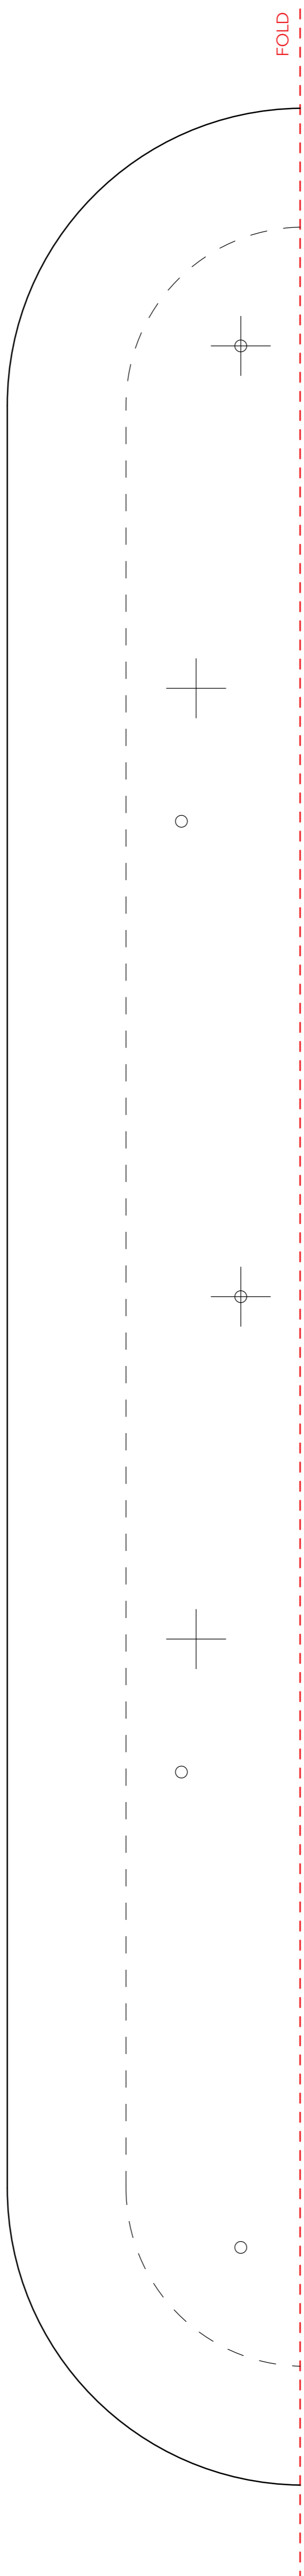


1. PRINT AT 100% SCALE ON A1 PAPER

2. ALIGN FOLDED EDGE WITH DOOR EDGE

3. DRILL HOLES WITH 4.5MM DRILL BIT

4. CHOOSE THE SUITABLE SELF-TAPPING SCREW FOR YOUR DOOR THICKNESS, ENSURE THE SCREW WILL NOT BE TOO LONG THAT IT COMES THROUGH THE FACE OF YOUR HANDLE.

5. SCREW THROUGH THE BACK OF YOUR DOOR OR DRAWER FRONT INTO THE HANDLE

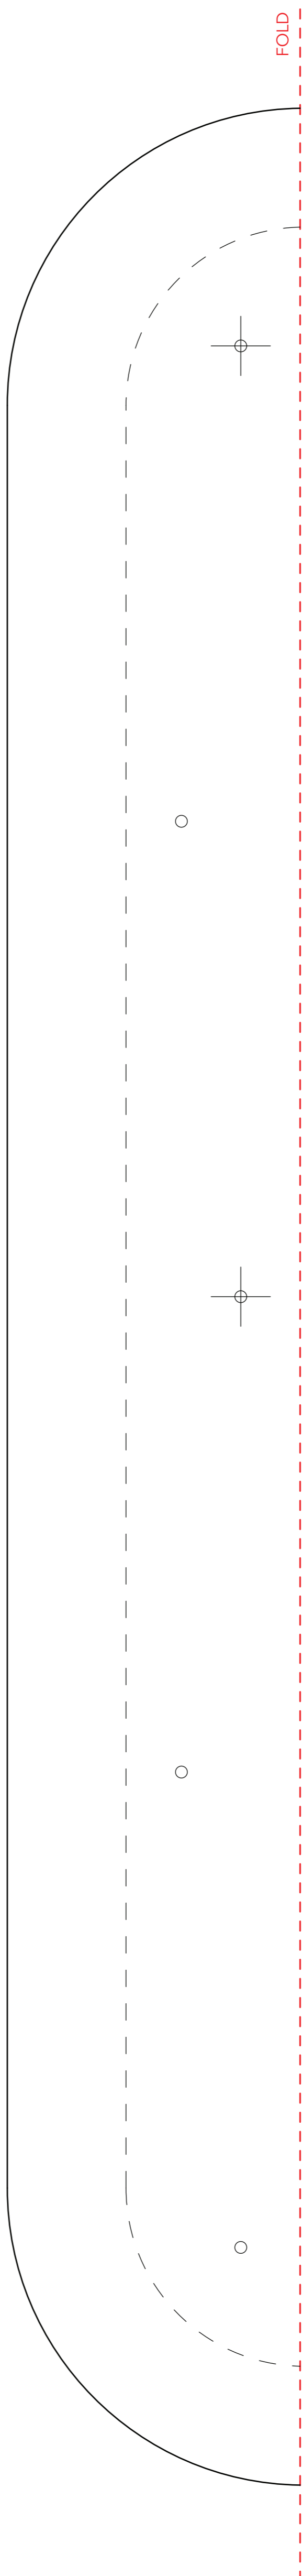

1. PRINT AT 100% SCALE ON A1 PAPER

2. ALIGN FOLDED EDGE WITH DOOR EDGE

3. DRILL HOLES WITH 4.5MM DRILL BIT

4. CHOOSE THE SUITABLE SELF-TAPPING SCREW FOR YOUR DOOR THICKNESS, ENSURE THE SCREW WILL NOT BE TOO LONG THAT IT COMES THROUGH THE FACE OF YOUR HANDLE.

5. SCREW THROUGH THE BACK OF YOUR DOOR OR DRAWER FRONT INTO THE HANDLE

