


1.
PRINT AT 100% SCALE
ON A4 PAPER

2.
ALIGN FOLDED EDGE
WITH DOOR EDGE

3.
DRILL HOLES WITH
4.5MM DRILL BIT

4.
CHOOSE THE SUITABLE
SELF-TAPPING SCREW
FOR YOUR DOOR
THICKNESS, ENSURE THE
SCREW WILL NOT BE TOO
LONG THAT IT COMES
THROUGH THE FACE OF
YOUR HANDLE.

5.
SCREW THROUGH THE BACK
OF YOUR DOOR OR DRAWER
FRONT INTO THE HANDLE

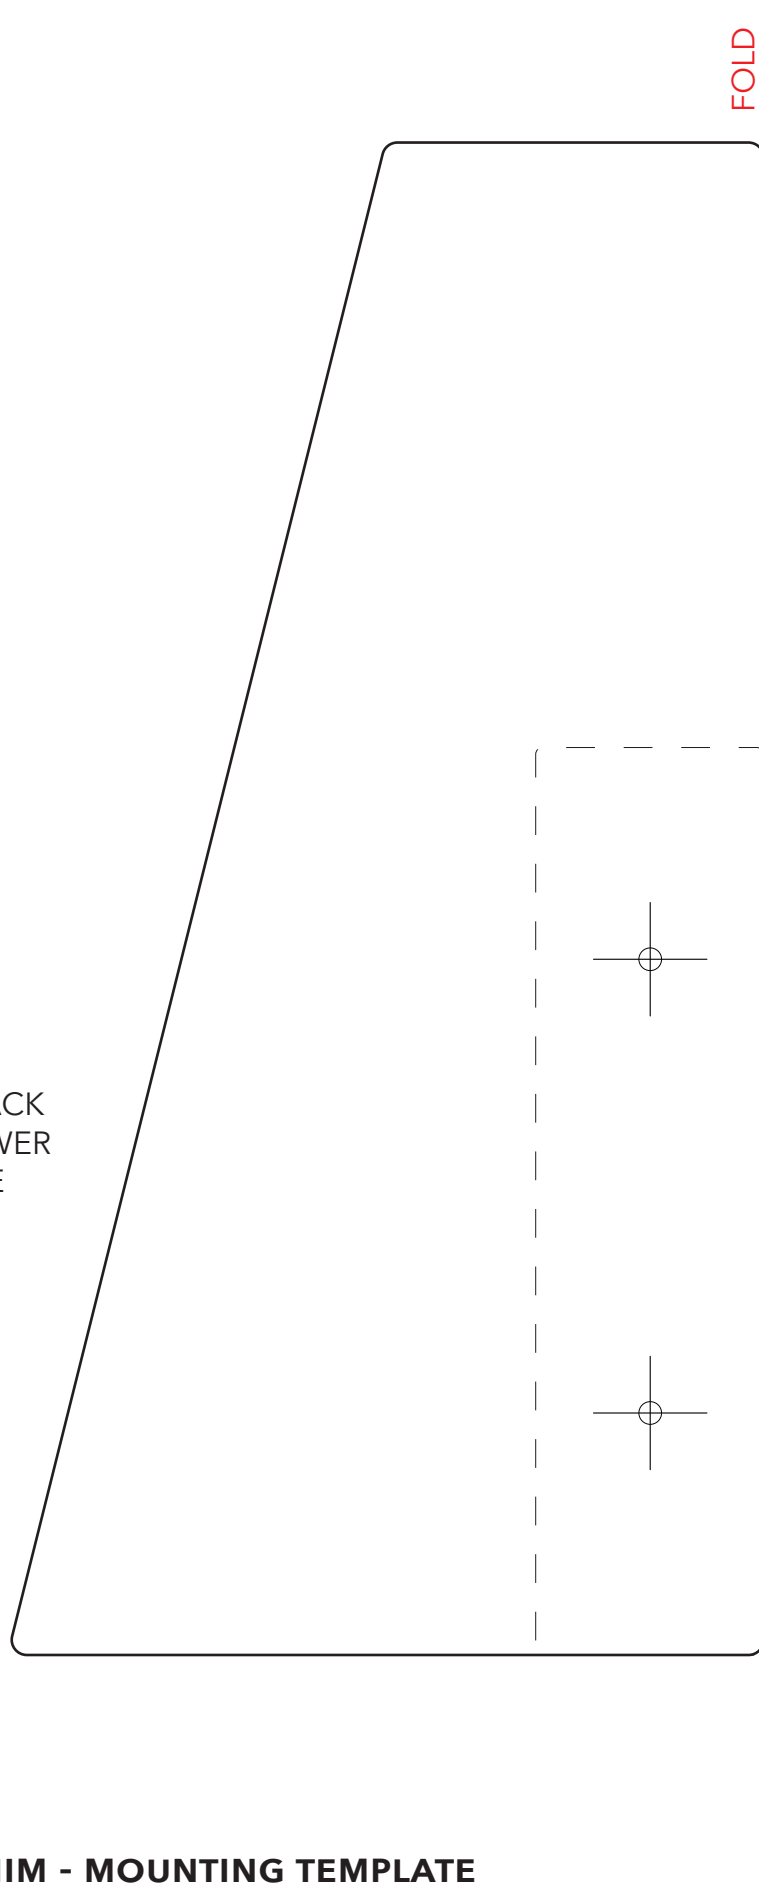

SO WATT

www.sowatt.com.au

SHIM - MOUNTING TEMPLATE
MOUNTING TEMPLATE
SW022A