

# VW up!/Skoda Citigo/Seat Mii Parcel Shelf Lifter String Kit

## Kit Contents

- Qty - 2: Parcel Shelf Strings with ball-end fittings and retaining clips  
Qty - 2: Parcel Shelf String Locating Pins

## Tools Required

- Masking Tape  
Tape Measure  
Drill with suitable drill bits

## Instructions

1. Open boot and place a strip of masking tape on the inner frame of the bootlid, adjacent to both rear window heated window connection. Mark a dot 60mm from the electrical connector. (Fig. 1)



2. Drill a small pilot hole at the marked dot, and increase the hole using incrementally sized drill bits until the hole is 7mm. (Fig. 2)




3. Insert the Parcel Shelf String Locating Pin and press the end plunger fitting into the Pin to secure. Repeat for other side of boot lid. (Fig. 3)




4. Drill a 6mm hole in the parcel shelf, 40mm in from the outer edge, aligned with the radiused corner. Thread one of the Parcel Shelf Strings through the hole from the top, loop uppermost. Repeat for the other side of the parcel shelf. (Fig. 4)



5. Mark 360mm along the Parcel Shelf String, measuring from the loop end. Thread the plastic ball onto the end of the string (Fig.5) and slide up to the underside of the parcel shelf. Slide the small retaining clip onto the string as well, past the previously marked area.

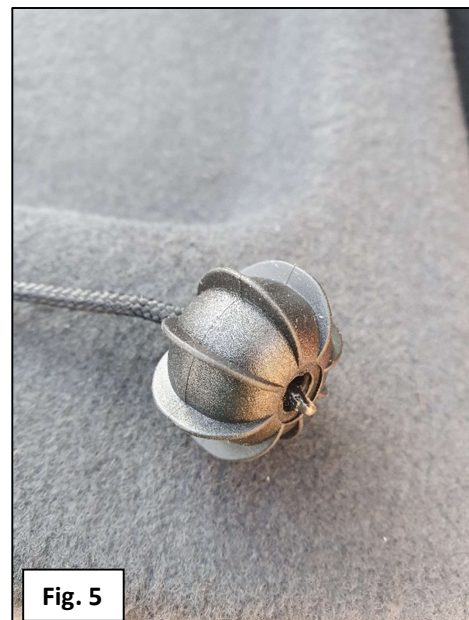

6. Cut the string to length at the previously marked 360mm point. Without allowing the ball or clip to slide off the string, fold the last 10mm of the string back over the eyelet of the retaining clip, and then press the string end and clip together into the hole in the base of the ball. (Fig. 6)

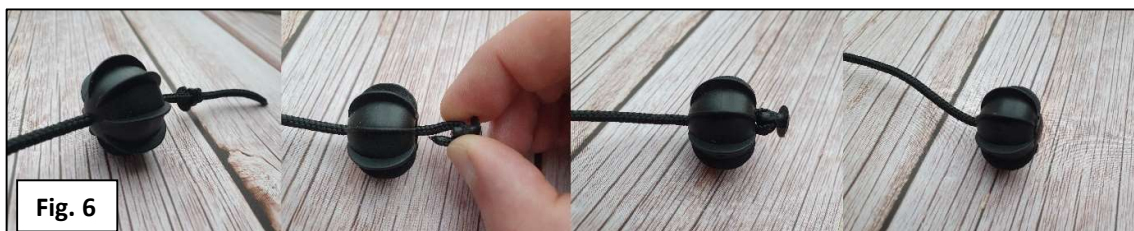

7. Repeat 5 and 6 for other side of parcel shelf. Then install parcel shelf and loop both strings onto Locating Pins.