

Lattice Option for Garden in a Box - 12 Foot Side Assembly Manual

19ft

Revision #2.0 September 14, 2021

Thank you for purchasing a 12ft Lattice Option for your Garden In A Box. Please take the time to identify all the parts prior to assembly.

Safety Points and Other Considerations

Please follow this instruction manual when assembling your Lattice Option and retain the manual for future maintenance purposes.

Please use Safety Eyewear and Gloves while Assembling. Be sure to read and follow all operating instructions for any tools used during assembly.


Remember - NO SAW CUTTING IS REQUIRED!

Estimated Assembly Time for the Lattice Option = 1 Hour.

> 12ft Lattice Option can be installed in any of these three configurations.

In the event of a missing or broken piece, simply call the Outdoor Living Today Customer Support Line @ 1-888-658-1658 within 30 days of the delivery of your purchase. It is our commitment to you to courier replacement parts, free of charge, within 10 business days of this notification. Replacement parts will not be provided free of charge after the 30 day grace period.

Exploded View & Parts List for 12ft Lattice Option

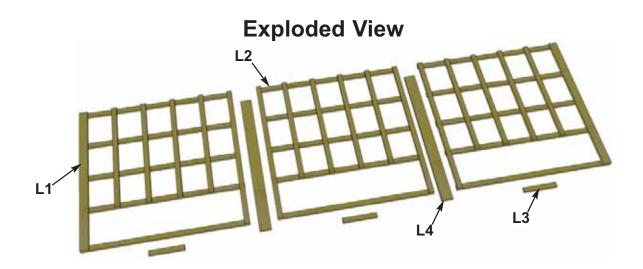


Parts	List	Hardware Kit (Provided)
<u>Part L1</u>	2 - Side Lattice Panels 47 1/2" wide x 47" high	S1 - 2 1/2" x 8 Pcs.
Part L2	1 - Center Lattice Panel 46" wide x 47" high	S3 - 2"
<u>Part L3</u>	3 - Horizontal Cleats 3/4" x 1 1/2" x 10"	
Part L4	2 - Vertical Braces 3/4" x 3 1/2" x 47"	BR1 - Square Drive Bit x 1 Pc.



Note: Your Garden in a Box may be different than the one shown in the steps of this manual, but the assembly of any 12ft Lattice Option is the same.

Toll Free 1-888-658-1658

Note: Your Garden in a Box may be different than the one shown in the steps of this manual, but the assembly of any 12ft Lattice Option is the same.

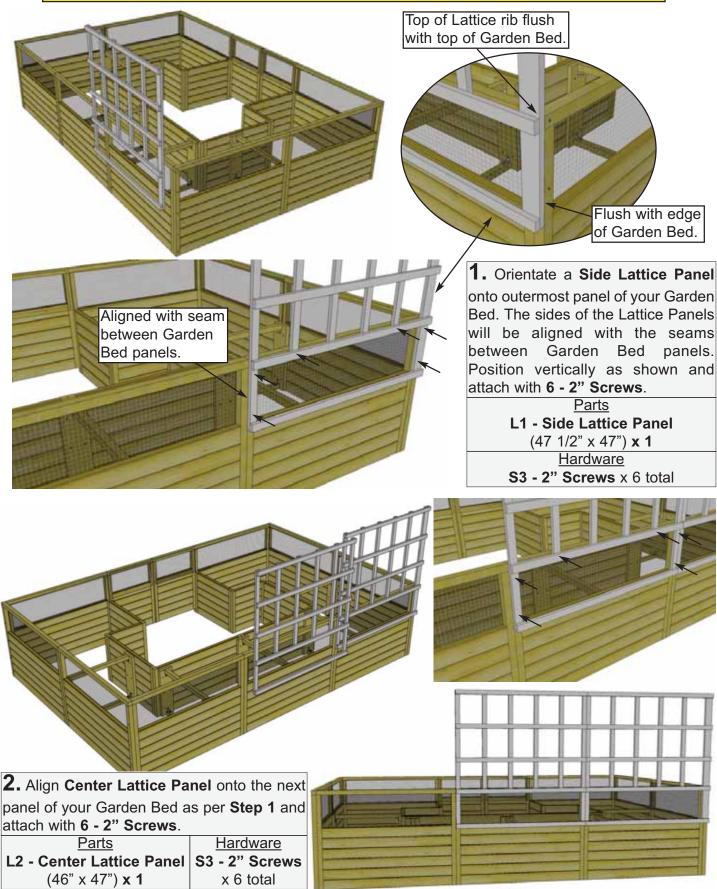

Toll Free 1-888-658-1658

www.outdoorlivingtoday.com

sales@outdoorlivingtoday.com

3. Align remaining **Side Lattice Panel** onto your Garden Bed as per **Step 1** and attach with **6 - 2**" **Screws**.

Parts L1 - Side Lattice Panel (47 1/2" x 47") x 1

Hardware S3 - 2" Screws x 6 total

Liew From below

4. Fit a **Horizontal Cleat** between the Lattice Panel and Garden Bed panel, centered just below the screen. Attach with **2 - 2 1/2**" **Screws**.

Parts (Steps 4 - 5) L3 - Horizontal Cleats (3/4" x 1 1/2" x 10") x 3 Hardware (Steps 4 - 5) S1 - 2 1/2" Screws x 6 total

Toll Free 1-888-658-1658

www.outdoorlivingtoday.com Page 4 sales@outdoorlivingtoday.com

5. Position and attach both remaining **Horizontal Cleats** as per **Step 4**.

6. Position **Vertical Braces** centered over seams between Lattice Panels. Attach with **5 - 2**" **Screws** per Brace, ensuring screws go through the intersecting sections of the Lattice crosshatch. Stagger screws side-to-side on Brace so Lattice Panels are secured together.

Parts L4 - Vertical Braces (3/4" x 3 1/2" x 47") x 2 <u>Hardware</u> S3 - 2" Screws x 10 total

Toll Free 1-888-658-1658

Flush with top

and bottom of

Lattice Panels.

Centered on seam.



Congratulations on assembling your 12ft Lattice Option for your Garden In A Box!

We hope your experience constructing your **12ft Lattice Option** for your Garden In A Box has been both positive and rewarding.

We value your feedback and would like to hear back from you on how well we are doing in the following areas:

- **1. Customer Service**
- 2. On Time Shipping
- 3. Motor Freight Delivery
- 4. Quality of Materials
- 5. Assembly Manual
- 6. Overall Satisfaction.

C

The materials contained in this Assembly Manual may be downloaded or copied provided that ALL copies retain the copyright and any other proprietary notices contained on the materials. No material may be modified, edited or taken out of context such that its use creates a false or misleading statement or impression as to the positions, statements or actions.

Please call, write or email us at:

Outdoor Living TodayCanadian AddressUnited9393 287th StreetP.O. EMaple Ridge, British ColumbiaSuma

IOday United States Address P.O. Box 96 Sumas, Washington USA 98295

L

Toll Line: 1.888.658.1658

Canada V2W 1L1

Fax: 1.604.462.5333

sales@outdoorlivingtoday.com

Page 6

L