


# ASSEMBLY & MAINTENANCE INSTRUCTIONS

for everdure by heston blumenthal Prep Kitchen

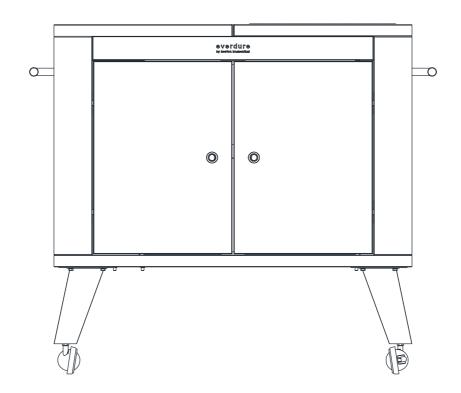

Model Number:

**HBPK** 

everdure by heston blumenthal

# **MAINTENANCE**

	Prep Kitchen		
НВКР	LENGTH (in)	WIDTH (in)	HEIGHT (in)
	40.2	21.7	35

# **CLEANING:**

Using a soft cloth thoroughly wipe down all surfaces with a mild detergent and warm water

**DO NOT** use scourers or harsh detergents

**DO NOT** put cutting boards or wooden lids in the dishwasher

**DO NOT** put seasoning boxes in a microwave or oven to reheat food

### STORAGE:

When the prep kitchen is not in use, it can be stored outdoors, but **MUST** be under cover and covered (preferably with a purpose made cover HBPKCOVERL) out of the weather ensuring the cutting surfaces are clean before storing away.

NOTE: These instructions are also available at www.everdurebyheston.com/international

### **PACKAGING:**

Remove all external packaging and remove the Prep Kitchen from the packaging before use

Removal all internal cartons and packaging from within the Prep Kitchen assembly

Recycle as per local government laws

**⚠ NOTE:** 2 people required for assembly

# Main Parts


(P1) Body $ imes$ 1	(P2) Handle ×2	(P3) Leg ×4	(P4) Cutting Board LU×1pc
(P5) Cutting Board LB $ imes$ 1	(P6) Cover×1	(P7) Top Panel×1	(P8) Lid ×2
	0		
(P9) Storage Tray × 3	(P10) Seasoning Box $ imes$ 4	(P11) Divider $ imes$ 1	(P12) Waste Bin $ imes$ 1
		**************************************	
(P13)/ knife holder×1pc			

# Hardware

(H1)/ Hex Bolt M8*20mm $ imes$ 4	(H2)/ Washer $\phi$ 8mm $ imes$ 4	(H3/) Spring Washer $\phi$ 8mm $ imes$ 4
(H5)/ Hex Bolt M6*12mm ×16	(H6)/ Washer $\phi$ 6mm $ imes$ 16	(H7)/ Spring Washer $\phi$ 6mm $ imes$ 16pcs
(H8)/Self-tapping screw × 3pcs	(H9)/ Bolt M6 ×3pcs	(H10)/ Nut M6 ×3pcs


# Step 01

/Rotate (P1) upside-down onto a clean and flat surface, ensuring the body is protected using a sheet or cardboard. Assemble (P3  $\times$  4) to the bottom plate using (H5  $\times$  16, H6  $\times$  16, H7  $\times$  16) Ensure the legs are angled outwards (see final image for reference) and rotate the body to the upright position.

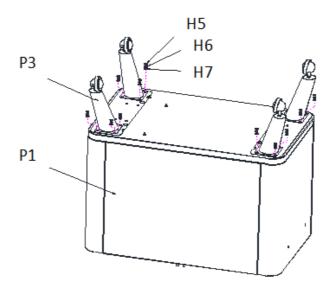


# Step 02

/Fix and fully tighten (P2  $\times$  2) onto main body and the side door using (H1  $\times$  4, H2  $\times$  4, H3  $\times$  4).

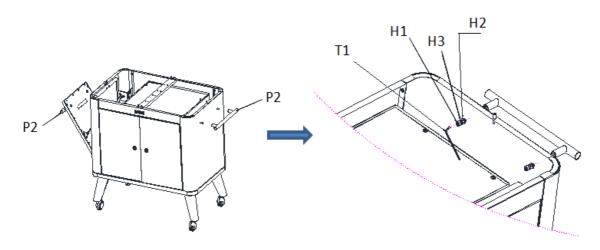

Step 03

/Slide (P11  $\times$  1) into (P12  $\times$  1)

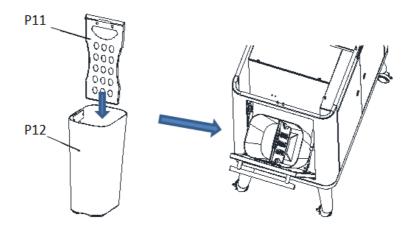


# Step 04

/ Assemble (P13  $\times$  1) to the bottom of the Cutting Board LU (P4  $\times$  1) using (H8  $\times$  3).


\*Note, please remove the plastic protection from all wooden boards before assembly.

There are 3 reserved small holes at the bottom of the Cutting Board LU, corresponding to the installation screws

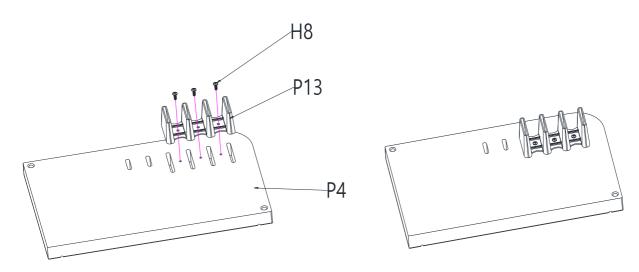

# Step 05

/Fix and fully tighten (H9  $\times$  3) onto both sides at the top of main body (H10  $\times$  3).

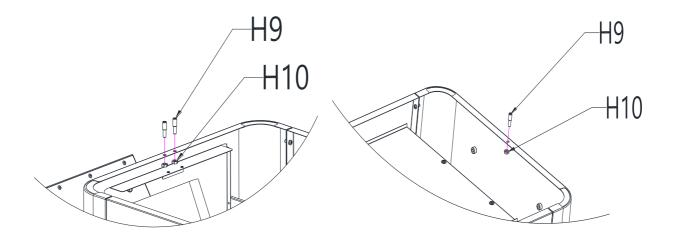

### Step 06

/Place (P4 x 1, P5 x 1, P6 x 1, P7 x 1, P8 x 2, P9 x 3, P10 x 4) into positon. See final image for reference \*Note, ignore this section if product arrived with parts pre-assembled

