

PRO / RUNNER TURF

ADD-ON WITH ACCESSORIES



YOU'LL NEED:

- Drill with 3/8" bit
- Utility Knife
- Tape Measure
- Scissors
- Black Marker



RUBBER TEE:

Get situated where you feel most comfortable hitting your Driver (traditionally this is about 8 to 8 1/2 feet back from the front of the net). Mark the location at the end of your Driver using the scissors. Use enough pressure on the scissors so that you can see a mark on the back of the turf.

Both the Pro and Runner turf come with 2 rubber tees. The putting cup & flag is an accessory which can be purchased from TheNetReturn.com

Lift the corner of the turf and find the mark you just created with your scissors.

Use the black marker to highlight the location.

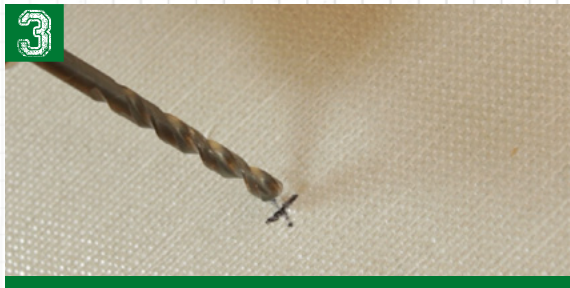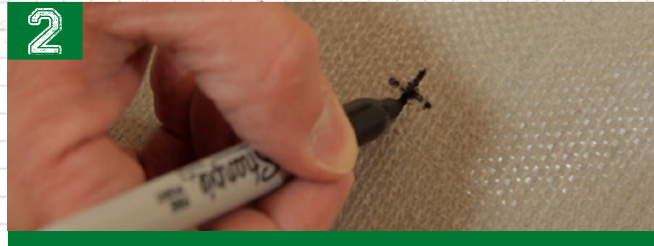

Using your drill with the 3/8" bit, drill the hole for your rubber tee starting from the back of the turf.

PUTTING CUP:

1 Cut out the putting cup template, which we will use to cut the hole for our putting cup.

The putting cup template is on pg. 6, tear out the page if necessary



Flip the turf upside down and place the cut-out where you want your hole. We recommend 4 to 5 inches from the edge of the turf opposite your rubber tee, centered on the turf. Use a tape measure to ensure accuracy.

CONTINUED



**PUTTING CUP
TEMPLATE**

(4.25 IN)

3

Use the black marker to trace the template, and with the utility knife carefully cut out the hole.

4

Trim off any residual nylon with your scissors, creating a clean hole.

5

Flip the turf over and start putting. Note: If you purchased a putting cup and flag (3 pieces), See steps 6-7 below).

6

The bottom piece of the cup snaps in underneath your turf.

7

The blowfish slides onto the bottom of the plastic flag pole, which connects into the hole in the center of the cup.

