


# Tailor & Taylor

## Hold Back Installation Instructions

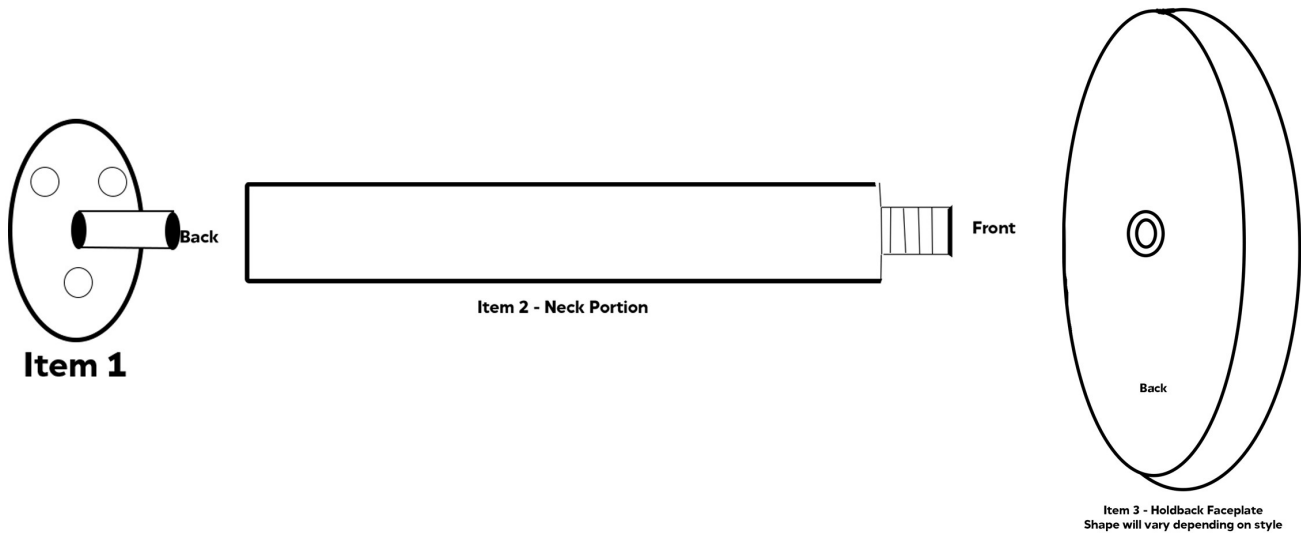

### Installation Instructions:

1. Using provided screws and plugs, affix item 1 onto the wall at the desired height. For your convenience, a sticker is included to assist with placement.
2. Once Item 1 is secured onto the wall, screw the back of Item 2 in a clockwise manner onto Item 1.
3. Finally, screw in a clockwise manner item 3 onto the front of Item 2.

**Note:** Shape of Item 3 will vary depending on style.