

Mural: Peel & Stick Wallpaper Installation Guide

After receiving the wallpaper, take it out from the original packaging and release the roll – it shouldn't be very tightly rolled up. **It has to be in this state for at least 48 hours.** During this time, the wallpaper will adapt to the new environmental and climatic conditions. After that your wallpaper will be ready for installation.


- Too much moisture might shorten the durability time of the wallpaper.
- If the wallpaper needs to be removed – it's easy to do! Start from one corner and pull. When removing the wallpaper from the painted walls, it can be heated with a blow dryer to reduce the risk that the wallpaper will peel off along with the wall paint.

1. Step - Get Ready

Installation is best done **together** with someone – it's easier and more fun that way. Make sure you have the required tools:

You will need:




1. A spirit level and a pencil;
2. A squeegee;
3. A brush, sandpaper and a metal spatula to remove dust and imperfections on the wall;
4. A step stool or step ladder.

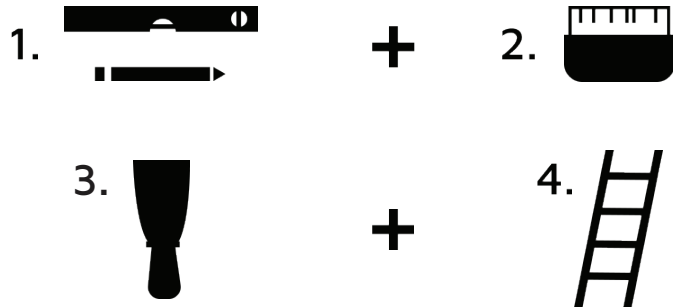

2. Step - Preparation

Prepare for the installation:


1. Make sure you have the correct amount of wallpaper sheets. Their designs and colors have to match. Serial numbers on sheets have to form a sequence;
2. Remove electrical outlets and skirting boards;
3. **Clear the wall from old pieces of wallpaper and dust.** If you use a damp sponge, allow the wall to dry;
4. Don't use strong chemical cleaning products, otherwise the wallpaper may not stick well to the wall;
5. If the wall has imperfections, it is **recommended** to fill and polish it, then prime or paint it. (use a light color if possible, especially, if you bought white or light wallpaper);
6. **Freshly painted and primed walls must dry for 2-7 days (depends on the type of paint) before installing the wallpaper.**
7. If you have used a damp cloth to clean the surface, allow it to dry first before sticking on the wallpaper.
8. If the surface is made of non-standard material (wood, tiles), contact us before applying!

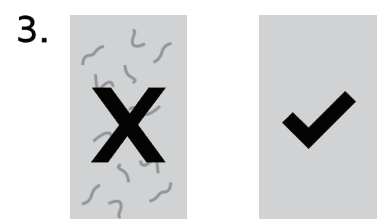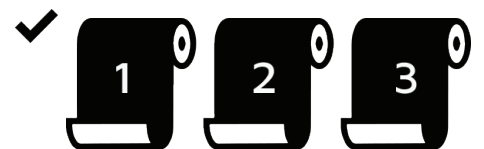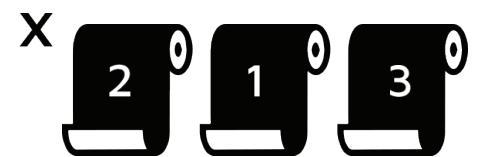

3.Step - Installation

Apply the wallpaper:

1. Before applying, use the spirit level to draw a straight vertical line on the wall where you want to start applying the wallpaper;
2. There is a serial number on every sheet for easier sequencing;
3. Avoid dragging the wallpaper too hard. If you apply stretched wallpaper, after a while, it will shrink back and look uneven.
4. Starting from the top of the sheet, peel off ~ 12 inches (30 cm) long part of protective layer from the backside of the wallpaper;
5. **Remember** to stick the first sheet exactly to the drawn line. Every next sheet will depend on the accuracy of the first one;
6. After sticking the top of the sheet, start to smooth out the surface of the wallpaper, going from top to bottom. Straighten out the air bubbles from the center of the wallpaper to the edges using a squeegee;
7. Keep removing the protective layer (direction top to bottom). At the same time, keep pressing the surface of the wallpaper to the wall and smoothing it out;
8. Let the wallpaper apply itself evenly. However, if you stick the wallpaper incorrectly, it is possible to do small adjustments by peeling a small part off;
9. When sticking further sheets:
 - the edges of the wallpaper shouldn't overlap; they have to be very close to each other;
 - when the top of the wallpaper is attached to the wall, make sure that the pattern of the wallpaper matches the top and bottom of the previous sheet.
10. After 24h, repeat the smoothing process, and that's all!

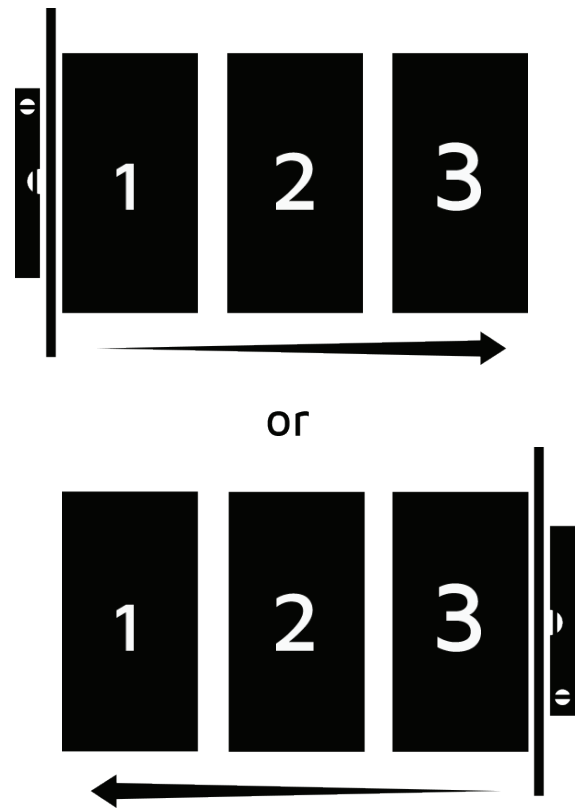

4.Step - Finalization

Finish the work and enjoy the new design!