

Peel & Stick Wallpaper Installation guide

After receiving the wallpaper, take it out from the original packaging, remove the sticker, and release the roll a bit – it shouldn't be very tightly rolled up. **It has to be in this state for at least 48 hours.** During this time, the wallpaper will adapt to new environmental and climatic conditions. After that your wallpaper will be ready for installation.


- Too much moisture might reduce the lifespan of the wallpaper.
- If the wallpaper needs to be removed – it's easy to do! Start from one corner and pull. When removing the wallpaper from the painted walls, it can be heated with a blow dryer to reduce the risk that the wallpaper will peel off along with the wall paint.
- Our company cannot be held responsible for damaged surfaces or removal difficulties, as the wallpaper has been successfully tested.

1.Step - Get Ready

Installation is best done **together** with someone – it's easier and more fun that way. Make sure you have the required tools:

You will need:


1. A spirit level and a pencil;
2. A squeegee;
3. A brush, sandpaper, or a metal spatula to remove dirt from the wall;
4. A step stool or step ladder.

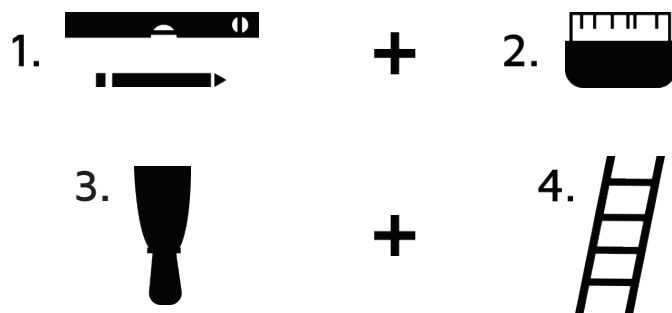

2.Step - Preparation

Prepare for the installation:


1. Make sure you have the correct amount of wallpaper rolls. Their designs and colors have to match;
2. Remove electrical outlets and skirting boards;
3. Clear the wall from old wallpapers, dust and dirt;
4. Don't use strong chemical cleaning products, otherwise the wallpaper may not stick well to the wall;
5. If the wall is rugged, it is **recommended** to fill and polish it, then prime or paint it. (use a light color if possible, especially, if you bought white or light wallpaper);
6. **Freshly painted walls must dry for 2-7 days (depends on the type of paint) before installing the wallpaper.**

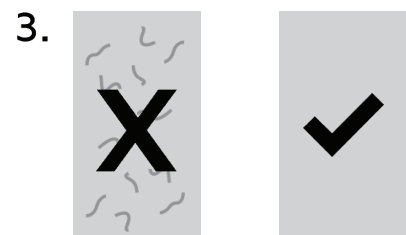

3.Step - Installation

Apply the wallpaper:

1. Before applying, use the spirit level to draw a straight vertical line on the wall where you want to start applying the wallpaper;
 2. Starting from the top of the sheet, peel off ~ 12 inches (30 cm) long part of protective layer from the backside of the wallpaper;
 3. Avoid dragging the wallpaper too hard. If you glue stretched wallpaper, after a while, it will shrink back and look uneven.
 4. **Remember** to stick the first sheet exactly to the line drawn. Every next sheet will depend on the accuracy of the first one;
 5. After sticking the top of the sheet, start to smooth out the surface of the wallpaper, going from top to bottom. Straighten out the air bubbles from the center of the wallpaper to the edges using a squeegee;
 6. Keep removing the protective layer (direction top to bottom). At the same time, keep pressing the surface of the wallpaper to the wall and smoothing it out;
 7. Let the wallpaper apply itself evenly.
- However, if you stick the wallpaper incorrectly, it is possible to do small adjustments by peeling a small part off;
8. When sticking further sheets, the edges of the wallpaper shouldn't overlap; they have to be very close to each other;
 9. After 24h, repeat the smoothing process, and that's all!

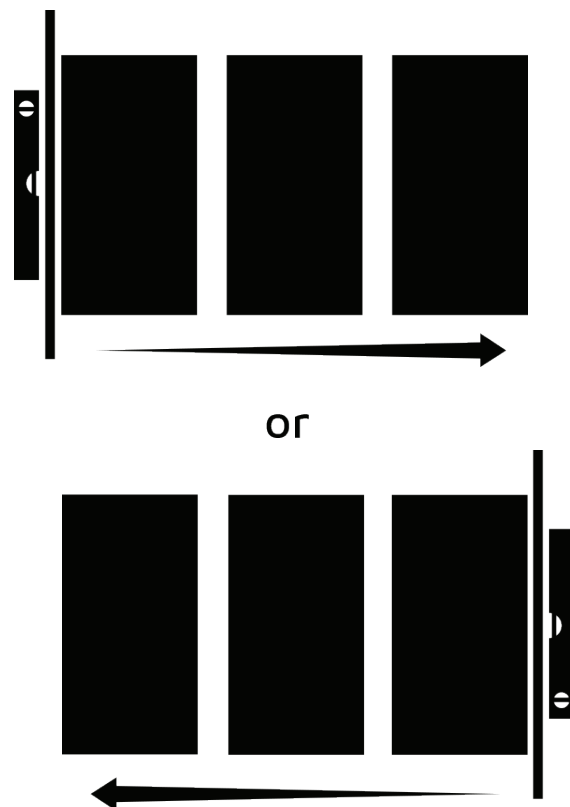

4.Step - Finalization

Finish the work and enjoy the new design!