

Traditional Wallpaper installation guide


After receiving the wallpaper, take it out from the original packaging, remove the sticker, and release the roll a bit - it shouldn't be very tightly rolled up. **It has to be in this state for at least 48 hours.** During this time, the wallpaper will adapt to new environmental and climatic conditions. After that your wallpaper will be ready for installation.

1.Step - Get Ready

Installation is best done **together** with someone – it's easier and more fun that way. Make sure you have the required tools:

You will need:




1. Flizelin wallpaper glue;
2. Paintbrush or roller for glue application;
3. Slightly moist sponge for removal of glue from wallpaper edges;
4. A brush, sandpaper, or a metal spatula to remove dirt from the wall;
5. A level and pencil;
6. Squeegee;
7. A step stool or step ladder.

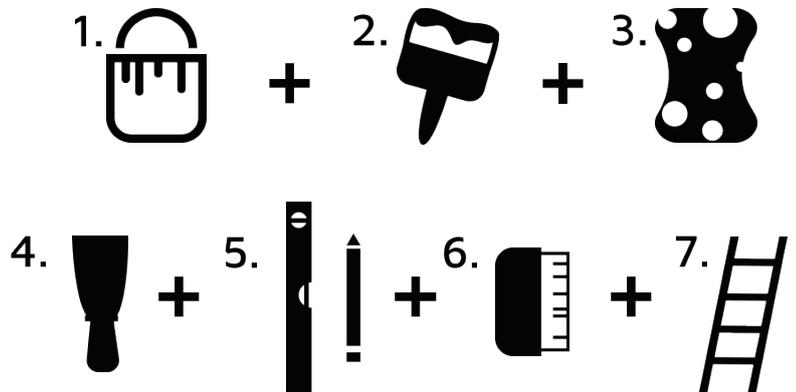

2.Step - Preparation

Prepare for the installation.


1. Make sure you have the correct amount of wallpaper rolls. Their designs and colors have to match. Serial numbers on sheets have to form a sequence;
2. Remove electrical outlets and skirting boards;
3. Clear the wall from old wallpapers, dust and dirt;
4. Don't use strong chemical cleaning products, otherwise the wallpaper may not stick well to the wall;
5. If the wall is rugged, it is **recommended** to fill and polish it, then prime or paint it. (use a light color if possible, especially, if you bought white or light wallpaper);
6. **Freshly painted walls must dry for 2-7 days (depends on the type of paint) before installing the wallpaper.**

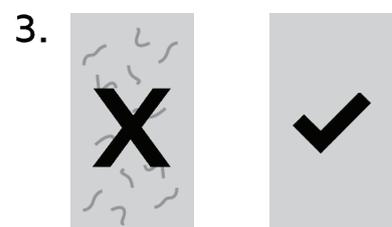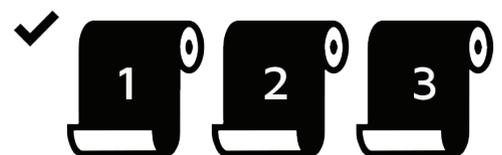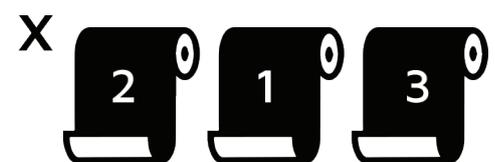

3.Step - Installation

Apply the wallpaper.

1. Before applying, use the spirit level to draw a straight vertical line on the wall where you want to start applying the wallpaper;
2. There is a serial number on every sheet for easier sequencing;
3. Using a paintbrush or roller, stain the wall with glue;
4. **Remember** to stick the first sheet exactly to the line drawn. Every next sheet will depend on the accuracy of the first one;
5. Attach the wallpaper to the wall. Straighten out the air bubbles from the center of the wallpaper to the edges using a squeegee;
6. When sticking further sheets, the edges of the wallpaper shouldn't overlap; they have to be very close to each other;
7. Each time after attaching a new sheet, use a sponge to clean up any glue that spills on the edges of the wallpaper;
8. Repeat these steps, until you are done!

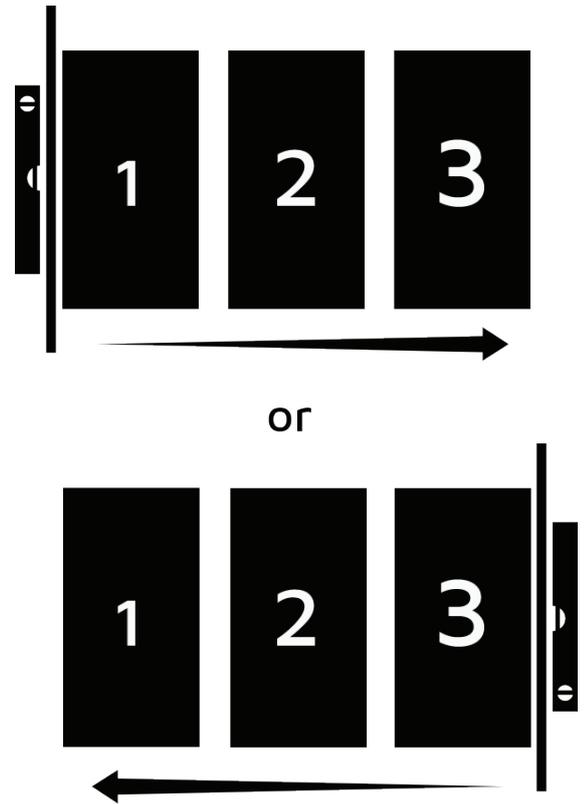

4.Step - Finalization

Finish the work and enjoy the new design!