Mural: Traditional Wallpaper installation Guide

After receiving the wallpaper, take it out from the original packaging and release the roll – it shouldn't be very tightly rolled up. **It has to be in this state for at least 48 hours.** During this time, the wallpaper will adapt to the new environmental and climatic conditions. After that your wallpaper will be ready for installation.

1.Step - Get Ready


Installation is best done **together** with someone – it's easier and more fun that way. Make sure you have the required tools:

You will need:

- 1. Wallpaper glue;
- 2. Paintbrush or roller for glue application;
- 3. Slightly moist sponge for removal of
- glue from wallpaper edges;

4. A brush, sandpaper and a metal spatula to remove dust and imperfections on the wall;

- 5. A level and pencil;
- 6. A step stool or step ladder.

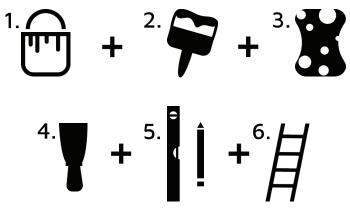

2.Step - Preparation

Prepare for the installation.

 Make sure you have the correct amount of wallpaper sheets. Their designs and colors have to match. Serial numbers on sheets have to form a sequence;
 Remove electrical outlets and skirting boards;


3. Clear the wall from old pieces of wallpaper and dust. If you use a damp sponge, allow the wall to dry;


4. Don't use strong chemical cleaning products, otherwise the wallpaper may not stick well to the wall;

5. If the wall has imperfections, it is **recommended** to fill and polish it, then prime or paint it. (use a light color if possible, especially, if you bought white or light wallpaper);

6. Freshly painted and primed walls must dry for 2-7 days (depends on the type of paint) before installing the wallpaper.





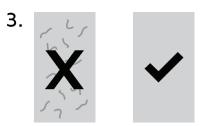

3.Step - Installation

Apply the wallpaper.

1. Before applying, use the spirit level to draw a straight vertical line on the wall where you want to start applying the wallpaper;

2. There is a serial number on every sheet for easier sequencing;

3. Using a paintbrush or roller, stain the wall with glue;
4. Remember to stick the first sheet exactly to the drawn line. Every next sheet will depend on the accuracy of the first one;

5. Attach the wallpaper to the wall. Straighten out the air bubbles from the center of the wallpaper to the edges;

6. When sticking further sheets, the edges of the wallpaper shouldn't overlap, they have to be very close to each other;

7. Each time after attaching a new sheet, use a sponge to clean up any glue that spills on the edges of the wallpaper;

8. Repeat these steps, until you are done!

4.Step - Finalization

Finish the work and enjoy the new design!

