MODEL : BBT 6107.13 A2 (W1000 x L1930mm)

ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed. 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread. 3. Keep all hardware parts out of reach of children.


NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed : Screwdriver (not provider).	
STEP 1	ST Lo as
	(
B C C C C C C C C C C C C C C C C C C C	ST

PART LIST			HARDWARE LIST				
ITEM	DESCRIPTION	QTY	ITEM	DESCRIPTION		QTY	
Δ	HEADBOARD	1 PC	1	JCBB BOLT M8 x 30mm	ananac-()	8 PCS	
A			2	BED SLAT SIDE FITTER		24 PCS	
B	FOOTBOARD	1 PC	3	WOOD SCREW M3.5 x 16mm		4 PCS	
С	SIDE RAIL	2 PCS	4	PVC BLACK WASHER		4 PCS	
D	CENTER SUPPORT	1 PC	5	M5 ALLEN KEY (BALL SHAPE)	L	1 PC	
E	BED SLAT	24 PCS					
F	BED LEG	4 PCS					

STEP 2

posely fit bolt (1) into Headboard (A) & Footboard (B) picture shown.

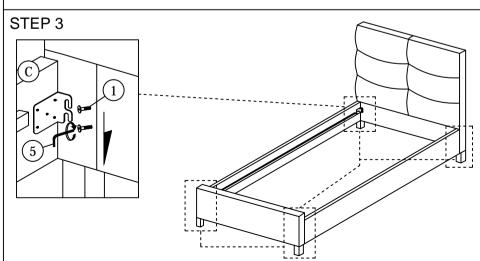

ASSEMBLY INSTRUCTIONS

STEP 4 STEP 5 STEP 4.2 E Palm (2)E STEP 4.1 \mathbf{C} Ď 3 * When moving the bed position, the center support legs must be adjust to be straight to avoid any broken problem.

PAGE 2 OF 2